

daxa

TECHNOLOGIES

P700 *Pro*

Pico projector



User Guide

Caution!

WARNING: Please use this product as instructed. Misuse may cause injury or death.

DO NOT use while driving.

DO NOT expose to water or wet surfaces. Electric shock may occur.

DO NOT expose the projected LED image to your eyes or the eyes of others.

DO NOT block or restrict airflow from ventilation holes as this may cause the projector to overheat.

Keep the projector and charger away from any heat sources.

Caution for Headphone Use

- Prolonged use at high volume may impair your hearing.
- High volume during walking or driving may cause distractions and result in injury or death.



Table of Contents

Chapter 1: P700 Pro at a Glance

- P700 Pro Introduction ••••• 1
- Remote & Keypad ••••• 2
- Accessories ••••• 3

Chapter 2: Getting Started ••••• 4

- Focus Adjustment / Throw Distance • 5
- External Inputs/Outputs ••••• 6
- Navigating the Main Menu ••••• 7
- Connecting to a Computer HDMI •• 9
- Playing 3D Through HDMI ••••• 12
- Connecting to a Computer VGA •• 13
- Connecting to Composite Video •• 15
- Loading External Content ••••• 17
- Video Player Menu ••••• 20
- Playing 3D Videos ••••• 24
- Viewing Pictures ••••• 27
- Viewing 3D Pictures ••••• 31

- Viewing Productivity Docs ••••• 32
- Smartphone Mirroring ••••• 37
- Connecting to Wi-Fi ••••• 40
- Streaming Applications ••••• 42
- Connecting to Bluetooth ••••• 44

Chapter 3: Settings Menu ••••• 47

- Application Manager ••••• 48
- Bluetooth & Networks ••••• 49
- System Settings ••••• 50
- System Update & Language •• 51
- Projector Settings ••••• 52
- About ••••• 53
- Other Applications ••••• 54
- Keystone ••••• 55


Chapter 4: Technical Details

- Troubleshooting ••••• 57
- Specifications ••••• 59
- Notes ••••• 60


P700 Pro at a Glance

Chapter 1

Main Unit Front/Back

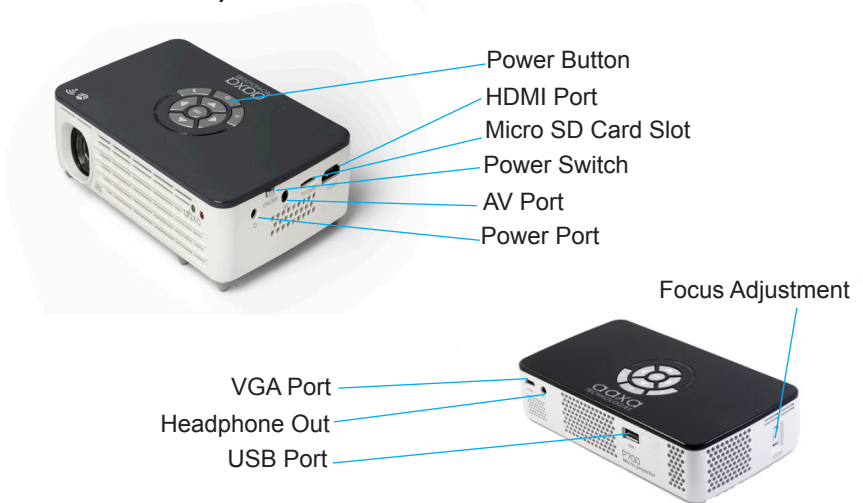


Remote & Keypad

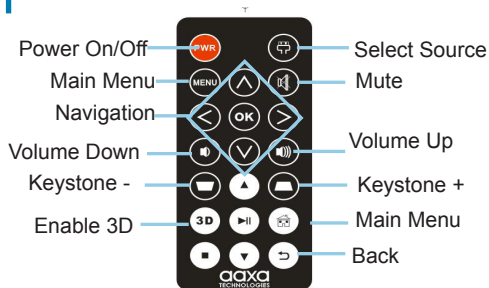

Remote

Both the keypad and remote can be used to navigate through the menus. The Main Menu Navigation on the remote functions exactly the same as the directional pad on the P700 Pro unit. The remote control has additional functions inaccessible by the onboard keypad.

NOTICE: Pressing power on the remote will only put the projector in **STANDBY** mode. Toggle the "ON/OFF" switch on the side of the projector to fully turn the projector off.

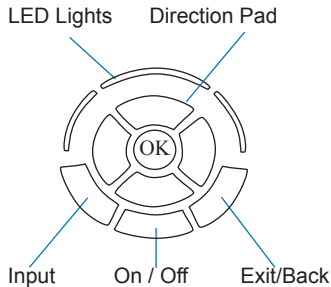


Accessories




Tripod




Remote

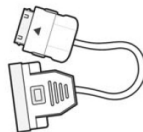

VGA Cable

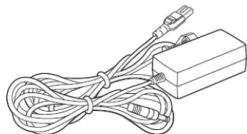

Power Adapter

 


AV Cable


**Under various circumstances, the actual accessories may be different from those shown in the pictures above.*

Additional accessories are available for purchase at www.aaxatech.com

Powering ON the projector

1. Connect the power cord to the P700 Pro.
2. Connect the other end of the power cord into the wall power source.
3. Toggle the On / Off switch on the side of the projector to the “ON” position --the projector should automatically turn on.
4. If the projector does not automatically turn on with the “Power Switch” toggled to the “ON” position, press the “ON/OFF POWER”  button on the keypad and hold for 2-3 seconds to start the projector.

Standby Mode

1. To transition to “STANDBY” mode, press the power button  twice on the keypad or the remote control.
2. The optical engine should power off and the fan should stop spinning. The projector is now in “STANDBY” mode and can be turned on using the remote control.

***Note: Standby mode will still consume a small amount of power.**


Powering OFF the projector

1. To turn off the projector, toggle the “Power Switch” to the “OFF” position. This will fully turn off the projector.

Focus Adjustment / Throw Distance


Focus Adjustment

- Spin the focus wheel up or down until the image becomes clear.

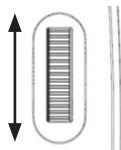

Throw Distance Chart

Throw Distance Units: Inches	Diagonal Size Units: Inches
20	19
30	29
40	38
50	48
60	57
70	67
80	76
90	86

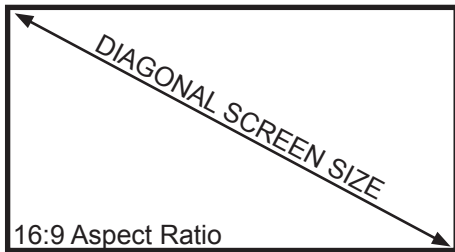


Throw Ratio 1.2

Projection Angle: 100% Offset

*minimum throw distance: 20 inches

External Inputs and Outputs

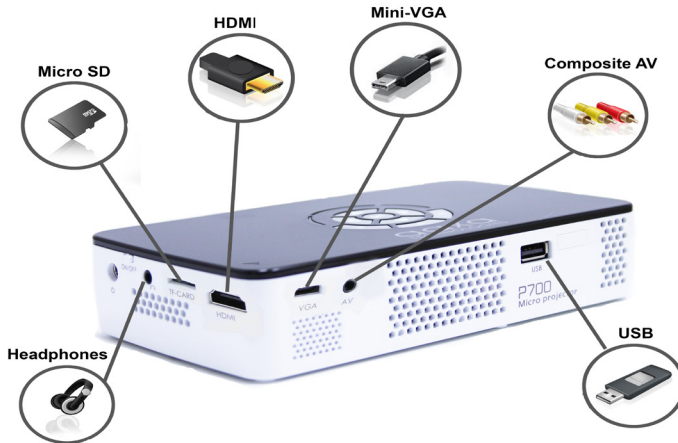

Navigating the Main Menu



Main Menu

The Main Menu allows access to all the features of the P700 Pro.

Note: While the Keypad and Remote Control are usable to access the basic features of the P700 Pro, it is recommended to use a mouse, either USB or Bluetooth.



Inputs & Browser

- **HDMI** - Brings up connection via HDMI
- **PC-VGA** - Brings up connection via VGA
- **Video-RCA** - Brings up connection via A/V
- **Browser** - Brings up internet browser

Main Menu Features

- **Streaming** - Stream movies or videos from YouTube, Netflix, Vevo, and more
- **Playback** - View files from external devices such as microSD card and USB
- **Productivity** - Brings up E-mail Client, Office Viewer, Calculator, Calendar, Gallery, and Smartphone Mirroring
- **Settings** - Brings up Application Manager, Network Settings, Bluetooth Settings, Language Settings, System Update and Projector Settings

Navigating the Main Menu Cont.

Pop-Up Menu:

The Pop-Up Menu may be accessed with a mouse by clicking the “up” arrow at the bottom of the screen and may be closed by clicking the “down” arrow.

The Pop-Up Menu allows the user to access Main Menu, Open Applications, Adjust Volume and 3D Capabilities.



“UP” arrow to bring up Pop-Up Menu

Pop-Up Menu

Connecting to a Computer via HDMI

Step 1:

Connect one end of the HDMI Cable to your computer's HDMI port.



Step 2:

Connect the other end of the HDMI Cable to your P700 Pro's HDMI port.



Step 3:

In the Main Menu, select the "Inputs" icon and then the "HDMI".



Select "HDMI" icon

Connecting to a Computer Cont.

Step 4:

Enabling HDMI output on your Computer – To enable HDMI output on your computer most computers require “turning on” the video output feature. Each computer is different. Please consult your owner’s manual for instructions to enable HDMI output. Below are standard instructions for a Windows 10 computer – not all systems are the same.


Step 5:



Press Windows+P to toggle through display settings. Select either “Duplicate” or “Extend” depending on your viewing option.

**NOTE: different operating systems may differ*

Step 6:

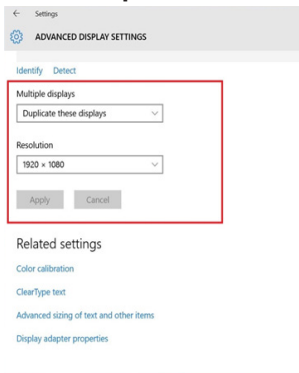

1. Right click on computer desktop and select “Screen Resolution”
2. Display Properties window will pop up and select the Advance Display Settings
3. Please make sure the Multiple displays has the “Duplicate these displays” option selected and the Resolution is 1920 x 1080 or below as pictured in the red box.
4. If the image is blurry or the text is not legible, adjust the screen resolution.

Connecting to HDMI Video Source

Step 1:

In the Main Menu



Select "HDMI" icon

Connectivity to Multimedia Devices

The P700 Pro can connect to many media devices including: iPod, iPhone, iPad, DVD players, smart phones, cameras, video game consoles and other peripherals with ease.

Step 2:

Turn on your multimedia device.

The projector should automatically detect a Blu-Ray player or HDMI video source as 1920x1080p resolution. This resolution includes "overscan" which means that the edges of the display will be cutoff. You may adjust accordingly to your devices best output resolution.

* Overscan Table

Resolution	Overscan
1920x1080	X
1366x768	
1360x768	
1280x768	
1280x720	X
1024x600	
1024*768	
800x600	

**Some smart phones require video out capabilities to be displayed with the P700 Pro. Check with your phone manufacturer.*

Playing 3D through HDMI Video

3D Video can be played through the 3D compliant HDMI port. First connect your 3D output device (for example Blu-Ray player) to the projector.


Step 1:

In the Main Menu



Select "HDMI" option

3D Menu

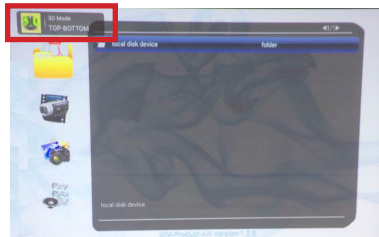

Step 2:

To Enable 3D mode there are two options:

- (1) Press the "3D" button on the remote control.
- (2) Pull up the Projector control menu by clicking on the "up" arrow on the bottom of the screen (requires mouse). Then click the 3D button and select the 3D content.

Connecting to a Computer via VGA

Step 1:

Connect one end of the VGA Cable to your computer's VGA Port.



Step 2:

Connect the other end of the VGA Cable to your P700 Pro's VGA port.



Step 3:

In the Main Menu Select the "PC-VGA" Icon.



Select "VGA" icon

Connecting to a Computer Cont.

Step 4:

Enabling VGA output on your Computer – To enable VGA output on your computer most computers require “turning on” the video output feature. Each computer is different. Please consult your owner’s manual for instructions to enable VGA output. Below are standard instructions for a Windows 10 computer – not all systems are the same.


Step 5:



Press Windows+P to toggle through display settings. Select either “Duplicate” or “Extend” depending on your viewing option.

**NOTE: different operating systems may differ*

Step 6:

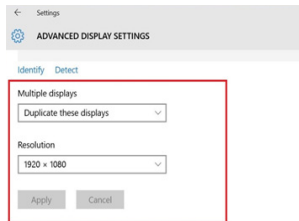

Related settings

[Color calibration](#)

[ClearType text](#)

[Advanced sizing of text and other items](#)

[Display adapter properties](#)

1. Right click on computer desktop and select “Screen Resolution”
2. Display Properties window will pop up and select the Advance Display Settings
3. Please make sure the Multiple displays has the “Duplicate these displays” option selected and the Resolution is 1920 x 1080 or below as pictured in the red box.
4. If the image is blurry or the text is not legible, adjust the screen resolution.

Connecting to Composite Video

Step 1:

Connect the 3.5mm Composite A/V Cable to the back of the P700 Pro.



Step 2:

Connect the composite end of the AV Cable (Red, White, Yellow) to your own male AV cable.



Connecting to Composite Video Cont.

Step 3:

In the Main Menu



Select "Video-RCA" Icon

Step 4:

Turn on your multimedia device.

**Some smartphones require video out capabilities to be displayed with the P700 Pro. Check with your phone manufacturer for details.*

Loading External Content

The P700 Pro can read files directly from both a Micro SD Card and USB Drive.

Supported file types include:
MP3 / WMA / OGG / WAV / JPG
AVI / MKV / BMP / GIF / XLS
PPT / DOC / PDF / TXT



(up to 32 GB)



(up to 32 GB)

Loading External Content Cont.

How to insert your Micro SD Card

- Slide in your microSD card into the microSD card slot on the side of the P700 Pro (as shown in picture).
- Gently slide the SD card until it clicks into place.

How to insert your USB Drive

- Slide your USB Drive into the USB port on the back of the P700 Pro (as shown in picture)
- Gently slide the drive until it cannot go in any further.

***Review the “Specifications” section of this manual to read about the supported file formats.**




(up to 32 GB)



(up to 32 GB)

Loading External Content Cont.

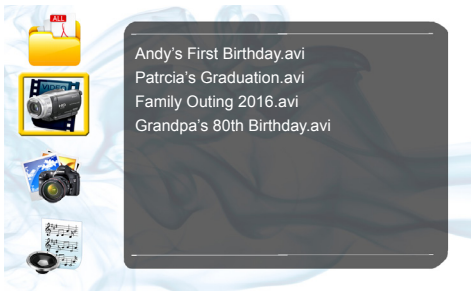

Searching for a Specific File Type?

- Clicking the icons on the left hand side of the “Playback” Menu will automatically search for supported file formats (Videos, Pictures, and Music).
- Highlight the desired file you would like to open and click “OK” or double click (the mouse - externally connected) to access the file.

Playback Menu

- Once your microSD Card or USB Drive is inserted into the projector, the microSD Card or USB Drive Storage Menu will load automatically. Video can be played by clicking the video and selecting the “Video Player”.
- The Playback Menu may also be accessed from the Main Menu

Note: Office, PDF and productivity files need to be accessed through the Document Viewer App (Found in the Productivity Application, page 27).



Return: Brings you back to the main menu

Video Player Menu


Opening a file:

- Select the “Playback” icon (Fig. 2.1)
- To Search for Videos highlight the video-camera icon on the left side of the “Streaming” submenu (Fig. 2.2). Otherwise scroll through the files by using the up/down key and highlight desired file.

Fig. 2.1



Fig. 2.2

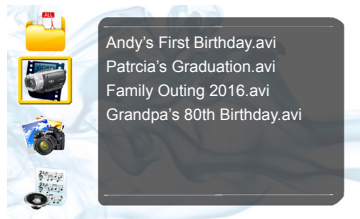

The P700 Pro will show all folders and files you have on your USB or MicroSD drive. Use the navigation buttons to select folders or files.

Video Player Menu

While Playing Videos

While playing videos the volume is adjustable. To adjust volume, press the volume buttons on the remote or access the submenu and adjust through the volume icon. Further controls are available in the video player submenu - which is accessed through the “OK” button.



 
Jump 5 secs backward



Jump 5 secs forward

OK Enter Video Player Submenu

- To open/hide the video playback menu, use the “OK” and “Back” Buttons on the projector.




Video Player Sub-Menu

Playing Videos


Video Submenu: While the video is playing, bring up the “submenu” by clicking “OK” or double clicking on the video. The video submenu allows the following functions

 - i. Next / Previous Video – Play the next / previous video
- ii. Fast Forward / Rewind
- iii. View Playlist
- iv. Video Information
- v. Video Configuration
 1. 3D Setting
 2. Subtitles
 3. Breakpoint Play
 4. Video Track
- vi. Repeat
- vii. Volume





Video Player Menu

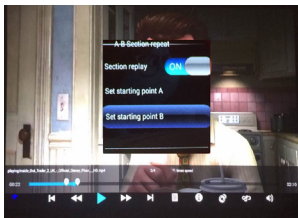How do I loop a video?



1. On the “Submenu”, click the replay icon
2. An “A-B Section Repeat” screen will pop up
3. Turn “On” the Section Replay
4. Set the starting point by clicking “Set starting point A”
5. Set the ending point by clicking “Set starting point B”
6. The video will then loop between point A and B

How do I turn on the subtitles (if available)?

1. Press “OK” when the video is playing to bring up the submenu
2. Navigate using either remote or onboard buttons to the video configuration 
3. Select it and press on “Video Subtitles”
4. Then choose between “Close”, “Inner”, and “External” 

** Inner: the subtitles are hardcoded into video*

** External: a separate subtitle file which links to the video is within the USB drive or SD Card.*

Playing 3D Videos


3D videos are videos compatible with Active Shutter 3D devices. These videos are typically labelled “3D”. 3D videos are typically played in right/left or top/bottom content, so on a non-3D device the video will appear to be split in half. 3D capable devices will then combine in the video for true 3D mode.



How to Play 3D Videos


Playing 3D Videos

To play a 3D video, load the 3D video through the “Playback” submenu. As the video begins to play, select the “Source” button on the keypad or remote control to convert the content into 3D mode. The video will now appear “fuzzy”. This means the video is now in 3D mode. Put on the Active 3D glasses and they should automatically sync to the content.

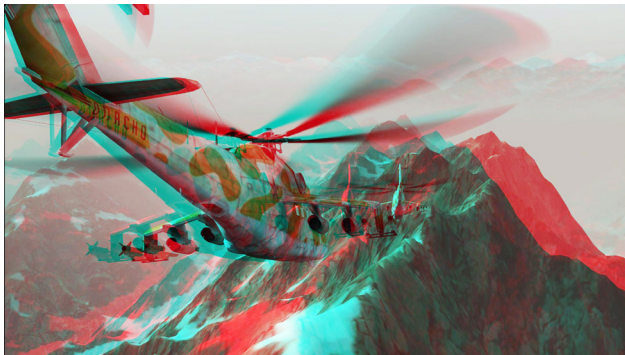

How to Play 3D Videos Cont.

Activating 3D Mode

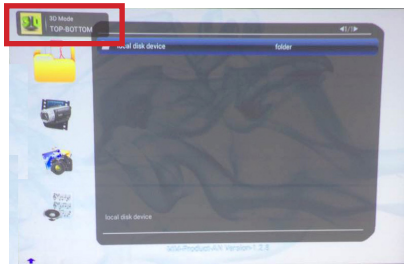

After selecting the “Source” button, you can choose either “left or right format” or “up or down format” depending on how your 3D content looks.

**Active shutter glasses are glasses compatible with Active Shutter TVs. They are available for purchase online and through the P700 Pro “Accessories” section.*

Viewing Pictures



- To view pictures, access the content via the “Playback” submenu (See section 4).
- To sort for Pictures, highlight the Camera/Photo icon on the left. Otherwise, scroll through the files by using the up/down key and highlight the desired file.
- While the Picture is playing, bring up the “submenu” by clicking “OK” or double clicking on the picture.

Photo Sub-Menu

Viewing Pictures:

The Photo Sub-Menu can be accessed by pressing “OK” during picture slide-show playback. To exit the Photo Sub-Menu press the “Back” button. To navigate the playback menu, use the directional buttons on the navigation pad or remote to highlight the option you wish to choose.



- ◀ Move selection left
- ▼ Move to the next picture
- ▶ Move selection right
- ▲ Move to the previous picture

 


Photo Sub-Menu Cont.

Viewing Pictures:

After selecting a picture, bring up the photo submenu by clicking on “OK” or double clicking the picture. The photo submenu allows the following functions:

- i. Next / Previous picture
- ii. Play / Stop
- iii. Zoom in / Zoom out
- iv. Rotate counter clockwise / Rotate clockwise
- v. Picture information
- vi. Set picture as background
- vii. 3D mode

 


Photo Slideshow FAQ

How do I play a slideshow?


1. Click on the Playback menu.
2. Navigate to the folder that contains the pictures you wish to view in the slideshow.
3. Confirm selection of the first picture.
4. Press “Play” in the photo menu.
5. Slideshow will now play.

How do I manually control the slideshow?

1. After selecting the photo you wish to be displayed, you can press “Play” to start the slideshow (as outlined in the previous FAQ).
2. To manually control the slideshow, you must stop the slideshow with the “Stop” button.
3. You may use either the controls on your remote or on top of the projector itself to flip through the pictures in the current playlist.
4. You can change the slideshow duration in the Settings Menu (Main Menu -> Settings -> Picture).

Viewing 3D Pictures

- To view pictures, select a picture via the “Playback” submenu.
- While the Picture is playing, click the “Source” button and turn on the 3D mode depending on which format you have.

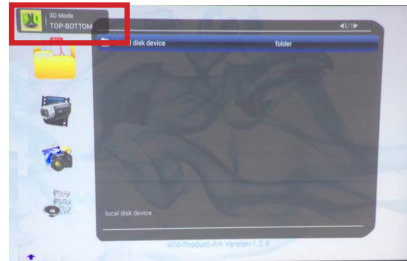

Viewing Productivity Documents

Microsoft Office and Adobe PDF Documents

- Microsoft Office and Adobe PDF Documents can be viewed with the document viewer.
- To access the document viewer, select “Productivity” from the Main Menu.



Main Menu Screen

Viewing Productivity Documents Cont.

Choosing Documents to View

- After selecting “Productivity” from the Main Menu, select “Office Viewer” to view documents.
- In the Office Viewer application, select “Folders” or “Cloud Storage” to view the files you wish to see.



Productivity Screen


Office Viewer Application

- Documents from the microSD Card and USB Drive may be viewed
- Documents from Dropbox with accounts connected may be viewed.
- Supported file formats include *.DOC, *.XLS, *.PPT, *.PDF.


Some file versions may not be compatible and file names must be alphanumeric only.

Viewing Productivity Documents Cont.

Step 1:
Open "Office Viewer"

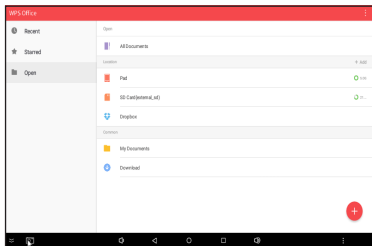


Step 2:
Select Source

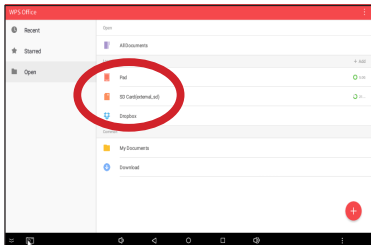

Viewing Productivity Documents Cont.

Step 3:


Highlight the Productivity File and click
“OK”

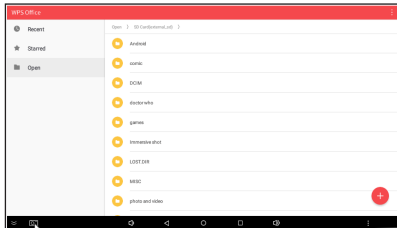

Step 4:

The file should display automatically

Note: For a more comprehensive user guide please visit our FAQ section or search online for Kingsoft WPS Office Viewer user guide

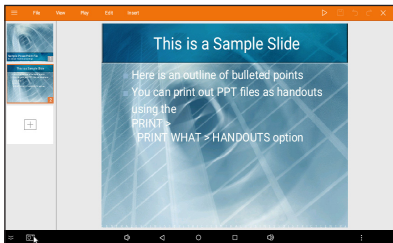

Need help with the document viewer? Please e-mail us at pro_support@aaxatech.com

Viewing Productivity Documents

E-mail Client

The onboard e-mail client allows users to save their email account and view emails. Typical configuration settings can usually be found through your web-hosts FAQ section.

Calculator

A basic function calculator (mouse is required to operate)



Smartphone Mirroring

The P700 Pro employs a “HappyCast” smartphone mirroring system that is compatible with both Apple Airplay as well as Android systems.

Mirroring with an iPhone or Apple Device:

- Select the “Productivity” icon (Fig. 2.3)
- Select the “Mirroring” option (Fig. 2.4)
- The application will open and next step will be to activate Airplay on your iPhone or Apple device.

Fig. 2.3



Fig. 2.4



iPhone Smartphone Mirroring




Turning on Airplay

- Swipe up on your iPhone and to access the Airplay option as shown above
- Select Airplay and turn it on, it will show you the Happy Cast connection, just select it and make sure the mirroring is switched on

Projector

- You should already have the Happy Cast App opened on the projector and it will mirror the Apple device.
- Adjust the settings in the App if necessary

Android Smartphone Mirroring

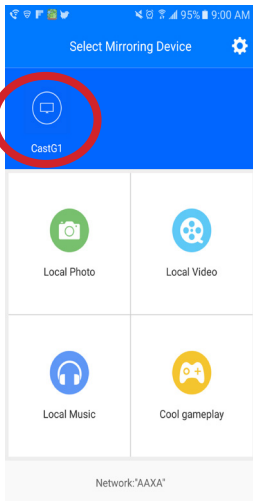

Downloading HappyCast App

- Please visit this URL: <http://www.aaxatech.com/happycast.apk> on your android phone to download Happy Cast.
- After finishing installing on the phone please open the Happy Cast App and connect to the projector's Happy Cast connection.

Projector

- You should already have the Happy Cast App open on the projector and it will mirror the Android phone.
- Adjust the settings in the app if necessary

Connecting to Wi-Fi


Connecting to Wi-Fi:

- Select the “Settings” icon (Fig. 2.5)
- Select the “Network Settings” option and navigate to your Wi-Fi network and click on it to connect.
- A window will appear and ask for a password, please type it in and when finished press “Connect” and the projector will connect to your Wi-Fi (Fig2.6).

Fig. 2.5



Fig. 2.6

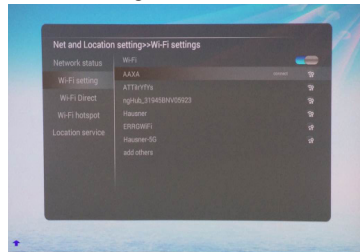

Please see next page for steps to establish to a Wi-Fi connection.

Connecting to Wi-Fi FAQ

Connecting to Wi-Fi:

The Projector features a Wi-Fi chipset capable of 802.11 b/g/n connection. This means it is compatible with most Wi-Fi routers. To connect to a Wi-Fi router follow the following steps:

- Step 1: Access the Network Settings Submenu: Settings -> Network Settings
- Step 2: Turn Wi-Fi radio to “On” by highlighting and toggling the Wi-Fi Button under Wi-Fi setting
- Step 3: Select the appropriate Router
- Step 4: Enter the router password in the password selection (by pressing “OK”). It is recommended that the automatic IP address acquisition be turned on

Troubleshooting

1. Unable to connect
 - a. Check Security Settings – WPA/WPA2 PSK
 - b. Check if Router is in range

Streaming Applications

Streaming Application

- To access the Streaming Application, select “Streaming” from the Main Menu.
- The P700 Pro enables video streaming from selected applications. Please visit the product website for additional information and firmware updates.



Main Menu Screen



Streaming Screen

- Streaming applications are accessible after Wi-Fi internet service is established. Most applications require a log-in account.
- It is highly recommended to use a mouse to access streaming content. The keypad/remote control may not be compatible with app updates.
- Applications with the “mouse” icon require the use of a mouse to navigate correctly.

Streaming Applications Cont.

Troubleshooting

Application Hangs or Freezes

- Try clearing the cache (see Settings - Application Manager)

Update Required

- If an update is required, you may be able to obtain it from the product website (through “Browser” in the Main Menu)

Poor Video Playback

- Possible Causes:
 - Poor Wi-Fi Connection
 - Too many open applications
 - Too many Bluetooth devices
 - Device Strain - Try reducing brightness to Standard or Eco mode

Connecting to Bluetooth Devices


Connecting to Bluetooth:

- Select the “Settings” icon (Fig. 2.7)
- Select the “Bluetooth Settings” option and navigate to your Bluetooth Device and click on it to connect. (Fig. 2.8)
- The projector features a Bluetooth radio (BT). The Bluetooth radio is designed to connect Bluetooth enabled devices, typically either a Bluetooth Mouse or Bluetooth Speaker. The projector supports one Bluetooth device at a time.

Fig. 2.7



Fig. 2.8

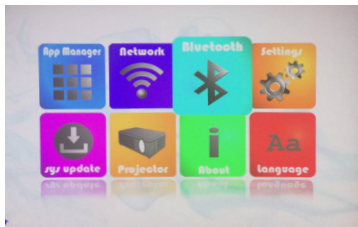

Please see next page for steps to connect to Bluetooth devices

Bluetooth Mouse & Speaker

To connect a Bluetooth Mouse/Speaker

Step 1: Access the Bluetooth Menu (Settings → Bluetooth)

Step 2: Turn on Bluetooth functionality

Step 3: Turn on your Bluetooth device and enable discovery. This varies with each device. Some devices require the power switch to be turned “ON”. Other devices have a bluetooth icon that is pressed to make the device “discoverable”

Step 4: If your device does not pop up automatically, click on “Scan for Devices”

Step 5: Highlight your device and click “OK” to connect. Your device should show “connecting.” If a PIN is asked, try 0000 or 1234 – these are the standard PIN codes. If this does not work, check with your device manufacturer for the PIN.


Troubleshooting

- Some BT mice will “go to sleep.” Double check the connection screen to see if the BT mouse is still connected. If not, try to double click on the mouse or reconnect the device.
- If the BT mouse does not “wake up” after going to sleep, toggle BT mouse on/off.
- Disconnecting. It takes 10-15 seconds for BT devices to connect / disconnect from the system. Failure to wait for this time could result in an improper connection. Check to ensure device is connected in the BT submenu.
- If the Bluetooth device does not automatically reconnect please go to the Bluetooth settings and press on the device to reconnect to it.
- If the device still does not reconnect please press on the icon on the right of the device’s name to unpair the device and pair it again.

Settings Menu

Chapter 3

The Settings Menu can be accessed by selecting “Settings” on the main menu

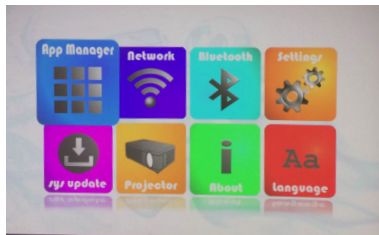


Within the Settings Menu there are eight submenus that allow you to customize your P700 Pro.

- Application Manager
- Network Settings
- Bluetooth Settings
- System Settings
- System Update
- Projector Settings
- About
- Language Settings

Application Manager

Application Setting


- The Application Manager allows the management of onboard applications. The primary purpose of the Application Manager is to reset / remove existing apps
 1. Clearing the App Data / Cache – Clearing the App cache is sometimes necessary to remove corrupted information and reset old logins
 2. Force Stop – If an application is misbehaving use this function to stop the application
 3. Uninstall – Use this function to uninstall unwanted applications
 4. Move to SD Card – This feature is disabled and unsupported

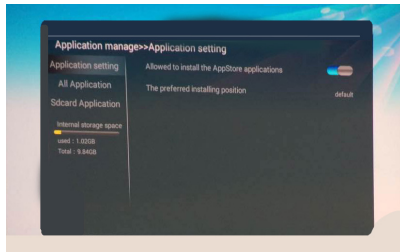

Network & Bluetooth Settings


Network Settings

- Please see Connecting to Wi-Fi section Page 40
- **Network status**- Shows the info and status of your Wi-Fi connection
- **Wi-Fi setting**- Where you will find the list of available Wi-Fi connections nearby
- **Wi-Fi Direct**- This feature has been disabled

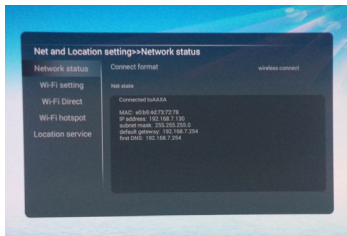


Bluetooth Settings

- For Bluetooth Connectivity please see the Bluetooth (BT) page
- **Bluetooth** Enable On/Off
- **DeviceName**- Your Projector's Bluetooth name
- **Discoverable Timeout**- The time the projector will timeout when trying to search for a Bluetooth device
- **Scan for Devices**- Will scan for any nearby Bluetooth device

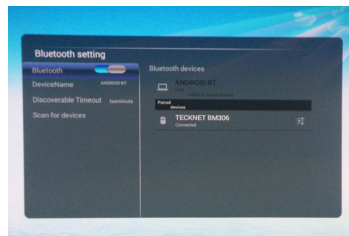

System Settings

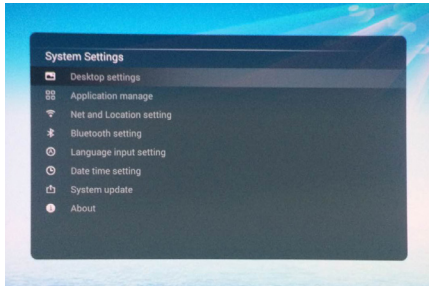

All settings can be found through System Settings

- **Desktop Settings**
- **Application Manage**
- **Net and Location Settings**
- **Bluetooth Settings**
- **Language input Settings**
- **Date time Settings**
- **System Update**
- **About**

System Update & Language Settings

System Update


- Update your projector through a Wi-Fi connection

System information

- Shows the system version, MAC address, and the memory information of the projector.


Restore Factory

- Restores your projector back to the factory default.
- Clears your google account
- Clears system and application data and settings
- Sets the projector settings back to factory

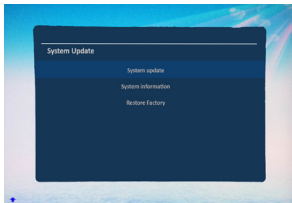


Language Settings

- **Selecting a Language:** The projector supports 10 different language settings. These languages include English, Spanish, German, French, Italian. Additional languages are available through custom firmware.
- **Input Method:** The input method is a standard AOSP English keyboard. Other input methods are available through custom firmware.
- **AOSP Keyboard Settings:** Customization is not supported.

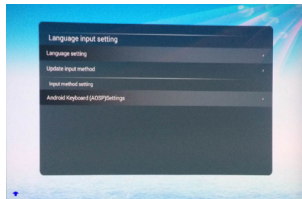

Projector Settings

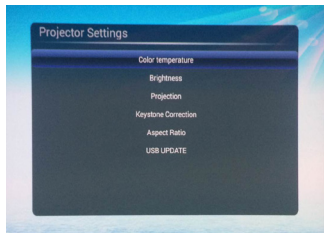

- **Color Temperature** – This submenu allows to adjust the screen color temperature
- **Brightness** – There are 3x brightness settings available Eco, Standard, and Bright. NOTE: Bright mode should only be used in low temperature environments with adequate clearance of exhaust / intake vents. A tripod is highly recommended. DO NOT block vents while operating in Bright mode.
- **Projection** – This submenu allows the selection of different viewing orientations as a result of either rear projection or upside-down (inverted) mounting.
- **Keystone Correction** – Please see Keystone Adjustments on page 53
- **Aspect Ratio** – This submenu allows to change the aspect ratio and Left_Right contrast and Up_Down contrast as well
- **USB Update** – System can be updated through the upgrade file using USB Drive

About

Models


- Shows the projector model name

System version

- Shows the Android OS version

Software Version

- Shows the current software version.

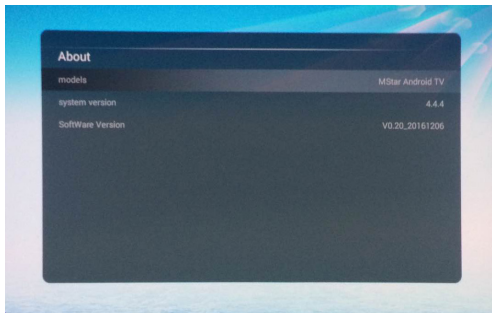


Other Applications

There may exist different firmware versions to support different applications. Please e-mail AAXA Technologies or check our FAQ section for more information.

Need help? Please e-mail us at pro_support@aaxatech.com

Keystone Adjustments

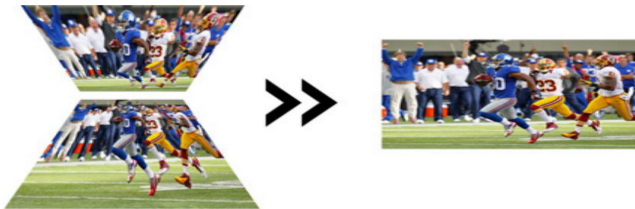

What is Keystoneing?

“Keystoneing” occurs when a projector is aligned non-perpendicularly to a screen, or when the projection screen has an angled surface. The image that results from one of these misalignments will look trapezoidal rather than square.

Digital Keystone Adjustments

By adding a special, selectable algorithm to the scaling, some new projectors are able to alter the image before it reaches the projection lens. The result is a squared image, even at an angle.

Keystone Adjustments FAQ

How to Correct Keystone

- If the image looks trapezoidal with the base larger (as pictured right), go to “Projector Settings” and click “Keystone Correction”. On the “Keystone Correction” screen, press the left button on the remote or on the directional pad on the top of the P700 Pro until the keystone effect corrects and the picture turns into a square projection.



- If the image looks trapezoidal with the top larger (as pictured right), go to “Projector Settings” and click “Keystone Correction”. On the “Keystone Correction” screen, press the right button on the remote or on press the top button on the directional pad on the top of the P700 Pro until the keystone effect corrects and the picture turns into a square projection.



Troubleshooting

IMAGE IS BLURRED

Possible Causes	Solution
The Projector is not in focus	Adjust the focus with the focus adjustment dial until the image comes into focus
The Projector is offset from plane / angle of operation	Move the projector so that it is both 180 degrees and on an even plane with the screen.

NO SYNC, NO SIGNAL

1. Be sure to setup the computer to enable a video signal output. On some laptops this is done by pressing and holding Function F5 key. If using the P700 Pro as an external monitor on Windows based systems, this can be done by selecting "extend my desktop to this monitor". The native resolution of the P700 Pro projector is 1280x800. Depending on the video driver different resolutions may need to be selected for proper output.

Technical Details Cont.

Troubleshooting

THE PROJECTOR DOES NOT TURN ON

Possible Causes	Solution
There is no power	Check to ensure the power outlet source is good. Check the power adapter to ensure a proper connection with the wall outlet as well as the projector. Confirm that the unit is charged and has enough power
The power button was not held long enough	To power on the projector, the power button needs to be pressed for a full 3 seconds. Try holding the power button until the optical engine turns on

NO PICTURE / FILE NOT SUPPORTED

Possible Causes	Solution
The video source is not properly connected or selected	Check the video source signal to ensure that it is properly connected. Select the current input source by choosing the input desired from the main menu
Incorrect file extension / Video is encoded with incorrect codec	Please refer to "Specifications" page to see which file types and codec are supported. Verify that the file was encoded properly.

Specifications

Brightness:	650 Lumens
Max Resolution:	1920x1080 (1080P)
Native Resolution:	1280x800 (WXGA)
Contrast Ratio:	2000:1
Aspect Ratio:	16:9
Projection Lens:	Manual Focus
Image Size:	10~150 inches
Lamp:	Triple RGB LEDs with Vibrant Color Technology Life 20,000hrs
Video in:	Composite A/V VGA(mini-VGA) HDMI
Audio Output:	3.5 mm audio jack
SD Card:	MicroSD Card Slot (32GB maximum)
USB:	5 Pin USB 2.0 (Full Size) (32GB maximum)
Dimensions:	6.9" x 3.8" x 1.5"
Weight:	1.37lbs
Supported File Formats:	MP3, WMA, OGG, WAV, AVI, BMP, JPG, TXT, MKV, GIF, XLS, PPT, DOX, PDF
3D Engine:	3D Active Shutter Technology
Android Version:	4.4.4 (KitKat)
Processor:	High Performance Dual Core
RAM:	1GB
Onboard Storage:	8GB
Wi-Fi:	802.11 b/g/n
Bluetooth:	2.0



Notes

Please direct all customer service inquiries to:

AAXA Technologies, Inc.
1541 Parkway Loop Suite F
Tustin, CA 92780
(714) 957-1999
info@aaxatech.com