

GOAL ZERO

YETI 400 SOLAR GENERATOR

User Guide




- Register your product
- Watch demo video
- Download user manual



Contact Us:
Toll Free: 888-794-6250
675 West 14600 South
Bluffdale, UT 84065
www.GOALZERO.com

We proudly support Tifie Humanitarian
www.tifie.org

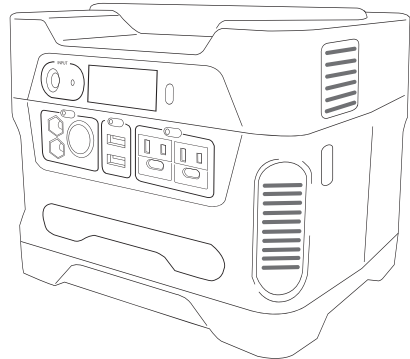

Technical Specifications	
Charge Times	
Charging With:	Approximate Charge Times
Wall charger (75W)	5 hours
Car charger (30W)	13 hours
Boulder 30 Solar Panel	20-40 hours
Nomad 27 Solar Panel	30-60 hours
Inputs	
Charge Port (for solar, wall, or car charging)	15V, up to 5A (75W)
Internal	
Battery Type	Sealed Lead-acid (AGM)
Battery Capacity	396Wh (12V, 33Ah)
Life Span	Hundreds of cycles
Fuses	none
Inverter	300W pure-sine wave

General	
Shelf Life	Charge every 3 Months
Chainable	Yes
Weight	29 lbs (13.2 kg)
Dimensions	10.25 x 8 x 8 in (26 x 20.3 x 20.3cm)
Warranty	6 months
Tested and Certified	CE, FCC, RoHS
Operating usage temperature	32-104F (0-40 C)
Optimal storage temperature	77F (25C)
Outputs	
(2)AC Outlet, 110VAC, 60Hz, pure-sine wave 300W continuous, 600W peak	
12V car port 12V, up to 10A (115W)	
(2)12V 6mm port 12V, up to 10A (120W)	
(2)USB port 5V, up to 1.5A (7.5W)	

Q: How do I use my YETI?

A: The output ports must be turned on before you can recharge gear from your YETI. Push the power button located above each port you will be using. You'll know the port is turned on when the green LED light on the button is turned on.

Q: How do I know if my YETI is charged?

A: To check the charge level of your YETI, refer to the LCD Battery Display. When lit up, you'll see a battery outline with 5 segments, indicating the current charge level. You can turn on the display by pushing one of the power buttons. If at any time you hear your YETI beeping, the battery is low - plug it into a power source immediately.

Q: How do I charge my YETI?

A: You can easily charge your YETI with a wall plug, solar panel, or from a car. Once you have decided on a source, plug the appropriate cables into the INPUT Port on the front of your YETI. You will know the Yeti is charging when the green LED light next to the INPUT port lights up, and the battery segments in the LCD BATTERY DISPLAY are blinking. The YETI is fully charged when all battery segments stop blinking and remain solid.


Q: How should I store my YETI?

A: Having your YETI connected to a power source at all times, like a solar panel or a wall plug, keeps its battery healthy and topped off. This prolongs battery life and will ensure your YETI is ready to recharge your gear at all times.


CHARGE ME NOW!

Before using or storing, plug your GOAL ZERO YETI 400 into the wall until it is fully charged. If at any point you hear beeping from your YETI, plug it into a power source as soon as possible.

CLOSE-UP OF YETI 400 FACE PLATE

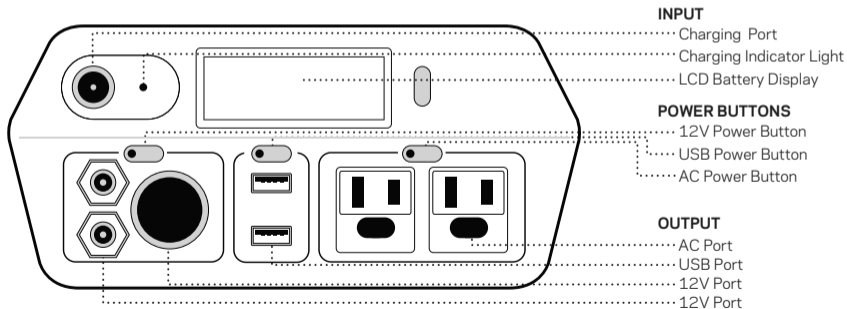


CLOSE-UP OF LCD BATTERY DISPLAY

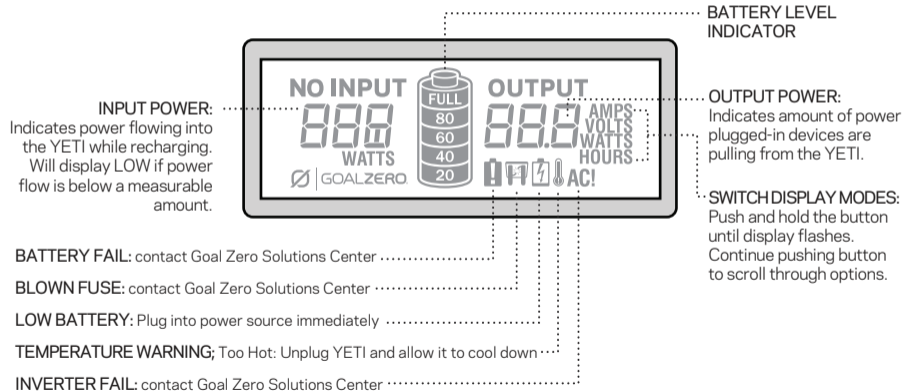

WHAT IT POWERS

Powers USB, 12V and AC devices like:

Small appliances	CPAP	Tablets
Televisions	Smartphones	Laptops
Power tools	Lights	...And More

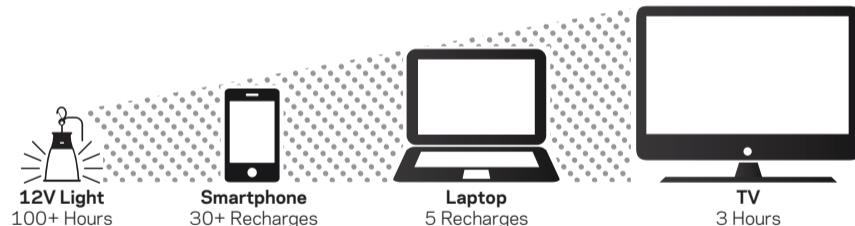

Note: Recharges are based on averages of most popular devices.