

Printer Model	Notes
Brother DCP-1200	
Brother DCP-8045D	
Brother HL-1040	
Brother HL-1050	
Brother HL-1060	
Brother HL-1070	
Brother HL-10V	
Brother HL-10h	
Brother HL-1240	
Brother HL-1250	
Brother HL-1260	
Brother HL-1270N	
Brother HL-1430	
Brother HL-1440	
Brother HL-1450	
Brother HL-1470N	
Brother HL-1650	
Brother HL-1660e	
Brother HL-1670N	
Brother HL-1850	
Brother HL-1870N	
Brother HL-2030	
Brother HL-2035	
Brother HL-2060	
Brother HL-2460	
Brother HL-2460N	
Brother HL-4Ve	
Brother HL-5030	
Brother HL-5040	
Brother HL-5050	
Brother HL-5070N	
Brother HL-5140	
Brother HL-5150D	
Brother HL-5170DN	
Brother HL-630	
Brother HL-660	
Brother HL-7050	
Brother HL-7050N	
Brother HL-760	
Brother HL-960	

Brother MFC-6550MC	
Brother MFC-8300	
Brother MFC-9500	
Brother MFC-9600	

Printer Model	Notes
Canon BJ-30	
Canon BJC-50	
Canon BJC-55	
Canon BJC-80	
Canon BJC-85	
Canon BJC-210	
Canon BJC-240	
Canon BJC-250	
Canon BJC-1000	
Canon BJC-2000	
Canon BJC-2010	
Canon BJC-2100	
Canon BJC-2110	
Canon BJC-3000	
Canon BJC-4000	
Canon BJC-4300	
Canon BJC-4400	
Canon BJC-4550	
Canon BJC-5100	
Canon BJC-5500	
Canon BJC-5500J	
Canon BJC-6000	
Canon BJC-6100	
Canon BJC-6200	
Canon BJC-6500	
Canon BJC-7000	
Canon BJC-7100	
Canon BJC-8200	
Canon BJC-8500	
Canon S100	
Canon S200	
Canon S300	
Canon S330	
Canon S400	
Canon S450	
Canon S500	
Canon S520	
Canon S530D	
Canon S600	
Canon S630	

Canon S750	
Canon S800	
Canon S820	
Canon S830D	
Canon S900	
Canon S9000	
Canon S4500	
Canon SELPHY DS700	
Canon SELPHY DS810	
Canon PIXMA mini220	
Canon PIXMA mini320	
Canon PIXMA mini360	
Canon PIXMA iP90	
Canon PIXMA iP90v	
Canon PIXMA iP100	
Canon PIXMA iP2000	
Canon iP2700 series	EXPERIMENTAL
Canon PIXMA iP2700	EXPERIMENTAL
Canon PIXUS iP2700	EXPERIMENTAL
Canon PIXMA iP2701	EXPERIMENTAL
Canon PIXMA iP2702	EXPERIMENTAL
Canon PIXMA iP2740	EXPERIMENTAL
Canon PIXMA iP2760	EXPERIMENTAL
Canon PIXMA iP2770	EXPERIMENTAL
Canon PIXMA iP2772	EXPERIMENTAL
Canon PIXMA iP2780	EXPERIMENTAL
Canon PIXMA iP2788	EXPERIMENTAL
Canon PIXMA iP3000	EXPERIMENTAL
Canon PIXMA iP3100	EXPERIMENTAL
Canon PIXUS iP3100	EXPERIMENTAL
Canon iP3300 series	EXPERIMENTAL
Canon PIXMA iP3300	EXPERIMENTAL

Canon PIXUS iP3300	EXPERIMENTAL
Canon iP3500 series	EXPERIMENTAL
Canon PIXMA iP3500	EXPERIMENTAL
Canon PIXUS iP3500	EXPERIMENTAL
Canon iP3600 series	EXPERIMENTAL
Canon PIXMA iP3600	EXPERIMENTAL
Canon PIXUS iP3600	EXPERIMENTAL
Canon PIXMA iP3680	EXPERIMENTAL
Canon PIXMA iP4000	
Canon PIXMA iP4000R	
Canon PIXMA iP4100	EXPERIMENTAL
Canon PIXUS iP4100	EXPERIMENTAL
Canon PIXUS iP4100R	EXPERIMENTAL
Canon PIXMA iP4100R	EXPERIMENTAL
Canon iP4200 series	EXPERIMENTAL
Canon PIXMA iP4200	EXPERIMENTAL
Canon PIXUS iP4200	EXPERIMENTAL
Canon iP4300 series	EXPERIMENTAL
Canon PIXMA iP4300	EXPERIMENTAL
Canon PIXUS iP4300	EXPERIMENTAL
Canon iP4500 series	EXPERIMENTAL
Canon PIXMA iP4500	EXPERIMENTAL
Canon PIXUS iP4500	EXPERIMENTAL
Canon iP4600 series	EXPERIMENTAL
Canon PIXMA iP4600	EXPERIMENTAL
Canon PIXUS iP4600	EXPERIMENTAL
Canon PIXMA iP4680	EXPERIMENTAL
Canon iP4700 series	EXPERIMENTAL
Canon PIXMA iP4700	EXPERIMENTAL
Canon PIXUS iP4700	EXPERIMENTAL
Canon PIXMA iP4760	EXPERIMENTAL
Canon iP4800 series	EXPERIMENTAL
Canon PIXMA iP4800	EXPERIMENTAL
Canon PIXMA iP4810	EXPERIMENTAL
Canon PIXMA iP4820	EXPERIMENTAL
Canon PIXUS iP4830	EXPERIMENTAL
Canon PIXMA iP4840	EXPERIMENTAL
Canon PIXMA iP4850	EXPERIMENTAL
Canon PIXMA iP4870	EXPERIMENTAL
Canon PIXMA iP4880	EXPERIMENTAL
Canon iP4900 series	EXPERIMENTAL

Canon PIXMA iP4900	EXPERIMENTAL
Canon PIXMA iP4910	EXPERIMENTAL
Canon PIXMA iP4920	EXPERIMENTAL
Canon PIXUS iP4930	EXPERIMENTAL
Canon PIXMA iP4940	EXPERIMENTAL
Canon PIXMA iP4950	EXPERIMENTAL
Canon PIXMA iP4970	EXPERIMENTAL
Canon PIXMA iP4980	EXPERIMENTAL
Canon PIXMA iP5000	EXPERIMENTAL
Canon PIXMA iP5200	EXPERIMENTAL
Canon iP5200R series	EXPERIMENTAL
Canon PIXMA iP5200R	EXPERIMENTAL
Canon PIXUS iP5200R	EXPERIMENTAL
Canon PIXMA iP5300	EXPERIMENTAL
Canon PIXMA iP6000D	EXPERIMENTAL
Canon PIXMA iP6100D	EXPERIMENTAL
Canon PIXUS iP6100D	EXPERIMENTAL
Canon PIXMA iP6210D	EXPERIMENTAL
Canon PIXMA iP6220D	EXPERIMENTAL
Canon PIXMA iP6310D	EXPERIMENTAL
Canon PIXMA iP6320D	EXPERIMENTAL
Canon iP6600D series	EXPERIMENTAL
Canon PIXMA iP6600D	EXPERIMENTAL
Canon PIXUS iP6600D	EXPERIMENTAL
Canon iP6700D series	EXPERIMENTAL
Canon PIXMA iP6700D	EXPERIMENTAL
Canon PIXUS iP6700D	EXPERIMENTAL
Canon PIXMA iP7100	EXPERIMENTAL
Canon PIXUS iP7100	EXPERIMENTAL
Canon iP7200 series	EXPERIMENTAL
Canon PIXMA iP7210	EXPERIMENTAL
Canon PIXMA iP7220	EXPERIMENTAL
Canon PIXUS iP7230	EXPERIMENTAL
Canon PIXMA iP7240	EXPERIMENTAL
Canon PIXMA iP7250	EXPERIMENTAL
Canon PIXMA iP7260	EXPERIMENTAL
Canon PIXMA iP7270	EXPERIMENTAL
Canon PIXMA iP7280	EXPERIMENTAL
Canon PIXMA iP7500	EXPERIMENTAL
Canon PIXUS iP7500	EXPERIMENTAL
Canon PIXMA iP8100	EXPERIMENTAL

Canon PIXUS iP8100	EXPERIMENTAL
Canon PIXMA iP8500	EXPERIMENTAL
Canon PIXMA iP8600	EXPERIMENTAL
Canon PIXUS iP8600	EXPERIMENTAL
Canon PIXMA iP9910	EXPERIMENTAL
Canon PIXUS iP9910	EXPERIMENTAL
Canon PIXMA iX4000	EXPERIMENTAL
Canon iX5000 series	EXPERIMENTAL
Canon PIXMA iX5000	EXPERIMENTAL
Canon PIXUS iX5000	EXPERIMENTAL
Canon iX6500 series	EXPERIMENTAL
Canon PIXMA iX6500	EXPERIMENTAL
Canon PIXMA iX6510	EXPERIMENTAL
Canon PIXMA iX6520	EXPERIMENTAL
Canon PIXUS iX6530	EXPERIMENTAL
Canon PIXMA iX6540	EXPERIMENTAL
Canon PIXMA iX6550	EXPERIMENTAL
Canon PIXMA iX6560	EXPERIMENTAL
Canon PIXMA iX6580	EXPERIMENTAL
Canon iX7000 series	EXPERIMENTAL
Canon PIXMA iX7000	EXPERIMENTAL
Canon PIXUS iX7000	EXPERIMENTAL
Canon Pro9000 series	EXPERIMENTAL
Canon PIXMA Pro9000	EXPERIMENTAL
Canon PIXUS Pro9000	EXPERIMENTAL
Canon Pro9000 Mk.II series	EXPERIMENTAL
Canon PIXMA Pro9000mk2	EXPERIMENTAL
Canon PIXUS Pro9000mk2	EXPERIMENTAL
Canon Pro9500 series	EXPERIMENTAL
Canon PIXMA Pro9500	EXPERIMENTAL
Canon PIXUS Pro9500	EXPERIMENTAL
Canon Pro9500 Mk.II series	EXPERIMENTAL
Canon PIXMA Pro9500mk2	EXPERIMENTAL
Canon PIXUS Pro9500mk2	EXPERIMENTAL
Canon MP140 series	EXPERIMENTAL
Canon PIXMA MP140	EXPERIMENTAL
Canon PIXMA MP145	EXPERIMENTAL
Canon MP150 series	EXPERIMENTAL
Canon PIXMA MP150	EXPERIMENTAL
Canon MP160 series	EXPERIMENTAL
Canon PIXMA MP160	EXPERIMENTAL

Canon MP170 series	EXPERIMENTAL
Canon PIXMA MP170	EXPERIMENTAL
Canon PIXUS MP170	EXPERIMENTAL
Canon MP180 series	EXPERIMENTAL
Canon PIXMA MP180	EXPERIMENTAL
Canon MP190 series	EXPERIMENTAL
Canon PIXMA MP190	EXPERIMENTAL
Canon PIXMA MP198	EXPERIMENTAL
Canon MP210 series	EXPERIMENTAL
Canon PIXMA MP210	EXPERIMENTAL
Canon PIXMA MP218	EXPERIMENTAL
Canon MP220 series	EXPERIMENTAL
Canon PIXMA MP220	EXPERIMENTAL
Canon PIXMA MP228	EXPERIMENTAL
Canon MP230 series	EXPERIMENTAL
Canon PIXMA MP230	EXPERIMENTAL
Canon PIXMA MP236	EXPERIMENTAL
Canon PIXMA MP237	EXPERIMENTAL
Canon MP240 series	EXPERIMENTAL
Canon PIXMA MP240	EXPERIMENTAL
Canon PIXMA MP245	EXPERIMENTAL
Canon MP250 series	EXPERIMENTAL
Canon PIXMA MP250	EXPERIMENTAL
Canon PIXMA MP252	EXPERIMENTAL
Canon PIXMA MP258	EXPERIMENTAL
Canon PIXMA MP259	EXPERIMENTAL
Canon MP260 series	EXPERIMENTAL
Canon PIXMA MP260	EXPERIMENTAL
Canon PIXMA MP268	EXPERIMENTAL
Canon MP270 series	EXPERIMENTAL
Canon PIXMA MP270	EXPERIMENTAL
Canon PIXUS MP270	EXPERIMENTAL
Canon PIXMA MP272	EXPERIMENTAL
Canon PIXMA MP276	EXPERIMENTAL
Canon MP280 series	EXPERIMENTAL
Canon PIXMA MP280	EXPERIMENTAL
Canon PIXUS MP280	EXPERIMENTAL
Canon PIXMA MP282	EXPERIMENTAL
Canon PIXMA MP287	EXPERIMENTAL
Canon PIXMA MP288	EXPERIMENTAL
Canon MP360 series	EXPERIMENTAL

Canon PIXMA MP360	EXPERIMENTAL
Canon PIXUS MP360	EXPERIMENTAL
Canon SmartBase MP360	EXPERIMENTAL
Canon SmartBase MP360S	EXPERIMENTAL
Canon MultiPASS MP360	EXPERIMENTAL
Canon MP370 series	EXPERIMENTAL
Canon PIXMA MP370	EXPERIMENTAL
Canon PIXUS MP370	EXPERIMENTAL
Canon SmartBase MP370	EXPERIMENTAL
Canon MultiPASS MP370	EXPERIMENTAL
Canon PIXMA MP375R	EXPERIMENTAL
Canon PIXUS MP375R	EXPERIMENTAL
Canon MP390 series	EXPERIMENTAL
Canon PIXMA MP390	EXPERIMENTAL
Canon PIXUS MP390	EXPERIMENTAL
Canon SmartBase MP390	EXPERIMENTAL
Canon MultiPASS MP390	EXPERIMENTAL
Canon MP450 series	EXPERIMENTAL
Canon PIXMA MP450	EXPERIMENTAL
Canon PIXUS MP450	EXPERIMENTAL
Canon MP460 series	EXPERIMENTAL
Canon PIXMA MP460	EXPERIMENTAL
Canon PIXUS MP460	EXPERIMENTAL
Canon MP470 series	EXPERIMENTAL
Canon PIXMA MP470	EXPERIMENTAL
Canon PIXUS MP470	EXPERIMENTAL
Canon PIXMA MP476	EXPERIMENTAL
Canon MP480 series	EXPERIMENTAL
Canon PIXMA MP480	EXPERIMENTAL
Canon PIXUS MP480	EXPERIMENTAL
Canon PIXMA MP486	EXPERIMENTAL
Canon MP490 series	EXPERIMENTAL
Canon PIXMA MP490	EXPERIMENTAL
Canon PIXUS MP490	EXPERIMENTAL
Canon PIXMA MP492	EXPERIMENTAL
Canon PIXMA MP493	EXPERIMENTAL
Canon PIXUS MP493	EXPERIMENTAL
Canon PIXMA MP495	EXPERIMENTAL
Canon PIXMA MP496	EXPERIMENTAL
Canon PIXMA MP497	EXPERIMENTAL
Canon PIXMA MP498	EXPERIMENTAL

Canon PIXMA MP499	EXPERIMENTAL
Canon MP500 series	EXPERIMENTAL
Canon PIXMA MP500	EXPERIMENTAL
Canon PIXUS MP500	EXPERIMENTAL
Canon MP510 series	EXPERIMENTAL
Canon PIXMA MP510	EXPERIMENTAL
Canon PIXUS MP510	EXPERIMENTAL
Canon MP520 series	EXPERIMENTAL
Canon PIXMA MP520	EXPERIMENTAL
Canon PIXUS MP520	EXPERIMENTAL
Canon MP530 series	EXPERIMENTAL
Canon PIXMA MP530	EXPERIMENTAL
Canon MP540 series	EXPERIMENTAL
Canon PIXMA MP540	EXPERIMENTAL
Canon PIXUS MP540	EXPERIMENTAL
Canon PIXMA MP545	EXPERIMENTAL
Canon MP550 series	EXPERIMENTAL
Canon PIXMA MP550	EXPERIMENTAL
Canon PIXUS MP550	EXPERIMENTAL
Canon PIXMA MP558	EXPERIMENTAL
Canon MP560 series	EXPERIMENTAL
Canon PIXMA MP560	EXPERIMENTAL
Canon PIXUS MP560	EXPERIMENTAL
Canon PIXMA MP568	EXPERIMENTAL
Canon MP600 series	EXPERIMENTAL
Canon PIXMA MP600	EXPERIMENTAL
Canon PIXUS MP600	EXPERIMENTAL
Canon PIXMA MP600R	EXPERIMENTAL
Canon MP610 series	EXPERIMENTAL
Canon PIXMA MP610	EXPERIMENTAL
Canon PIXUS MP610	EXPERIMENTAL
Canon MP620 series	EXPERIMENTAL
Canon PIXMA MP620	EXPERIMENTAL
Canon PIXUS MP620	EXPERIMENTAL
Canon PIXMA MP628	EXPERIMENTAL
Canon MP630 series	EXPERIMENTAL
Canon PIXMA MP630	EXPERIMENTAL
Canon PIXUS MP630	EXPERIMENTAL
Canon PIXMA MP638	EXPERIMENTAL
Canon MP640 series	EXPERIMENTAL
Canon PIXMA MP640	EXPERIMENTAL

Canon PIXUS MP640	EXPERIMENTAL
Canon PIXMA MP648	EXPERIMENTAL
Canon MP700 series	EXPERIMENTAL
Canon PIXMA MP700	EXPERIMENTAL
Canon PIXUS MP700	EXPERIMENTAL
Canon SmartBase MP700	EXPERIMENTAL
Canon MultiPASS MP700	EXPERIMENTAL
Canon MP710 series	EXPERIMENTAL
Canon PIXMA MP710	EXPERIMENTAL
Canon PIXUS MP710	EXPERIMENTAL
Canon MP730 series	EXPERIMENTAL
Canon PIXMA MP730	EXPERIMENTAL
Canon PIXUS MP730	EXPERIMENTAL
Canon SmartBase MP730	EXPERIMENTAL
Canon MultiPASS MP730	EXPERIMENTAL
Canon MP740 series	EXPERIMENTAL
Canon PIXMA MP740	EXPERIMENTAL
Canon PIXUS MP740	EXPERIMENTAL
Canon MP750 series	EXPERIMENTAL
Canon PIXMA MP750	EXPERIMENTAL
Canon MP760 series	EXPERIMENTAL
Canon PIXMA MP760	EXPERIMENTAL
Canon MP770 series	EXPERIMENTAL
Canon PIXMA MP770	EXPERIMENTAL
Canon PIXUS MP770	EXPERIMENTAL
Canon MP780 series	EXPERIMENTAL
Canon PIXMA MP780	EXPERIMENTAL
Canon MP790 series	EXPERIMENTAL
Canon PIXMA MP790	EXPERIMENTAL
Canon PIXUS MP790	EXPERIMENTAL
Canon MP800 series	EXPERIMENTAL
Canon PIXMA MP800	EXPERIMENTAL
Canon PIXUS MP800	EXPERIMENTAL
Canon PIXMA MP800R	EXPERIMENTAL
Canon MP810 series	EXPERIMENTAL
Canon PIXMA MP810	EXPERIMENTAL
Canon PIXUS MP810	EXPERIMENTAL
Canon MP830 series	EXPERIMENTAL
Canon PIXMA MP830	EXPERIMENTAL
Canon PIXUS MP830	EXPERIMENTAL
Canon MP900 series	EXPERIMENTAL

Canon PIXMA MP900	EXPERIMENTAL
Canon PIXUS MP900	EXPERIMENTAL
Canon MP950 series	EXPERIMENTAL
Canon PIXMA MP950	EXPERIMENTAL
Canon PIXUS MP950	EXPERIMENTAL
Canon MP960 series	EXPERIMENTAL
Canon PIXMA MP960	EXPERIMENTAL
Canon PIXUS MP960	EXPERIMENTAL
Canon MP970 series	EXPERIMENTAL
Canon PIXMA MP970	EXPERIMENTAL
Canon PIXUS MP970	EXPERIMENTAL
Canon MP980 series	EXPERIMENTAL
Canon PIXMA MP980	EXPERIMENTAL
Canon PIXUS MP980	EXPERIMENTAL
Canon PIXMA MP988	EXPERIMENTAL
Canon MP990 series	EXPERIMENTAL
Canon PIXMA MP990	EXPERIMENTAL
Canon PIXUS MP990	EXPERIMENTAL
Canon PIXMA MP996	EXPERIMENTAL
Canon MG2100 series	EXPERIMENTAL
Canon PIXMA MG2100	EXPERIMENTAL
Canon PIXMA MG2110	EXPERIMENTAL
Canon PIXMA MG2120	EXPERIMENTAL
Canon PIXUS MG2130	EXPERIMENTAL
Canon PIXMA MG2140	EXPERIMENTAL
Canon PIXMA MG2150	EXPERIMENTAL
Canon PIXMA MG2160	EXPERIMENTAL
Canon PIXMA MG2170	EXPERIMENTAL
Canon PIXMA MG2180	EXPERIMENTAL
Canon MG2200 series	EXPERIMENTAL
Canon PIXMA MG2210	EXPERIMENTAL
Canon PIXMA MG2220	EXPERIMENTAL
Canon PIXMA MG2240	EXPERIMENTAL
Canon PIXMA MG2250	EXPERIMENTAL
Canon PIXMA MG2260	EXPERIMENTAL
Canon PIXMA MG2270	EXPERIMENTAL
Canon PIXMA MG2280	EXPERIMENTAL
Canon MG2400 series	EXPERIMENTAL
Canon PIXMA MG2400	EXPERIMENTAL
Canon PIXMA MG2410	EXPERIMENTAL
Canon PIXMA MG2420	EXPERIMENTAL

Canon PIXMA MG2440	EXPERIMENTAL
Canon PIXMA MG2450	EXPERIMENTAL
Canon PIXMA MG2470	EXPERIMENTAL
Canon MG2500 series	EXPERIMENTAL
Canon PIXMA MG2510	EXPERIMENTAL
Canon PIXMA MG2520	EXPERIMENTAL
Canon PIXMA MG2540	EXPERIMENTAL
Canon PIXMA MG2550	EXPERIMENTAL
Canon PIXMA MG2560	EXPERIMENTAL
Canon PIXMA MG2570	EXPERIMENTAL
Canon PIXMA MG2580	EXPERIMENTAL
Canon MG3100 series	EXPERIMENTAL
Canon PIXMA MG3100	EXPERIMENTAL
Canon PIXMA MG3110	EXPERIMENTAL
Canon PIXMA MG3120	EXPERIMENTAL
Canon PIXMA MG3122	EXPERIMENTAL
Canon PIXUS MG3130	EXPERIMENTAL
Canon PIXMA MG3140	EXPERIMENTAL
Canon PIXMA MG3150	EXPERIMENTAL
Canon PIXMA MG3160	EXPERIMENTAL
Canon PIXMA MG3170	EXPERIMENTAL
Canon PIXMA MG3180	EXPERIMENTAL
Canon MG3200 series	EXPERIMENTAL
Canon PIXMA MG3210	EXPERIMENTAL
Canon PIXMA MG3220	EXPERIMENTAL
Canon PIXMA MG3222	EXPERIMENTAL
Canon PIXUS MG3230	EXPERIMENTAL
Canon PIXMA MG3240	EXPERIMENTAL
Canon PIXMA MG3250	EXPERIMENTAL
Canon PIXMA MG3260	EXPERIMENTAL
Canon PIXMA MG3270	EXPERIMENTAL
Canon MG3500 series	EXPERIMENTAL
Canon PIXMA MG3510	EXPERIMENTAL
Canon PIXMA MG3520	EXPERIMENTAL
Canon PIXUS MG3530	EXPERIMENTAL
Canon PIXMA MG3540	EXPERIMENTAL
Canon PIXMA MG3550	EXPERIMENTAL
Canon PIXMA MG3560	EXPERIMENTAL
Canon PIXMA MG3570	EXPERIMENTAL
Canon PIXMA MG3580	EXPERIMENTAL
Canon MG4100 series	EXPERIMENTAL

Canon PIXMA MG4100	EXPERIMENTAL
Canon PIXMA MG4110	EXPERIMENTAL
Canon PIXMA MG4120	EXPERIMENTAL
Canon PIXUS MG4130	EXPERIMENTAL
Canon PIXMA MG4140	EXPERIMENTAL
Canon PIXMA MG4150	EXPERIMENTAL
Canon PIXMA MG4160	EXPERIMENTAL
Canon PIXMA MG4170	EXPERIMENTAL
Canon PIXMA MG4180	EXPERIMENTAL
Canon MG4200 series	EXPERIMENTAL
Canon PIXMA MG4210	EXPERIMENTAL
Canon PIXMA MG4220	EXPERIMENTAL
Canon PIXUS MG4230	EXPERIMENTAL
Canon PIXMA MG4240	EXPERIMENTAL
Canon PIXMA MG4250	EXPERIMENTAL
Canon PIXMA MG4260	EXPERIMENTAL
Canon PIXMA MG4270	EXPERIMENTAL
Canon PIXMA MG4280	EXPERIMENTAL
Canon MG5100 series	EXPERIMENTAL
Canon PIXMA MG5100	EXPERIMENTAL
Canon PIXMA MG5120	EXPERIMENTAL
Canon PIXUS MG5130	EXPERIMENTAL
Canon PIXMA MG5140	EXPERIMENTAL
Canon PIXMA MG5150	EXPERIMENTAL
Canon PIXMA MG5170	EXPERIMENTAL
Canon PIXMA MG5180	EXPERIMENTAL
Canon MG5200 series	EXPERIMENTAL
Canon PIXMA MG5200	EXPERIMENTAL
Canon PIXMA MG5210	EXPERIMENTAL
Canon PIXMA MG5220	EXPERIMENTAL
Canon PIXUS MG5230	EXPERIMENTAL
Canon PIXMA MG5240	EXPERIMENTAL
Canon PIXMA MG5250	EXPERIMENTAL
Canon PIXMA MG5270	EXPERIMENTAL
Canon PIXMA MG5280	EXPERIMENTAL
Canon MG5300 series	EXPERIMENTAL
Canon PIXMA MG5300	EXPERIMENTAL
Canon PIXMA MG5310	EXPERIMENTAL
Canon PIXMA MG5320	EXPERIMENTAL
Canon PIXUS MG5330	EXPERIMENTAL
Canon PIXMA MG5340	EXPERIMENTAL

Canon PIXMA MG5350	EXPERIMENTAL
Canon PIXMA MG5370	EXPERIMENTAL
Canon PIXMA MG5380	EXPERIMENTAL
Canon MG5400 series	EXPERIMENTAL
Canon PIXMA MG5410	EXPERIMENTAL
Canon PIXMA MG5420	EXPERIMENTAL
Canon PIXMA MG5422	EXPERIMENTAL
Canon PIXUS MG5430	EXPERIMENTAL
Canon PIXMA MG5440	EXPERIMENTAL
Canon PIXMA MG5450	EXPERIMENTAL
Canon PIXMA MG5460	EXPERIMENTAL
Canon PIXMA MG5470	EXPERIMENTAL
Canon PIXMA MG5480	EXPERIMENTAL
Canon MG5500 series	EXPERIMENTAL
Canon PIXMA MG5510	EXPERIMENTAL
Canon PIXMA MG5520	EXPERIMENTAL
Canon PIXMA MG5522	EXPERIMENTAL
Canon PIXUS MG5530	EXPERIMENTAL
Canon PIXMA MG5540	EXPERIMENTAL
Canon PIXMA MG5550	EXPERIMENTAL
Canon PIXMA MG5560	EXPERIMENTAL
Canon PIXMA MG5570	EXPERIMENTAL
Canon PIXMA MG5580	EXPERIMENTAL
Canon MG6100 series	EXPERIMENTAL
Canon PIXMA MG6100	EXPERIMENTAL
Canon PIXMA MG6110	EXPERIMENTAL
Canon PIXMA MG6120	EXPERIMENTAL
Canon PIXUS MG6130	EXPERIMENTAL
Canon PIXMA MG6140	EXPERIMENTAL
Canon PIXMA MG6150	EXPERIMENTAL
Canon PIXMA MG6170	EXPERIMENTAL
Canon PIXMA MG6180	EXPERIMENTAL
Canon MG6200 series	EXPERIMENTAL
Canon PIXMA MG6200	EXPERIMENTAL
Canon PIXMA MG6210	EXPERIMENTAL
Canon PIXMA MG6220	EXPERIMENTAL
Canon PIXUS MG6230	EXPERIMENTAL
Canon PIXMA MG6240	EXPERIMENTAL
Canon PIXMA MG6250	EXPERIMENTAL
Canon PIXMA MG6270	EXPERIMENTAL
Canon PIXMA MG6280	EXPERIMENTAL

Canon MG6300 series	EXPERIMENTAL
Canon PIXMA MG6310	EXPERIMENTAL
Canon PIXMA MG6320	EXPERIMENTAL
Canon PIXUS MG6330	EXPERIMENTAL
Canon PIXMA MG6340	EXPERIMENTAL
Canon PIXMA MG6350	EXPERIMENTAL
Canon PIXMA MG6360	EXPERIMENTAL
Canon PIXMA MG6370	EXPERIMENTAL
Canon PIXMA MG6380	EXPERIMENTAL
Canon MG6400 series	EXPERIMENTAL
Canon PIXMA MG6400	EXPERIMENTAL
Canon PIXMA MG6410	EXPERIMENTAL
Canon PIXMA MG6420	EXPERIMENTAL
Canon PIXMA MG6440	EXPERIMENTAL
Canon PIXMA MG6450	EXPERIMENTAL
Canon PIXMA MG6470	EXPERIMENTAL
Canon MG6500 series	EXPERIMENTAL
Canon PIXUS MG6530	EXPERIMENTAL
Canon MG7100 series	EXPERIMENTAL
Canon PIXMA MG7110	EXPERIMENTAL
Canon PIXMA MG7120	EXPERIMENTAL
Canon PIXUS MG7130	EXPERIMENTAL
Canon PIXMA MG7140	EXPERIMENTAL
Canon PIXMA MG7150	EXPERIMENTAL
Canon PIXMA MG7170	EXPERIMENTAL
Canon PIXMA MG7180	EXPERIMENTAL
Canon MG8100 series	EXPERIMENTAL
Canon PIXMA MG8100	EXPERIMENTAL
Canon PIXMA MG8120	EXPERIMENTAL
Canon PIXUS MG8130	EXPERIMENTAL
Canon PIXMA MG8140	EXPERIMENTAL
Canon PIXMA MG8150	EXPERIMENTAL
Canon PIXMA MG8170	EXPERIMENTAL
Canon PIXMA MG8180	EXPERIMENTAL
Canon MG8200 series	EXPERIMENTAL
Canon PIXMA MG8200	EXPERIMENTAL
Canon PIXMA MG8220	EXPERIMENTAL
Canon PIXUS MG8230	EXPERIMENTAL
Canon PIXMA MG8240	EXPERIMENTAL
Canon PIXMA MG8250	EXPERIMENTAL
Canon PIXMA MG8270	EXPERIMENTAL

Canon PIXMA MG8280	EXPERIMENTAL
Canon MX300 series	EXPERIMENTAL
Canon PIXMA MX300	EXPERIMENTAL
Canon PIXMA MX308	EXPERIMENTAL
Canon MX310 series	EXPERIMENTAL
Canon PIXMA MX310	EXPERIMENTAL
Canon PIXMA MX318	EXPERIMENTAL
Canon MX320 series	EXPERIMENTAL
Canon PIXMA MX320	EXPERIMENTAL
Canon PIXMA MX328	EXPERIMENTAL
Canon MX330 series	EXPERIMENTAL
Canon PIXMA MX330	EXPERIMENTAL
Canon PIXMA MX338	EXPERIMENTAL
Canon MX340 series	EXPERIMENTAL
Canon PIXMA MX340	EXPERIMENTAL
Canon PIXMA MX347	EXPERIMENTAL
Canon PIXMA MX348	EXPERIMENTAL
Canon MX350 series	EXPERIMENTAL
Canon PIXMA MX350	EXPERIMENTAL
Canon PIXUS MX350	EXPERIMENTAL
Canon PIXMA MX357	EXPERIMENTAL
Canon PIXMA MX358	EXPERIMENTAL
Canon MX360 series	EXPERIMENTAL
Canon PIXMA MX360	EXPERIMENTAL
Canon PIXMA MX366	EXPERIMENTAL
Canon PIXMA MX368	EXPERIMENTAL
Canon MX370 series	EXPERIMENTAL
Canon PIXMA MX370	EXPERIMENTAL
Canon PIXMA MX371	EXPERIMENTAL
Canon PIXMA MX372	EXPERIMENTAL
Canon PIXMA MX374	EXPERIMENTAL
Canon PIXMA MX375	EXPERIMENTAL
Canon PIXMA MX376	EXPERIMENTAL
Canon PIXMA MX377	EXPERIMENTAL
Canon PIXMA MX378	EXPERIMENTAL
Canon MX390 series	EXPERIMENTAL
Canon PIXMA MX391	EXPERIMENTAL
Canon PIXMA MX392	EXPERIMENTAL
Canon PIXMA MX394	EXPERIMENTAL
Canon PIXMA MX395	EXPERIMENTAL
Canon PIXMA MX396	EXPERIMENTAL

Canon PIXMA MX397	EXPERIMENTAL
Canon PIXMA MX398	EXPERIMENTAL
Canon MX410 series	EXPERIMENTAL
Canon PIXMA MX410	EXPERIMENTAL
Canon PIXMA MX416	EXPERIMENTAL
Canon PIXMA MX418	EXPERIMENTAL
Canon MX420 series	EXPERIMENTAL
Canon PIXMA MX420	EXPERIMENTAL
Canon PIXUS MX420	EXPERIMENTAL
Canon PIXMA MX426	EXPERIMENTAL
Canon PIXMA MX428	EXPERIMENTAL
Canon MX430 series	EXPERIMENTAL
Canon PIXMA MX430	EXPERIMENTAL
Canon PIXMA MX431	EXPERIMENTAL
Canon PIXMA MX432	EXPERIMENTAL
Canon PIXMA MX434	EXPERIMENTAL
Canon PIXMA MX435	EXPERIMENTAL
Canon PIXMA MX436	EXPERIMENTAL
Canon PIXMA MX437	EXPERIMENTAL
Canon PIXMA MX438	EXPERIMENTAL
Canon PIXMA MX439	EXPERIMENTAL
Canon MX450 series	EXPERIMENTAL
Canon PIXMA MX451	EXPERIMENTAL
Canon PIXMA MX452	EXPERIMENTAL
Canon PIXMA MX454	EXPERIMENTAL
Canon PIXMA MX455	EXPERIMENTAL
Canon PIXMA MX456	EXPERIMENTAL
Canon PIXMA MX457	EXPERIMENTAL
Canon PIXMA MX458	EXPERIMENTAL
Canon PIXMA MX459	EXPERIMENTAL
Canon MX510 series	EXPERIMENTAL
Canon PIXMA MX510	EXPERIMENTAL
Canon PIXMA MX511	EXPERIMENTAL
Canon PIXMA MX512	EXPERIMENTAL
Canon PIXUS MX513	EXPERIMENTAL
Canon PIXMA MX514	EXPERIMENTAL
Canon PIXMA MX515	EXPERIMENTAL
Canon PIXMA MX516	EXPERIMENTAL
Canon PIXMA MX517	EXPERIMENTAL
Canon PIXMA MX518	EXPERIMENTAL
Canon MX520 series	EXPERIMENTAL

Canon PIXMA MX521	EXPERIMENTAL
Canon PIXMA MX522	EXPERIMENTAL
Canon PIXUS MX523	EXPERIMENTAL
Canon PIXMA MX524	EXPERIMENTAL
Canon PIXMA MX525	EXPERIMENTAL
Canon PIXMA MX526	EXPERIMENTAL
Canon PIXMA MX527	EXPERIMENTAL
Canon PIXMA MX528	EXPERIMENTAL
Canon MX700 series	EXPERIMENTAL
Canon PIXMA MX700	EXPERIMENTAL
Canon MX710 series	EXPERIMENTAL
Canon PIXMA MX710	EXPERIMENTAL
Canon PIXMA MX711	EXPERIMENTAL
Canon PIXMA MX712	EXPERIMENTAL
Canon PIXMA MX714	EXPERIMENTAL
Canon PIXMA MX715	EXPERIMENTAL
Canon MX720 series	EXPERIMENTAL
Canon PIXMA MX721	EXPERIMENTAL
Canon PIXMA MX722	EXPERIMENTAL
Canon PIXMA MX725	EXPERIMENTAL
Canon PIXMA MX726	EXPERIMENTAL
Canon PIXMA MX727	EXPERIMENTAL
Canon PIXMA MX728	EXPERIMENTAL
Canon MX850 series	EXPERIMENTAL
Canon PIXMA MX850	EXPERIMENTAL
Canon PIXUS MX850	EXPERIMENTAL
Canon MX860 series	EXPERIMENTAL
Canon PIXMA MX860	EXPERIMENTAL
Canon PIXUS MX860	EXPERIMENTAL
Canon PIXMA MX868	EXPERIMENTAL
Canon MX870 series	EXPERIMENTAL
Canon PIXMA MX870	EXPERIMENTAL
Canon PIXUS MX870	EXPERIMENTAL
Canon PIXMA MX876	EXPERIMENTAL
Canon MX880 series	EXPERIMENTAL
Canon PIXMA MX880	EXPERIMENTAL
Canon PIXMA MX882	EXPERIMENTAL
Canon PIXUS MX883	EXPERIMENTAL
Canon PIXMA MX884	EXPERIMENTAL
Canon PIXMA MX885	EXPERIMENTAL
Canon PIXMA MX886	EXPERIMENTAL

Canon PIXMA MX888	EXPERIMENTAL
Canon MX890 series	EXPERIMENTAL
Canon PIXMA MX890	EXPERIMENTAL
Canon PIXMA MX892	EXPERIMENTAL
Canon PIXUS MX893	EXPERIMENTAL
Canon PIXMA MX894	EXPERIMENTAL
Canon PIXMA MX895	EXPERIMENTAL
Canon PIXMA MX897	EXPERIMENTAL
Canon PIXMA MX898	EXPERIMENTAL
Canon MX920 series	EXPERIMENTAL
Canon PIXMA MX922	EXPERIMENTAL
Canon PIXUS MX923	EXPERIMENTAL
Canon PIXMA MX924	EXPERIMENTAL
Canon PIXMA MX925	EXPERIMENTAL
Canon PIXMA MX926	EXPERIMENTAL
Canon PIXMA MX927	EXPERIMENTAL
Canon PIXMA MX928	EXPERIMENTAL
Canon MX7600 series	EXPERIMENTAL
Canon PIXMA MX7600	EXPERIMENTAL
Canon PIXUS MX7600	EXPERIMENTAL
Canon E500 series	EXPERIMENTAL
Canon PIXMA E500	EXPERIMENTAL
Canon E510 series	EXPERIMENTAL
Canon PIXMA E510	EXPERIMENTAL
Canon PIXMA E518	EXPERIMENTAL
Canon E600 series	EXPERIMENTAL
Canon PIXMA E600	EXPERIMENTAL
Canon PIXMA E608	EXPERIMENTAL
Canon E610 series	EXPERIMENTAL
Canon PIXMA E610	EXPERIMENTAL
Canon PIXMA E618	EXPERIMENTAL
Canon 50i	
Canon 80i	
Canon 450i	
Canon 455i	
Canon 470PD	
Canon 475PD	
Canon 550i	
Canon 560i	
Canon 850i	
Canon 860i	

Canon 865R	
Canon 900PD	
Canon 950i	
Canon 960i	
Canon 990i	
Canon 6100i	
Canon 6500i	
Canon 9100i	
Canon 9900i	
Canon i70	
Canon i80	
Canon i450	EXPERIMENTAL
Canon i450X	EXPERIMENTAL
Canon i455	EXPERIMENTAL
Canon i455X	EXPERIMENTAL
Canon i470D	EXPERIMENTAL
Canon i475D	EXPERIMENTAL
Canon i550	EXPERIMENTAL
Canon i550X	EXPERIMENTAL
Canon i560	EXPERIMENTAL
Canon i560X	EXPERIMENTAL
Canon i850old	EXPERIMENTAL
Canon i850	EXPERIMENTAL
Canon i860old	EXPERIMENTAL
Canon i860	EXPERIMENTAL
Canon i865old	EXPERIMENTAL
Canon i865	EXPERIMENTAL
Canon i900D	EXPERIMENTAL
Canon i905D	EXPERIMENTAL
Canon i950	EXPERIMENTAL
Canon i960	EXPERIMENTAL
Canon i965	EXPERIMENTAL
Canon i990	EXPERIMENTAL
Canon i6100	
Canon i6500	
Canon i9100	
Canon i9900	EXPERIMENTAL
Canon i9950	EXPERIMENTAL
Canon GP 335	
Canon LBP-4sx	
Canon LBP-430	

Canon LBP-1000	
Canon LBP-1260	
Canon LBP-1760	
Canon LBP-3360	
Canon imageRunner 330s	
Canon CP-10	
Canon CP-100	
Canon CP-200	
Canon CP-220	
Canon CP-300	
Canon CP-330	
Canon SELPHY CP400	
Canon SELPHY CP500	
Canon SELPHY CP510	
Canon SELPHY CP520	
Canon SELPHY CP530	
Canon SELPHY CP600	
Canon SELPHY CP710	
Canon SELPHY CP720	
Canon SELPHY CP730	
Canon SELPHY CP740	
Canon SELPHY CP750	
Canon SELPHY CP760	
Canon SELPHY CP770	
Canon SELPHY CP780	
Canon SELPHY CP790	
Canon SELPHY CP800	
Canon SELPHY CP810	
Canon SELPHY CP900	
Canon SELPHY ES1	
Canon SELPHY ES2	
Canon SELPHY ES3	
Canon SELPHY ES20	
Canon SELPHY ES30	
Canon SELPHY ES40	

Printer Model	Notes
Epson Artisan 50	
Epson Artisan 700	
Epson Artisan 710	
Epson Artisan 800	
Epson Artisan 810	
Epson Artisan 835	
Epson B-300	
Epson B-308	
Epson B-310	
Epson B-310N	
Epson B-500DN	
Epson B-508DN	
Epson B-510DN	
Epson Stylus C20	
Epson Stylus C20SX	
Epson Stylus C20UX	
Epson Stylus C40	
Epson Stylus C40SX	
Epson Stylus C40UX	
Epson Stylus C41	
Epson Stylus C41SX	
Epson Stylus C41UX	
Epson Stylus C42	
Epson Stylus C42SX	
Epson Stylus C42UX	
Epson Stylus C43	
Epson Stylus C43SX	
Epson Stylus C43UX	
Epson Stylus C44	
Epson Stylus C44SX	
Epson Stylus C44UX	
Epson Stylus C45	
Epson Stylus C46	
Epson Stylus C48	
Epson Stylus C50	
Epson Stylus C60	
Epson Stylus C61	
Epson Stylus C62	
Epson Stylus C63	
Epson Stylus C64	

Epson Stylus C65	
Epson Stylus C66	
Epson Stylus C68	
Epson Stylus C70	
Epson Stylus C79	
Epson Stylus C80	
Epson Stylus C82	
Epson Stylus C83	
Epson Stylus C84	
Epson Stylus C85	
Epson Stylus C86	
Epson Stylus C87	
Epson Stylus C88	
Epson Stylus C92	
Epson Stylus C110	
Epson Stylus C120	
Epson Stylus Color	
Epson Stylus Color I	
Epson Stylus Color II	
Epson Stylus Color IIs	
Epson Stylus Color PRO	
Epson Stylus Pro XL	
Epson Stylus Color 400	
Epson Stylus Color 440	
Epson Stylus Color 460	
Epson Stylus Color 480	
Epson Stylus Color 500	
Epson Stylus Color 580	
Epson Stylus Color 600	
Epson Stylus Color 640	
Epson Stylus Color 660	
Epson Stylus Color 670	
Epson Stylus Color 680	
Epson Stylus Color 740	
Epson Stylus Color 760	
Epson Stylus Color 777	
Epson Stylus Color 800	
Epson Stylus Color 850	
Epson Stylus Color 860	
Epson Stylus Color 880	
Epson Stylus Color 8 3	

Epson Stylus Color 900	
Epson Stylus Color 980	
Epson Stylus Color 1160	
Epson Stylus Color 1500	
Epson Stylus Color 1520	
Epson Stylus Color 3000	
Epson Stylus Office B30	
Epson Stylus Office B33	
Epson Stylus Office B40W	
Epson Stylus Office B1100	
Epson Stylus Office T30	
Epson Stylus Office T33	
Epson Stylus Office T40W	
Epson Stylus Office T1100	
Epson Stylus Office T1110	
Epson Stylus Office BX300F	
Epson Stylus Office BX535WD	
Epson Stylus Office BX600FW	
Epson Stylus Office BX630FW	
Epson Stylus Office BX635FWD	
Epson Stylus Office SX600FW	
Epson Stylus Office TX300F	
Epson Stylus Office TX600FW	
Epson Stylus Office TX620FWD	
Epson Stylus Photo	
Epson Stylus Photo 700	
Epson Stylus Photo EX	
Epson Stylus Photo EX3	
Epson Stylus Photo 720	
Epson Stylus Photo 750	
Epson Stylus Photo 780	
Epson Stylus Photo 785	
Epson Stylus Photo 790	
Epson Stylus Photo 810	
Epson Stylus Photo 820	

Epson Stylus Photo 825	
Epson Stylus Photo 830	
Epson Stylus Photo 830U	
Epson Stylus Photo 870	
Epson Stylus Photo 875	
Epson Stylus Photo 890	
Epson Stylus Photo 895	
Epson Stylus Photo 900	
Epson Stylus Photo 915	
Epson Stylus Photo 925	
Epson Stylus Photo 935	
Epson Stylus Photo 950	
Epson Stylus Photo 960	
Epson Stylus Photo 1200	
Epson Stylus Photo 1270	
Epson Stylus Photo 1280	
Epson Stylus Photo 1290	
Epson Stylus Photo 1290s	
Epson Stylus Photo 1400	
Epson Stylus Photo 1410	
Epson Stylus Photo 2000P	
Epson Stylus Photo 2100	
Epson Stylus Photo 2200	
Epson Stylus Photo P50	
Epson Stylus Photo R200	
Epson Stylus Photo R210	
Epson Stylus Photo R220	
Epson Stylus Photo R230	
Epson Stylus Photo R240	
Epson Stylus Photo R245	
Epson Stylus Photo R260	
Epson Stylus Photo R265	
Epson Stylus Photo R270	
Epson Stylus Photo R280	
Epson Stylus Photo R285	
Epson Stylus Photo R290	
Epson Stylus Photo R300	
Epson Stylus Photo R310	
Epson Stylus Photo R320	
Epson Stylus Photo R340	
Epson Stylus Photo R350	

Epson Stylus Photo R360	
Epson Stylus Photo R380	
Epson Stylus Photo R390	
Epson Stylus Photo R800	
Epson Stylus Photo R1800	
Epson Stylus Photo R1900	
Epson Stylus Photo R2000	
Epson Stylus Photo R2400	
Epson Stylus Photo R2880	
Epson Stylus Photo R3000	
Epson Stylus Photo RX400	
Epson Stylus Photo RX420	
Epson Stylus Photo RX425	
Epson Stylus Photo RX430	
Epson Stylus Photo RX500	
Epson Stylus Photo RX510	
Epson Stylus Photo RX560	
Epson Stylus Photo RX580	
Epson Stylus Photo RX585	
Epson Stylus Photo RX590	
Epson Stylus Photo RX595	
Epson Stylus Photo RX600	
Epson Stylus Photo RX610	
Epson Stylus Photo RX620	
Epson Stylus Photo RX630	
Epson Stylus Photo RX640	
Epson Stylus Photo RX650	
Epson Stylus Photo RX680	
Epson Stylus Photo RX685	
Epson Stylus Photo RX690	
Epson Stylus Photo RX700	
Epson Stylus Photo TX700W	
Epson Stylus Photo TX710W	
Epson Stylus Photo TX800FW	
Epson Stylus Photo TX810FW	
Epson Stylus Pro 3800	
Epson Stylus Pro 3880	
Epson Stylus Pro 3885	
Epson Stylus Pro 4000	

Epson Stylus Pro 4800/4880 Back Compatible	
Epson Stylus Pro 4800	
Epson Stylus Pro 4880	
Epson Stylus Pro 5000	
Epson Stylus Pro 5500	
Epson Stylus Pro 7000	
Epson Stylus Pro 7500	
Epson Stylus Pro 7600	
Epson Stylus Pro 7700	
Epson Stylus Pro 7800	
Epson Stylus Pro 7880	
Epson Stylus Pro 7890	
Epson Stylus Pro 7900	
Epson Stylus Pro 9000	
Epson Stylus Pro 9500	
Epson Stylus Pro 9600	
Epson Stylus Pro 9700	
Epson Stylus Pro 9800	
Epson Stylus Pro 9880	
Epson Stylus Pro 9890	
Epson Stylus Pro 9900	
Epson Stylus Pro 10000	
Epson Stylus Pro 11800/11880 Back Compatible	
Epson Stylus Pro 11800	
Epson Stylus Pro 11880	
Epson Stylus Scan 2000	
Epson Stylus Scan 2500	
Epson Stylus CX1500	
Epson Stylus CX3100	
Epson Stylus CX3200	
Epson Stylus CX3500	
Epson Stylus CX3600	
Epson Stylus CX3650	
Epson Stylus CX3700	
Epson Stylus CX3800	
Epson Stylus CX3805	
Epson Stylus CX3810	
Epson Stylus CX3900	

Epson Stylus CX4100	
Epson Stylus CX4200	
Epson Stylus CX4400	
Epson Stylus CX4500	
Epson Stylus CX4600	
Epson Stylus CX4700	
Epson Stylus CX4800	
Epson Stylus CX4900	
Epson Stylus CX5000	
Epson Stylus CX5000F	
Epson Stylus CX5100	
Epson Stylus CX5200	
Epson Stylus CX5300	
Epson Stylus CX5400	
Epson Stylus CX5500	
Epson Stylus CX5600	
Epson Stylus CX5700	
Epson Stylus CX5800	
Epson Stylus CX6000	
Epson Stylus CX6300	
Epson Stylus CX6400	
Epson Stylus CX6500	
Epson Stylus CX6600	
Epson Stylus CX7000F	
Epson Stylus CX7300	
Epson Stylus CX7400	
Epson Stylus CX7700	
Epson Stylus CX7800	
Epson Stylus CX8300	
Epson Stylus CX8400	
Epson Stylus CX9300F	
Epson Stylus CX9400	
Epson Stylus CX9400F	
Epson Stylus CX9475F	
Epson Stylus D68	
Epson Stylus D78	
Epson Stylus D88	
Epson Stylus D92	
Epson Stylus D120	
Epson Stylus DX3800	
Epson Stylus DX3850	

Epson Stylus DX4000	
Epson Stylus DX4050	
Epson Stylus DX4200	
Epson Stylus DX4250	
Epson Stylus DX4400	
Epson Stylus DX4450	
Epson Stylus DX4800	
Epson Stylus DX4850	
Epson Stylus DX7000F	
Epson Stylus DX7400	
Epson Stylus DX7450	
Epson Stylus DX8400	
Epson Stylus DX8450	
Epson Stylus DX9400F	
Epson Stylus NX100	
Epson Stylus NX105	
Epson Stylus NX115	
Epson Stylus NX200	
Epson Stylus NX215	
Epson Stylus NX300	
Epson Stylus NX400	
Epson Stylus NX415	
Epson Stylus NX420	
Epson Stylus NX515	
Epson Stylus NX530	
Epson Stylus NX630	
Epson Stylus NX635	
Epson Stylus NX645	
Epson Stylus Photo PX650	
Epson Stylus Photo PX700W	
Epson Stylus Photo PX710W	
Epson Stylus Photo PX800FW	
Epson Stylus Photo PX810FW	
Epson Stylus S20	
Epson Stylus S21	
Epson Stylus S50	
Epson Stylus SX100	
Epson Stylus SX105	
Epson Stylus SX110	

Epson Stylus SX115	
Epson Stylus SX200	
Epson Stylus SX205	
Epson Stylus SX210	
Epson Stylus SX215	
Epson Stylus SX400	
Epson Stylus SX405	
Epson Stylus SX410	
Epson Stylus SX415	
Epson Stylus SX420	
Epson Stylus SX445W	
Epson Stylus SX510W	
Epson Stylus SX515	
Epson Stylus SX525	
Epson Stylus SX535FW	
Epson Stylus SX600FW	
Epson Stylus SX610FW	
Epson Stylus SX615	
Epson Stylus SX630	
Epson Stylus SX635	
Epson Stylus SX645	
Epson Stylus SX650	
Epson Stylus T13	
Epson Stylus T20	
Epson Stylus T21	
Epson Stylus T22	
Epson Stylus T22E	
Epson Stylus T26	
Epson Stylus T30	
Epson Stylus T40W	
Epson Stylus T50	
Epson Stylus T59	
Epson Stylus T60	
Epson Stylus TX100	
Epson Stylus TX101	
Epson Stylus TX102	
Epson Stylus TX103	
Epson Stylus TX104	
Epson Stylus TX105	
Epson Stylus TX106	
Epson Stylus TX109	

Epson Stylus TX110	
Epson Stylus TX125	
Epson Stylus TX200	
Epson Stylus TX210	
Epson Stylus TX300F	
Epson Stylus TX400	
Epson Stylus TX410	
Epson Stylus TX420	
Epson Stylus TX510FN	
Epson Stylus TX550W	
Epson Stylus TX610FW	
Epson Stylus TX615	
Epson Stylus TX630	
Epson Stylus TX635	
Epson Stylus TX645	
Epson Stylus TX650	
Epson Stylus TX659	
Epson PictureMate	
Epson PictureMate Dash	
Epson PictureMate Deluxe	
Epson PictureMate Flash	
Epson PictureMate Pal	
Epson PictureMate Snap	
Epson PictureMate 100	
Epson PictureMate 200	
Epson PictureMate 210	
Epson PictureMate 215	
Epson PictureMate 240	
Epson PictureMate 250	
Epson PictureMate 260	
Epson PictureMate 270	
Epson PictureMate 280	
Epson PictureMate 290	
Epson PictureMate 500	
Epson PictureMate 2005	
Epson WorkForce 30	
Epson WorkForce 40	
Epson WorkForce 310	
Epson WorkForce 315	
Epson WorkForce 500	
Epson WorkForce 545	

Epson WorkForce 600	
Epson WorkForce 610	
Epson WorkForce 615	
Epson WorkForce 630	
Epson WorkForce 635	
Epson WorkForce 645	
Epson WorkForce 1100	
Epson WF-7010 Series	EXPERIMENTAL
Epson WF-7011 Series	EXPERIMENTAL
Epson WF-7015 Series	EXPERIMENTAL
Epson WF-7018 Series	EXPERIMENTAL
Epson WF-7510 Series	EXPERIMENTAL
Epson WF-7511 Series	EXPERIMENTAL
Epson WF-7515 Series	EXPERIMENTAL
Epson WF-7520 Series	EXPERIMENTAL
Epson WF-7521 Series	EXPERIMENTAL
Epson WF-7525 Series	EXPERIMENTAL
Epson CL 700	
Epson CL 750	
Epson CL 760	
Epson E 100	
Epson E 150	
Epson E 200	
Epson E 300	
Epson E 500	
Epson E 520	
Epson E 700	
Epson E 720	
Epson EM 900C	
Epson EM 930C	
Epson EP 302	
Epson EP 702A	

Epson EP 801A	
Epson EP 901A	
Epson EP 901F	
Epson MC 2000	
Epson MC 5000	
Epson MC 7000	
Epson MC 9000	
Epson MC 10000	
Epson ME 300	
Epson ME 320	
Epson ME Office 70	
Epson ME Office 80W	
Epson ME Office 360	
Epson ME Office 600F	
Epson ME Office 620F	
Epson ME Office 700FW	
Epson ME Office 940FW	
Epson ME Office 1100	
Epson MJ 930C	
Epson MJ 5100C	
Epson MJ 6000C	
Epson MJ 8000C	
Epson PM 670C	
Epson PM 700C	
Epson PM 730C	
Epson PM 740C	
Epson PM 750C	
Epson PM 760C	
Epson PM 770C	
Epson PM 780C	
Epson PM 790PT	
Epson PM 800C	
Epson PM 850PT	
Epson PM 870C	
Epson PM 880C	
Epson PM 930C	
Epson PM 940C	
Epson PM 950C	
Epson PM 970C	
Epson PM 980C	
Epson PM 2000C	

Epson PM 2200C	
Epson PM 3000C	
Epson PM 3300C	
Epson PM 3500C	
Epson PM 3700C	
Epson PM 4000PX	
Epson PM 5000C	
Epson PM 7000C	
Epson PM 9000C	
Epson PM 10000	
Epson PM A650	
Epson PM A750	
Epson PM A820	
Epson PM A890	
Epson PM A900	
Epson PM A940	
Epson PM A950	
Epson PM D600	
Epson PM D750	
Epson PM D770	
Epson PM D800	
Epson PM D870	
Epson PM D1000	
Epson PM G700	
Epson PM G720	
Epson PM G730	
Epson PM G800	
Epson PM G820	
Epson PM G850	
Epson PM T960	
Epson PM G4500	
Epson PX A650	
Epson Offirio PX B300	
Epson Offirio PX B500	
Epson PX 7V	
Epson PX 101	
Epson PX 201	
Epson PX 204	
Epson PX 401A	
Epson PX 504A	
Epson PX 601F	

Epson PX 1001	
Epson PX 1200	EXPERIMENTAL
Epson PX 1600F	EXPERIMENTAL
Epson PX 1700F	EXPERIMENTAL
Epson PX G900	
Epson PX G920	
Epson PX G5000	
Epson PX G5300	
Epson PX V500	
Epson PX V600	
Epson PX V630	
Epson PX V780	
Epson PX 5500	
Epson PX G5600	
Epson PX 7000	
Epson PX 9000	
Epson ActionLaser 1100	
Epson ActionLaser II	
Epson AL-C2000	
Epson AL-C2000 PS3	
Epson AL-C8500	
Epson AL-C8500PS	
Epson AL-C8600	
Epson AL-C8600 PS3	
Epson EPL-5200	
Epson EPL-5200+	
Epson EPL-5700	
Epson EPL-5700PS	
Epson EPL-5800	
Epson EPL-5800PS	
Epson EPL-5900	
Epson EPL-5900 PS3	
Epson EPL-6100	
Epson EPL-6100 PS3	
Epson EPL-7100	
Epson EPL-N2050	
Epson EPL-N2050+	
Epson EPL-N2050PS	

Epson EPL-N2050PS+	
Epson EPL-N2120	
Epson EPL-N2500	
Epson EPL-N2500 PS3	
Epson EPL-N2750	
Epson EPL-N2750PS	

Printer Model
HP Business Inkjet 2200
HP Business Inkjet 2230
HP Business Inkjet 2250
HP Business Inkjet 2250TN
HP Business Inkjet 2280
HP Color Inkjet Printer CP1160
HP Color Inkjet Printer CP1700
HP Color LaserJet 2500
HP Color LaserJet 4500
HP Color LaserJet 4550
HP Color LaserJet 4600
HP Color LaserJet 5
HP Color LaserJet 5000
HP Color LaserJet 5500
HP Color LaserJet 8550GN
HP DesignJet 230
HP DesignJet 250C
HP DesignJet 430
HP DesignJet 450C
HP DesignJet 455CA
HP DesignJet 488CA
HP DesignJet 700
HP DesignJet 750C Plus
HP DesignJet 750C
HP DesignJet 2500CP
HP DesignJet 3500CP
HP DesignJet ColorPro CAD
HP DeskJet 400
HP DeskJet 420C
HP DeskJet 450
HP DeskJet 500
HP DeskJet 500C
HP DeskJet 505J Plus
HP DeskJet 510
HP DeskJet 520
HP DeskJet 540C
HP DeskJet 550C
HP DeskJet 5550
HP DeskJet 5551
HP DeskJet 560C

HP DeskJet 600
HP DeskJet 600C
HP DeskJet 610C
HP DeskJet 610CL
HP DeskJet 6122
HP DeskJet 6127
HP DeskJet 612C
HP DeskJet 640C
HP DeskJet 648C
HP DeskJet 660C
HP DeskJet 670C
HP DeskJet 670TV
HP DeskJet 672C
HP DeskJet 680C
HP DeskJet 682C
HP DeskJet 690C
HP DeskJet 692C
HP DeskJet 693C
HP DeskJet 694C
HP DeskJet 695C
HP DeskJet 697C
HP DeskJet 810C
HP DeskJet 812C
HP DeskJet 815C
HP DeskJet 816C
HP DeskJet 825C
HP DeskJet 830C
HP DeskJet 832C
HP DeskJet 840C
HP DeskJet 841C
HP DeskJet 842C
HP DeskJet 843C
HP DeskJet 845C
HP DeskJet 850C
HP DeskJet 855C
HP DeskJet 870C
HP DeskJet 880C
HP DeskJet 882C
HP DeskJet 890C
HP DeskJet 895C
HP DeskJet 916C

HP DeskJet 920C
HP DeskJet 9300
HP DeskJet 930C
HP DeskJet 932C
HP DeskJet 933C
HP DeskJet 934C
HP DeskJet 935C
HP DeskJet 940C
HP DeskJet 948C
HP DeskJet 950C
HP DeskJet 952C
HP DeskJet 955C
HP DeskJet 957C
HP DeskJet 959C
HP DeskJet 960C
HP DeskJet 970C
HP DeskJet 975C
HP DeskJet 980C
HP DeskJet 990C
HP DeskJet 995C
HP DeskJet 1100C
HP DeskJet 1120C
HP DeskJet 1125C
HP DeskJet 1200C
HP DeskJet 1220C
HP DeskJet 1600C
HP DeskJet 1600CM
HP DeskJet 2000
HP DeskJet 2500
HP DeskJet 2500CM
HP DeskJet 340C
HP DeskJet 3810
HP DeskJet 3816
HP DeskJet 3820
HP DeskJet 3822
HP LaserJet 2
HP LaserJet 2D
HP LaserJet 2P Plus
HP LaserJet 2P
HP LaserJet 3
HP LaserJet 3D

HP LaserJet 3P w/ PCL5
HP LaserJet 3P w/PS
HP LaserJet 4 Plus
HP LaserJet 4
HP LaserJet 4L
HP LaserJet 4M
HP LaserJet 4ML
HP LaserJet 4P
HP LaserJet 4Si
HP LaserJet 4V
HP LaserJet 5
HP LaserJet 5L
HP LaserJet 5M
HP LaserJet 5MP
HP LaserJet 5P
HP LaserJet 5Si
HP LaserJet 6
HP LaserJet 6L
HP LaserJet 6MP
HP LaserJet 6P
HP LaserJet 1010
HP LaserJet 1012
HP LaserJet 1015
HP LaserJet 1022
HP LaserJet 1100
HP LaserJet 1100A
HP LaserJet 1150
HP LaserJet 1160
HP LaserJet 1200
HP LaserJet 1220
HP LaserJet 1300
HP LaserJet 1320
HP LaserJet 2100
HP LaserJet 2100M
HP LaserJet 2200
HP LaserJet 2300
HP LaserJet 2410
HP LaserJet 2420
HP LaserJet 2430
HP LaserJet 3015
HP LaserJet 3020

HP LaserJet 3030
HP LaserJet 3050
HP LaserJet 3052
HP LaserJet 3055
HP LaserJet 3200
HP LaserJet 3200m
HP LaserJet 3200se
HP LaserJet 3300 MFP
HP LaserJet 3310 MFP
HP LaserJet 3320 MFP
HP LaserJet 3320N MFP
HP LaserJet 3330 MFP
HP LaserJet 3380
HP LaserJet 3390
HP LaserJet 3392
HP LaserJet 4000
HP LaserJet 4050
HP LaserJet 4100
HP LaserJet 4200
HP LaserJet 4240
HP LaserJet 4250
HP LaserJet 4300
HP LaserJet 4345 mfp
HP LaserJet 4350
HP LaserJet 5000
HP LaserJet 5100
HP LaserJet 5200
HP LaserJet 5200L
HP LaserJet 8000
HP LaserJet 8100
HP LaserJet 8150
HP LaserJet 9000
HP LaserJet 9040
HP LaserJet 9040 MFP
HP LaserJet 9050
HP LaserJet 9050 MFP
HP LaserJet M3027 MFP
HP LaserJet M3035 MFP
HP LaserJet M4345 MFP
HP LaserJet M5025 MFP
HP LaserJet M5035 MFP

HP LaserJet P2010
HP LaserJet P2015
HP LaserJet P3004
HP LaserJet P3005
HP Mopier 240
HP Mopier 320
HP OfficeJet 300
HP OfficeJet 330
HP OfficeJet 350
HP OfficeJet 500
HP OfficeJet 520
HP OfficeJet 570
HP OfficeJet 580
HP OfficeJet 590
HP OfficeJet 600
HP OfficeJet 610
HP OfficeJet 625
HP OfficeJet 630
HP OfficeJet 635
HP OfficeJet 700
HP OfficeJet 710
HP OfficeJet 720
HP OfficeJet 725
HP OfficeJet 5105
HP OfficeJet 5110
HP OfficeJet 5110xi
HP OfficeJet 6105
HP OfficeJet 6110
HP OfficeJet 7110
HP OfficeJet 7130
HP OfficeJet 7140
HP OfficeJet D125
HP OfficeJet D135
HP OfficeJet D145
HP OfficeJet D155
HP OfficeJet G55
HP OfficeJet G85
HP OfficeJet G95
HP OfficeJet K60
HP OfficeJet K60xi
HP OfficeJet K80

HP OfficeJet K80xi
HP OfficeJet LX
HP OfficeJet Pro 1150C
HP OfficeJet Pro 1170C
HP OfficeJet Pro 1175C
HP OfficeJet R40
HP OfficeJet R45
HP OfficeJet R60
HP OfficeJet R65
HP OfficeJet R80
HP OfficeJet T45
HP OfficeJet T65
HP OfficeJet V40
HP OfficeJet V40xi
HP OfficeJet
HP PSC 370
HP PSC 380
HP PSC 500
HP PSC 750
HP PSC 950
HP PSC 950xi
HP PSC 2110
HP PSC 2150
HP PSC 2210
HP PhotoSmart 7150
HP PhotoSmart 7345
HP PhotoSmart 7350
HP PhotoSmart 7550
HP PhotoSmart P100
HP PhotoSmart P130
HP PhotoSmart P230
HP PhotoSmart P1000
HP PhotoSmart P1100
HP PhotoSmart P1115
HP PhotoSmart P1215
HP PhotoSmart P1218
HP PhotoSmart P1315
HP e-printer e20
HP Deskjet Ink Advantage k109a Printer
HP Deskjet 640c Pavilion Turbo Printer
HP Deskjet 640c Printer

HP Deskjet 640u Printer
HP Deskjet 640c Lite Printer
HP Deskjet 642c Printer
HP Deskjet 656c Printer
HP Deskjet 656cvr Printer
HP Deskjet d730 Printer
HP Deskjet 815c Printer
HP Deskjet 816 Printer
HP Deskjet 830c Printer
HP Deskjet 832c Printer
HP Deskjet 840c Printer
HP Deskjet 842c Printer
HP Deskjet 845cvr Printer
HP Deskjet 845c Printer
HP Deskjet 850k Printer
HP Deskjet 850c Printer
HP Deskjet 920cw Printer
HP Deskjet 920cxi Printer
HP Deskjet 920c Printer
HP Deskjet 920cvr Printer
HP Deskjet 930c Printer
HP Deskjet 930cm Printer
HP Deskjet 932c Printer
HP Deskjet 933c Printer
HP Deskjet 934c Printer
HP Deskjet 935c Printer
HP Deskjet 940cw Printer
HP Deskjet 940cxi Printer
HP Deskjet 940cvr Printer
HP Deskjet 940c Printer
HP Deskjet 948c Printer
HP Deskjet 955c Printer
HP Deskjet 990cm Printer
HP Deskjet 990c Printer
HP Deskjet 990cxi Printer
HP Deskjet 990cse Printer
HP Deskjet 995ck Color Inkjet Printer
HP Deskjet 1000 j110 Series
HP Deskjet Ink Advantage 1010 Printer Series
HP Deskjet 1010 Printer
HP Deskjet 1011 Printer

HP Deskjet 1012 Printer
HP Deskjet Ink Advantage 1015 Printer
HP Deskjet Ink Advantage 1018 Printer
HP Deskjet d1311 Printer
HP Deskjet d1320 Printer
HP Deskjet d1330 Printer
HP Deskjet d1341 Printer
HP Deskjet d1360 Printer
HP Deskjet d1368 Printer
HP Deskjet d1415 Printer
HP Deskjet d1420 Printer
HP Deskjet d1430 Printer
HP Deskjet d1445 Printer
HP Deskjet d1455 Printer
HP Deskjet d1460 Printer
HP Deskjet d1468 Printer
HP Deskjet d1470 Printer
HP Deskjet d1520 Printer
HP Deskjet d1530 Printer
HP Deskjet d1550 Printer
HP Deskjet d1555 Printer
HP Deskjet d1558 Printer
HP Deskjet d1560 Printer
HP Deskjet d1568 Printer
HP Deskjet d1620 Printer
HP Deskjet d1630 Printer
HP Deskjet d1650 Printer
HP Deskjet d1658 Printer
HP Deskjet d1660 Printer
HP Deskjet d1663 Printer
HP Deskjet d1668 Printer
HP Deskjet 2000 j210 Series
HP Deskjet Ink Adv 2010 k010
HP Deskjet Ink Advantage 2020hc Printer
HP Deskjet d2320 Printer
HP Deskjet d2330 Printer
HP Deskjet d2345 Printer
HP Deskjet d2360 Printer
HP Deskjet d2368 Printer
HP Deskjet d2430 Printer
HP Deskjet d2445 Printer

HP Deskjet d2460 Printer
HP Deskjet d2466 Printer
HP Deskjet d2468 Printer
HP Deskjet d2530 Printer
HP Deskjet d2545 Printer
HP Deskjet d2560 Printer
HP Deskjet d2563 Printer
HP Deskjet d2566 Printer
HP Deskjet d2568 Printer
HP Deskjet d2645 Printer
HP Deskjet d2660 Printer
HP Deskjet d2663 Printer
HP Deskjet d2666 Printer
HP Deskjet d2668 Printer
HP Deskjet d2680 Printer
HP Deskjet 3000 j310 Series
HP Deskjet 3320v Color Inkjet Printer
HP Deskjet 3320 Color Inkjet Printer
HP Deskjet 3322 Color Inkjet Printer
HP Deskjet 3323 Color Inkjet Printer
HP Deskjet 3420 Color Inkjet Printer
HP Deskjet 3420v Color Inkjet Printer
HP Deskjet 3450 Color Inkjet Printer
HP Deskjet 3500 Color Inkjet Printer
HP Deskjet 3520w Color Inkjet Printer
HP Deskjet 3520v Color Inkjet Printer
HP Deskjet 3520 Color Inkjet Printer
HP Deskjet 3535 Color Inkjet Printer
HP Deskjet 3538 Color Inkjet Printer
HP Deskjet 3550w Color Inkjet Printer
HP Deskjet 3550v Color Inkjet Printer
HP Deskjet 3550 Color Inkjet Printer
HP Deskjet 3558 Color Inkjet Printer
HP Deskjet 3620 Color Inkjet Printer
HP Deskjet 3645 Color Inkjet Printer
HP Deskjet 3647 Color Inkjet Printer
HP Deskjet 3650 Color Inkjet Printer
HP Deskjet 3651 Color Inkjet Printer
HP Deskjet 3652 Color Inkjet Printer
HP Deskjet 3653 Color Inkjet Printer
HP Deskjet 3658 Color Inkjet Printer

HP Deskjet 3668 Color Inkjet Printer
HP Deskjet 3740 Color Inkjet Printer
HP Deskjet 3743 Color Inkjet Printer
HP Deskjet 3744 Color Inkjet Printer
HP Deskjet 3745 Color Inkjet Printer
HP Deskjet 3745v Color Inkjet Printer
HP Deskjet 3747 Color Inkjet Printer
HP Deskjet 3748 Color Inkjet Printer
HP Deskjet 3820v Color Inkjet Printer
HP Deskjet 3820w Color Inkjet Printer
HP Deskjet 3820 Color Inkjet Printer
HP Deskjet 3843 Color Inkjet Printer
HP Deskjet 3844 Color Inkjet Printer
HP Deskjet 3845xi Color Inkjet Printer
HP Deskjet 3845 Color Inkjet Printer
HP Deskjet 3847 Color Inkjet Printer
HP Deskjet 3848 Color Inkjet Printer
HP Deskjet 3910 Color Inkjet Printer
HP Deskjet 3915 Color Inkjet Printer
HP Deskjet 3918 Color Inkjet Printer
HP Deskjet 3920 Color Inkjet Printer
HP Deskjet 3930v Color Inkjet Printer
HP Deskjet 3930 Color Inkjet Printer
HP Deskjet 3938 Color Inkjet Printer
HP Deskjet 3940v Color Inkjet Printer
HP Deskjet 3940 Color Inkjet Printer
HP Deskjet d4145 Printer
HP Deskjet d4155 Printer
HP Deskjet d4160 Printer
HP Deskjet d4163 Printer
HP Deskjet d4168 Printer
HP Deskjet d4245 Printer
HP Deskjet d4260 Printer
HP Deskjet d4263 Printer
HP Deskjet d4266 Printer
HP Deskjet d4268 Printer
HP Deskjet d4360 Printer
HP Deskjet d4363 Printer
HP Deskjet d4368 Printer
HP Deskjet 5100 Color Inkjet Printer
HP Deskjet 5145 Color Inkjet Printer

HP Deskjet 5150 Color Inkjet Printer
HP Deskjet 5150w Color Inkjet Printer
HP Deskjet 5150v Color Inkjet Printer
HP Deskjet 5151 Color Inkjet Printer
HP Deskjet 5160 Color Inkjet Printer
HP Deskjet 5168 Color Inkjet Printer
HP Deskjet 5420v Photo Printer
HP Deskjet 5432 Photo Printer
HP Deskjet 5438 Photo Printer
HP Deskjet 5440xi Photo Printer
HP Deskjet 5440v Photo Printer
HP Deskjet 5440 Photo Printer
HP Deskjet 5442 Photo Printer
HP Deskjet 5443 Photo Printer
HP Deskjet d5545 Printer
HP Deskjet 5550 Color Inkjet Printer
HP Deskjet 5550v Color Inkjet Printer
HP Deskjet 5550w Color Inkjet Printer
HP Deskjet 5551 Color Inkjet Printer
HP Deskjet d5560 Printer
HP Deskjet d5563 Printer
HP Deskjet d5568 Printer
HP Deskjet 5652 Color Inkjet Printer
HP Deskjet 5700 Color Inkjet Printer
HP Deskjet 5740 Color Inkjet Printer
HP Deskjet 5740xi Color Inkjet Printer
HP Deskjet 5743 Color Inkjet Printer
HP Deskjet 5745 Color Inkjet Printer
HP Deskjet 5748 Color Inkjet Printer
HP Deskjet 5938 Photo Printer
HP Deskjet 5940xi Photo Printer
HP Deskjet 5940 Photo Printer
HP Deskjet 5943 Photo Printer
HP Deskjet 6122 Color Inkjet Printer
HP Deskjet 6127 Color Inkjet Printer
HP Deskjet 6500 Color Inkjet Printer
HP Deskjet 6520 Color Inkjet Printer
HP Deskjet 6520xi Color Inkjet Printer
HP Deskjet 6540xi Color Inkjet Printer
HP Deskjet 6540dt Color Inkjet Printer
HP Deskjet 6540 Color Inkjet Printer

HP Deskjet 6540d Color Inkjet Printer
HP Deskjet 6543 Color Inkjet Printer
HP Deskjet 6543d Color Inkjet Printer
HP Deskjet 6548 Color Inkjet Printer
HP Deskjet 6600 Series Color Inkjet Printer
HP Deskjet 6620 Color Inkjet Printer
HP Deskjet 6620xi Color Inkjet Printer
HP Deskjet 6623 Color Inkjet Printer
HP Deskjet 6628 Color Inkjet Printer
HP Deskjet 6800 Color Inkjet Printer
HP Deskjet 6830v Color Inkjet Printer
HP Deskjet 6840dt Color Inkjet Printer
HP Deskjet 6840 Color Inkjet Printer
HP Deskjet 6840xi Color Inkjet Printer
HP Deskjet 6843 Color Inkjet Printer
HP Deskjet 6848 Color Inkjet Printer
HP Deskjet 6850 Color Inkjet Printer
HP Deskjet 6940 Printer
HP Deskjet 6940dt Printer
HP Deskjet 6943 Printer
HP Deskjet 6980dt Printer
HP Deskjet 6980 Printer
HP Deskjet 6980xi Printer
HP Deskjet 6983 Printer
HP Deskjet 6988 Printer
HP Deskjet 6988xi Printer
HP Deskjet 6988dt Printer
HP Deskjet 9650 Printer
HP Deskjet 9670 Printer
HP Deskjet 9680gp Printer
HP Deskjet 9680 Printer
HP Deskjet Ink Advantage k209a All-in-one Printer
HP Deskjet f310 All-in-one Printer
HP Deskjet f325 All-in-one Printer
HP Deskjet f335 All-in-one Printer
HP Deskjet f340 All-in-one Printer
HP Deskjet f350 All-in-one Printer
HP Deskjet f370 All-in-one Printer
HP Deskjet f375 All-in-one Printer
HP Deskjet f378 All-in-one Printer
HP Deskjet f379 All-in-one Printer

HP Deskjet f380 All-in-one Printer
HP Deskjet f385 All-in-one Printer
HP Deskjet f388 All-in-one Printer
HP Deskjet f390 All-in-one Printer
HP Deskjet f394 All-in-one Printer
HP Deskjet f735 All-in-one Printer
HP Deskjet 1050 j410 All-in-one Printer
HP Deskjet 1051 All-in-one Printer
HP Deskjet 1055 All-in-one Printer -j410e
HP Deskjet 1056 All-in-one Printer -j410a
HP Deskjet 1510 All-in-one Printer
HP Deskjet Ink Advantage 1510 All-in-one Printer Series
HP Deskjet 1511 All-in-one Printer
HP Deskjet 1512 All-in-one Printer
HP Deskjet 1513 All-in-one Printer
HP Deskjet 1514 All-in-one Printer
HP Deskjet Ink Advantage 1515 All-in-one Printer
HP Deskjet Ink Advantage 1516 All-in-one Printer
HP Deskjet Ink Advantage 1518 All-in-one Printer
HP Deskjet 2050 j510 All-in-one Printer
HP Deskjet Ink Adv 2060 k110
HP Deskjet f2110 All-in-one Printer
HP Deskjet f2120 All-in-one Printer
HP Deskjet f2128 All-in-one Printer
HP Deskjet f2140 All-in-one Printer
HP Deskjet f2179 All-in-one Printer
HP Deskjet f2180 All-in-one Printer
HP Deskjet f2185 All-in-one Printer
HP Deskjet f2187 All-in-one Printer
HP Deskjet f2188 All-in-one Printer
HP Deskjet f2210 All-in-one Printer
HP Deskjet f2212 All-in-one Printer
HP Deskjet f2214 All-in-one Printer
HP Deskjet f2224 All-in-one Printer
HP Deskjet f2235 All-in-one Printer
HP Deskjet f2238 All-in-one Printer
HP Deskjet f2240 All-in-one Printer
HP Deskjet f2250 All-in-one Printer
HP Deskjet f2275 All-in-one Printer
HP Deskjet f2276 All-in-one Printer
HP Deskjet f2280 All-in-one Printer

HP Deskjet f2288 All-in-one Printer
HP Deskjet f2290 All-in-one Printer
HP Deskjet f2410 All-in-one Printer
HP Deskjet f2418 All-in-one Printer
HP Deskjet f2420 All-in-one Printer
HP Deskjet f2423 All-in-one Printer
HP Deskjet f2430 All-in-one Printer
HP Deskjet f2440 All-in-one Printer
HP Deskjet f2476 All-in-one Printer
HP Deskjet f2480 All-in-one Printer
HP Deskjet f2483 All-in-one Printer
HP Deskjet f2488 All-in-one Printer
HP Deskjet f2492 All-in-one Printer
HP Deskjet f2493 All-in-one Printer
HP Deskjet Ink Advantage 2520hc All-in-one
HP Deskjet Ink Advantage 2540 All-in-one Printer Series
HP Deskjet 2540 All-in-one Printer
HP Deskjet 2542 All-in-one Printer
HP Deskjet 2543 All-in-one Printer
HP Deskjet 2544 All-in-one Printer
HP Deskjet Ink Advantage 2545 All-in-one Printer
HP Deskjet Ink Advantage 2546 All-in-one Printer
HP Deskjet Ink Advantage 2548 All-in-one Printer
HP Deskjet 2549 All-in-one Printer
HP Deskjet Ink Advantage 2645 All-in-one Printer
HP Deskjet Ink Advantage 2646 All-in-one Printer
HP Deskjet 3050a j611 Series
HP Deskjet 3051a E-all-in-one Printer j611h
HP Deskjet 3052a E-all-in-one Printer j611e
HP Deskjet 3052a E-all-in-one Printer j611g
HP Deskjet 3052a E-all-in-one Printer j611f
HP Deskjet 3054a E-all-in-one Printer j611j
HP Deskjet 3054a E-all-in-one Printer j611c
HP Deskjet 3054a E-all-in-one Printer j611d
HP Deskjet 3055a E-all-in-one Printer j611n
HP Deskjet 3056a E-all-in-one Printer
HP Deskjet 3057a E-all-in-one Printer j611n
HP Deskjet 3059a E-all-in-one Printer j611n
HP Deskjet 3070 b611 Series
HP Deskjet 3520 E-all-in-one Series
HP Deskjet 3521 E-all-in-one Printer

HP Deskjet 3522 E-all-in-one Printer
HP Deskjet 3524 E-all-in-one Printer
HP Deskjet Ink Advantage 3525 E-all-in-one
HP Deskjet 3526 E-all-in-one Printer
HP Deskjet Ink Advantage 3540 E-all-in-one Printer Series
HP Deskjet Ink Advantage 3545 E-all-in-one Printer
HP Deskjet Ink Advantage 3546 E-all-in-one Printer
HP Deskjet f4135 All-in-one Printer
HP Deskjet f4140 All-in-one Printer
HP Deskjet f4150 All-in-one Printer
HP Deskjet f4172 All-in-one Printer
HP Deskjet f4175 All-in-one Printer
HP Deskjet f4180 All-in-one Printer
HP Deskjet f4185 All-in-one Printer
HP Deskjet f4188 All-in-one Printer
HP Deskjet f4190 All-in-one Printer
HP Deskjet f4194 All-in-one Printer
HP Deskjet f4210 All-in-one Printer
HP Deskjet f4213 All-in-one Printer
HP Deskjet f4224 All-in-one Printer
HP Deskjet f4230 All-in-one Printer
HP Deskjet f4235 All-in-one Printer
HP Deskjet f4238 All-in-one Printer
HP Deskjet f4240 All-in-one Printer
HP Deskjet f4250 All-in-one Printer
HP Deskjet f4272 All-in-one Printer
HP Deskjet f4273 All-in-one Printer
HP Deskjet f4274 All-in-one Printer
HP Deskjet f4275 All-in-one Printer
HP Deskjet f4280 All-in-one
HP Deskjet f4280 All-in-one Printer
HP Deskjet f4283 All-in-one Printer
HP Deskjet f4288 All-in-one Printer
HP Deskjet f4292 All-in-one Printer
HP Deskjet f4293 All-in-one Printer
HP Deskjet f4294 All-in-one Printer
HP Deskjet f4435 All-in-one Printer
HP Deskjet f4440 All-in-one Printer
HP Deskjet f4450 All-in-one Printer
HP Deskjet f4470 All-in-one Printer
HP Deskjet f4472 All-in-one Printer

HP Deskjet f4473 All-in-one Printer
HP Deskjet f4480 All-in-one Printer
HP Deskjet f4483 All-in-one Printer
HP Deskjet f4488 All-in-one Printer
HP Deskjet f4492 All-in-one Printer
HP Deskjet f4500 All-in-one Printer Series
HP Deskjet Ink Advantage 4515 E-all-in-one Printer
HP Deskjet Ink Advantage 4518 E-all-in-one Printer
HP Deskjet Ink Advantage 4610 All-in-one Printer Series
HP Deskjet Ink Advantage 4615 All-in-one Printer
HP Deskjet Ink Advantage 4620 E-all-in-one Printer
HP Deskjet Ink Advantage 4625 E-all-in-one Printer
HP Deskjet Ink Advantage 4640 E-all-in-one Printer Series
HP Deskjet Ink Advantage 4645 E-all-in-one Printer
HP Deskjet Ink Advantage 4646 E-all-in-one Printer
HP Deskjet Ink Advantage 4648 E-all-in-one Printer
HP Deskjet Ink Advantage 5525 E-all-in-one
HP Deskjet Ink Advantage 6525 E-all-in-one
HP Photosmart All-in-one Printer - b010
HP Photosmart All-in-one Printer - b109d
HP Photosmart All-in-one Printer - b109e
HP Photosmart All-in-one Printer - b109c
HP Photosmart All-in-one Printer - b109a
HP Photosmart Wireless All-in-one Printer - b109q
HP Photosmart Wireless All-in-one Printer - b109n
HP Photosmart Wireless All-in-one Printer - b109q=r
HP Photosmart Wireless All-in-one Printer - b110
HP Photosmart d110 Series Printer
HP Photosmart 130v Printer
HP Photosmart 130xi Printer
HP Photosmart 130 Printer
HP Photosmart Plus All-in-one Printer - b209b
HP Photosmart Plus All-in-one Printer - b209a
HP Photosmart Plus All-in-one Printer - b209c
HP Photosmart Plus b210 Series
HP Photosmart Premium All-in-one Printer Series - c309h
HP Photosmart Premium All-in-one Printer Series - c309g
HP Photosmart Premium Fax All-in-one Printer - c309a
HP Photosmart Premium Fax All-in-one Printer Series -c309c
HP Photosmart Premium Fax All-in-one Printer Series -c309a
HP Photosmart Prem c310 Series

HP Photosmart a320 Compact Photo Printer
HP Photosmart 320 Compact Photo Printer
HP Photosmart a321 Compact Photo Printer
HP Photosmart 325v Compact Photo Printer
HP Photosmart 325xi Compact Photo Printer
HP Photosmart 325 Compact Photo Printer
HP Photosmart 329 Compact Photo Printer
HP Photosmart 370 Compact Photo Printer
HP Photosmart 375bxi Compact Photo Printer With Battery
HP Photosmart 375b Compact Photo Printer With Battery
HP Photosmart 375xi Compact Photo Printer
HP Photosmart 375v Compact Photo Printer
HP Photosmart 375 Compact Photo Printer
HP Photosmart 385 Compact Photo Printer
HP Photosmart 385v Compact Photo Printer
HP Photosmart 385xi Compact Photo Printer
HP Photosmart Prem c410 Series
HP Photosmart Estn c510 Series
HP Photosmart a510 Compact Photo Printer
HP Photosmart Ink Adv k510
HP Photosmart a512 Compact Photo Printer
HP Photosmart a516 Compact Photo Printer
HP Photosmart a522xi Compact Photo Printer
HP Photosmart a522 Compact Photo Printer
HP Photosmart a525 Compact Photo Printer
HP Photosmart a526 Compact Photo Printer
HP Photosmart a528 Compact Photo Printer
HP Photosmart a532 Compact Photo Printer
HP Photosmart a536 Compact Photo Printer
HP Photosmart a538 Compact Photo Printer
HP Photosmart a610 Compact Photo Printer
HP Photosmart a612 Compact Photo Printer
HP Photosmart a616 Compact Photo Printer
HP Photosmart a617 Compact Photo Printer
HP Photosmart a618 Compact Photo Printer
HP Photosmart a620 Compact Photo Printer
HP Photosmart a622 Compact Photo Printer
HP Photosmart a626 Compact Photo Printer
HP Photosmart a627 Compact Photo Printer
HP Photosmart a628 Compact Photo Printer
HP Photosmart a636 Compact Photo Printer

HP Photosmart a637 Compact Photo Printer
HP Photosmart a640 Printer Series
HP Photosmart a712 Compact Photo Printer
HP Photosmart a716 Compact Photo Printer
HP Photosmart a717 Compact Photo Printer
HP Photosmart a826 Home Photo Center
HP Photosmart a827 Home Photo Center
HP Photosmart a828 Home Photo Center
HP Photosmart 2570 All-in-one Printer
HP Photosmart 2571 All-in-one Printer
HP Photosmart 2573 All-in-one Printer
HP Photosmart 2574 All-in-one Printer
HP Photosmart 2575v All-in-one Printer
HP Photosmart 2575a All-in-one Printer
HP Photosmart 2575xi All-in-one Printer
HP Photosmart 2575 All-in-one Printer
HP Photosmart 2578 All-in-one Printer
HP Photosmart 2605 All-in-one Printer
HP Photosmart 2608 All-in-one Printer
HP Photosmart 2610 All-in-one Printer
HP Photosmart 2610v All-in-one Printer
HP Photosmart 2610xi All-in-one Printer
HP Photosmart 2613 All-in-one Printer
HP Photosmart 2615 All-in-one Printer
HP Photosmart 2710 All-in-one Printer
HP Photosmart 2710xi All-in-one Printer
HP Photosmart 2713 All-in-one Printer
HP Photosmart 3108 All-in-one Printer
HP Photosmart 3110v All-in-one Printer
HP Photosmart 3110 All-in-one Printer
HP Photosmart c3110 All-in-one Printer
HP Photosmart c3125 All-in-one Printer
HP Photosmart c3135 All-in-one Printer
HP Photosmart c3140 All-in-one Printer
HP Photosmart c3150 All-in-one Printer
HP Photosmart c3170 All-in-one Printer
HP Photosmart c3173 All-in-one Printer
HP Photosmart c3175 All-in-one Printer
HP Photosmart c3180 All-in-one Printer
HP Photosmart c3183 All-in-one Printer
HP Photosmart c3188 All-in-one Printer

HP Photosmart c3190 All-in-one Printer
HP Photosmart c3193 All-in-one Printer
HP Photosmart c3194 All-in-one Printer
HP Photosmart 3207 All-in-one Printer
HP Photosmart 3210a All-in-one Printer
HP Photosmart 3210v All-in-one Printer
HP Photosmart 3210xi All-in-one Printer
HP Photosmart 3210 All-in-one Printer
HP Photosmart 3213 All-in-one Printer
HP Photosmart 3214 All-in-one Printer
HP Photosmart 3308 All-in-one Printer
HP Photosmart 3310 All-in-one Printer
HP Photosmart 3310xi All-in-one Printer
HP Photosmart 3313 All-in-one Printer
HP Photosmart 3314 All-in-one Printer
HP Photosmart c4110 All-in-one Printer
HP Photosmart c4140 All-in-one Printer
HP Photosmart c4150 All-in-one Printer
HP Photosmart c4170 All-in-one Printer
HP Photosmart c4173 All-in-one Printer
HP Photosmart c4175 All-in-one Printer
HP Photosmart c4180 All-in-one Printer
HP Photosmart c4183 All-in-one Printer
HP Photosmart c4188 All-in-one Printer
HP Photosmart c4190 All-in-one Printer
HP Photosmart c4193 All-in-one Printer
HP Photosmart c4194 All-in-one Printer
HP Photosmart c4205 All-in-one Printer
HP Photosmart c4210 All-in-one Printer
HP Photosmart c4235 All-in-one Printer
HP Photosmart c4240 All-in-one Printer
HP Photosmart c4250 All-in-one Printer
HP Photosmart c4270 All-in-one Printer
HP Photosmart c4272 All-in-one Printer
HP Photosmart c4273 All-in-one Printer
HP Photosmart c4275 All-in-one Printer
HP Photosmart c4280 All-in-one Printer
HP Photosmart c4283 All-in-one Printer
HP Photosmart c4285 All-in-one Printer
HP Photosmart c4288 All-in-one Printer
HP Photosmart c4293 All-in-one Printer

HP Photosmart c4294 All-in-one Printer
HP Photosmart c4340 All-in-one Printer
HP Photosmart c4342 All-in-one Printer
HP Photosmart c4343 All-in-one Printer
HP Photosmart c4344 All-in-one Printer
HP Photosmart c4345 All-in-one Printer
HP Photosmart c4348 All-in-one Printer
HP Photosmart c4380 All-in-one Printer
HP Photosmart c4383 All-in-one Printer
HP Photosmart c4384 All-in-one Printer
HP Photosmart c4385 All-in-one Printer
HP Photosmart c4388 All-in-one Printer
HP Photosmart c4410 All-in-one Printer
HP Photosmart c4424 All-in-one Printer
HP Photosmart c4435 All-in-one Printer
HP Photosmart c4440 All-in-one Printer
HP Photosmart c4450 All-in-one Printer
HP Photosmart c4470 All-in-one Printer
HP Photosmart c4472 All-in-one Printer
HP Photosmart c4473 All-in-one Printer
HP Photosmart c4480 All-in-one Printer
HP Photosmart c4483 All-in-one Printer
HP Photosmart c4485 All-in-one Printer
HP Photosmart c4486 All-in-one Printer
HP Photosmart c4488 All-in-one Printer
HP Photosmart c4490 All-in-one Printer
HP Photosmart c4493 All-in-one Printer
HP Photosmart c4494 All-in-one Printer
HP Photosmart c4540 All-in-one Printer
HP Photosmart c4550 All-in-one Printer
HP Photosmart c4570 All-in-one Printer
HP Photosmart c4572 All-in-one Printer
HP Photosmart c4573 All-in-one Printer
HP Photosmart c4575 All-in-one Printer
HP Photosmart c4580 All-in-one Printer
HP Photosmart c4583 All-in-one Printer
HP Photosmart c4585 All-in-one Printer
HP Photosmart c4588 All-in-one Printer
HP Photosmart c4593 All-in-one Printer
HP Photosmart c4599 All-in-one Printer
HP Photosmart c4610 All-in-one Printer

HP Photosmart c4635 All-in-one Printer
HP Photosmart c4640 All-in-one Printer
HP Photosmart c4650 All-in-one Printer
HP Photosmart c4670 All-in-one Printer
HP Photosmart c4673 All-in-one Printer
HP Photosmart c4680 All-in-one Printer
HP Photosmart c4683 All-in-one Printer
HP Photosmart c4688 All-in-one Printer
HP Photosmart c4740 All-in-one Printer
HP Photosmart c4750 All-in-one Printer
HP Photosmart c4780 All-in-one Printer
HP Photosmart c4783 All-in-one Printer
HP Photosmart c4785 All-in-one Printer
HP Photosmart c4788 All-in-one Printer
HP Photosmart c4793 All-in-one Printer
HP Photosmart c4795 All-in-one Printer
HP Photosmart c4798 All-in-one Printer
HP Photosmart c4799 All-in-one Printer
HP Photosmart d5060 Printer
HP Photosmart d5063 Printer
HP Photosmart d5065 Printer
HP Photosmart d5069 Printer
HP Photosmart c5140 All-in-one Printer
HP Photosmart d5145 Printer
HP Photosmart c5150 All-in-one Printer
HP Photosmart d5155 Printer
HP Photosmart d5156 Printer
HP Photosmart d5160 Printer
HP Photosmart d5163 Printer
HP Photosmart d5168 Printer
HP Photosmart c5170 All-in-one Printer
HP Photosmart c5173 All-in-one Printer
HP Photosmart c5175 All-in-one Printer
HP Photosmart c5180 All-in-one Printer
HP Photosmart c5183 All-in-one Printer
HP Photosmart c5185 All-in-one Printer
HP Photosmart c5188 All-in-one Printer
HP Photosmart c5194 All-in-one Printer
HP Photosmart c5240 All-in-one Printer
HP Photosmart c5250 All-in-one Printer
HP Photosmart c5270 All-in-one Printer

HP Photosmart c5273 All-in-one Printer
HP Photosmart c5275 All-in-one Printer
HP Photosmart c5280 All-in-one Printer
HP Photosmart c5283 All-in-one Printer
HP Photosmart c5288 All-in-one Printer
HP Photosmart c5290 All-in-one Printer
HP Photosmart c5293 All-in-one Printer
HP Photosmart d5345 Printer
HP Photosmart d5360 Printer
HP Photosmart d5363 Printer
HP Photosmart d5368 Printer
HP Photosmart c5370 All-in-one Printer
HP Photosmart c5373 All-in-one Printer
HP Photosmart c5380 All-in-one Printer
HP Photosmart c5383 All-in-one Printer
HP Photosmart c5388 All-in-one Printer
HP Photosmart c5390 All-in-one Printer
HP Photosmart c5393 All-in-one Printer
HP Photosmart d5460 Printer
HP Photosmart d5463 Printer
HP Photosmart d5468 Printer
HP Photosmart 5510 E-all-in-one
HP Photosmart 5510d E-all-in-one
HP Photosmart 5520 E-all-in-one
HP Photosmart 5521 E-all-in-one Printer
HP Photosmart 5522 E-all-in-one Printer
HP Photosmart 5524 E-all-in-one Printer
HP Photosmart 5525 E-all-in-one Printer
HP Photosmart c5540 All-in-one Printer
HP Photosmart c5550 All-in-one Printer
HP Photosmart c5570 All-in-one Printer
HP Photosmart c5580 All-in-one Printer
HP Photosmart c6150 All-in-one Printer
HP Photosmart c6154 All-in-one Printer
HP Photosmart c6170 All-in-one Printer
HP Photosmart c6175 All-in-one Printer
HP Photosmart c6180 All-in-one Printer
HP Photosmart c6183 All-in-one Printer
HP Photosmart c6185 All-in-one Printer
HP Photosmart c6188 All-in-one Printer
HP Photosmart c6190 All-in-one Printer

HP Photosmart c6240 All-in-one Printer
HP Photosmart c6245 All-in-one Printer
HP Photosmart c6250 All-in-one Printer
HP Photosmart c6260 All-in-one Printer
HP Photosmart c6263 All-in-one Printer
HP Photosmart c6268 All-in-one Printer
HP Photosmart c6270 All-in-one Printer
HP Photosmart c6275 All-in-one Printer
HP Photosmart c6280 All-in-one Printer
HP Photosmart c6283 All-in-one Printer
HP Photosmart c6285 All-in-one Printer
HP Photosmart c6286 All-in-one Printer
HP Photosmart c6288 All-in-one Printer
HP Photosmart c6324 All-in-one Printer
HP Photosmart c6340 All-in-one Printer
HP Photosmart c6350 All-in-one Printer
HP Photosmart c6375 All-in-one Printer
HP Photosmart c6380 All-in-one Printer
HP Photosmart c6383 All-in-one Printer
HP Photosmart c6388 All-in-one Printer
HP Photosmart 6510 E-all-in-one
HP Photosmart 6520 E All-in-one
HP Photosmart 6525 E All-in-one
HP Photosmart d7145 Printer
HP Photosmart c7150 All-in-one Printer
HP Photosmart c7154 All-in-one Printer
HP Photosmart d7155 Printer
HP Photosmart d7160 Printer
HP Photosmart d7163 Printer
HP Photosmart d7168 Printer
HP Photosmart c7170 All-in-one Printer
HP Photosmart c7180 All-in-one Printer
HP Photosmart c7183 All-in-one Printer
HP Photosmart c7185 All-in-one Printer
HP Photosmart c7188 All-in-one Printer
HP Photosmart c7190 All-in-one Printer
HP Photosmart d7245 Printer
HP Photosmart c7250 All-in-one Printer
HP Photosmart d7255 Printer
HP Photosmart d7260 Printer
HP Photosmart d7263 Printer

HP Photosmart d7268 Printer
HP Photosmart c7275 All-in-one Printer
HP Photosmart c7280 All-in-one Printer
HP Photosmart c7283 All-in-one Printer
HP Photosmart c7288 All-in-one Printer
HP Photosmart 7345 Printer
HP Photosmart d7345 Printer
HP Photosmart d7355 Printer
HP Photosmart d7360 Printer
HP Photosmart d7363 Printer
HP Photosmart d7368 Printer
HP Photosmart 7450 Photo Printer
HP Photosmart 7450v Photo Printer
HP Photosmart 7450xi Photo Printer
HP Photosmart 7458 Photo Printer
HP Photosmart 7459 Photo Printer
HP Photosmart d7460 Printer
HP Photosmart d7463 Printer
HP Photosmart d7468 Printer
HP Photosmart 7510 E-all-in-one
HP Photosmart 7520 E-all-in-one
HP Photosmart 7525 E-all-in-one
HP Photosmart 7550 Printer
HP Photosmart 7550w Printer
HP Photosmart 7550v Printer
HP Photosmart 7655 Photo Printer
HP Photosmart 7660 Photo Printer
HP Photosmart 7755 Photo Printer
HP Photosmart 7760od Photo Printer
HP Photosmart 7760w Photo Printer
HP Photosmart 7760 Photo Printer
HP Photosmart 7760v Photo Printer
HP Photosmart 7762 Photo Printer
HP Photosmart 7762w Photo Printer
HP Photosmart 7830 Printer
HP Photosmart 7838 Printer
HP Photosmart 7850 Printer
HP Photosmart 7850vxi Printer
HP Photosmart 7850v Printer
HP Photosmart 7853 Printer
HP Photosmart 8030 Printer

HP Photosmart 8038 Printer
HP Photosmart 8049 Printer
HP Photosmart 8050xi Printer
HP Photosmart 8050 Printer
HP Photosmart 8050v Printer
HP Photosmart 8053 Printer
HP Photosmart 8150v Photo Printer
HP Photosmart c8150 All-in-one Printer
HP Photosmart 8150 Photo Printer
HP Photosmart 8150xi Photo Printer
HP Photosmart 8153 Photo Printer
HP Photosmart 8158 Photo Printer
HP Photosmart c8180 All-in-one Printer
HP Photosmart c8183 All-in-one Printer
HP Photosmart c8188 All-in-one Printer
HP Photosmart 8230 Printer
HP Photosmart 8238 Printer
HP Photosmart 8250xi Printer
HP Photosmart 8250v Printer
HP Photosmart 8250 Printer
HP Photosmart 8253 Printer
HP Photosmart Pro b8330 Printer
HP Photosmart Pro b8338 Printer
HP Photosmart Pro b8350 Printer
HP Photosmart Pro b8353 Printer
HP Photosmart 8450 Photo Printer
HP Photosmart 8450xi Photo Printer
HP Photosmart 8450v Photo Printer
HP Photosmart 8450gp Photo Printer
HP Photosmart 8453 Photo Printer
HP Photosmart 8458 Photo Printer
HP Photosmart b8550 Photo Printer
HP Photosmart b8553 Photo Printer
HP Photosmart b8558 Photo Printer
HP Photosmart 8750gp Professional Photo Printer
HP Photosmart 8750xi Professional Photo Printer
HP Photosmart 8750 Professional Photo Printer
HP Photosmart 8753 Professional Photo Printer
HP Photosmart 8758 Professional Photo Printer
HP Photosmart Pro b8850 Printer
HP Officejet t45xi All-in-one Printer

HP Officejet r45 All-in-one Printer
HP Officejet t45 All-in-one Printer
HP Officejet t65xi All-in-one Printer
HP Officejet t65 All-in-one Printer
HP Officejet r65 All-in-one Printer
HP Officejet k80 All-in-one Printer
HP Officejet 100 Mobile l411
HP Officejet d125xi All-in-one Printer
HP Officejet d135 All-in-one Printer
HP Officejet d135xi All-in-one Printer
HP Officejet d145xi All-in-one Printer
HP Officejet d145 All-in-one Printer
HP Officejet 150 Mobile All-in-one
HP Officejet d155xi All-in-one Printer
HP Officejet Pro 251dw Printer
HP Officejet Pro 276dw Multifunction Printer
HP Officejet Pro x451dn Printer
HP Officejet Pro x451dw Printer
HP Officejet Pro x451 Printer Series
HP Officejet h470bt Mobile Printer
HP Officejet h470 Mobile Printer
HP Officejet h470wbt Mobile Printer
HP Officejet h470wf Mobile Printer
HP Officejet Pro x476dn Multifunction Printer
HP Officejet Pro x476 Multifunction Printer Series
HP Officejet Pro x476dw Multifunction Printer
HP Officejet Pro x551dw Printer
HP Officejet Pro x551 Printer Series
HP Officejet Enterprise Color x555xh Printer
HP Officejet Enterprise Color x555dn Printer
HP Officejet Pro x576dw Multifunction Printer
HP Officejet Pro x576 Multifunction Printer Series
HP Officejet Enterprise Color x585dn Multifunction Printer
HP Officejet Enterprise Color Flow x585z Multifunction Printer
HP Officejet Enterprise Color x585f Multifunction Printer
HP Officejet 2620 All-in-one
HP Officejet 2621 All-in-one
HP Officejet 2622 All-in-one
HP Officejet j3508 All-in-one Printer
HP Officejet j3608 All-in-one Printer
HP Officejet Pro 3610 Black And White E-all-in-one

HP Officejet Pro 3620 Black And White E-all-in-one
HP Officejet j3625 All-in-one Printer
HP Officejet j3635 All-in-one Printer
HP Officejet j3640 All-in-one Printer
HP Officejet j3650 All-in-one Printer
HP Officejet j3680 All-in-one Printer
HP Officejet 4000 k210 Printer
HP Officejet 4200 All-in-one Printer
HP Officejet 4211 All-in-one Printer
HP Officejet 4212 All-in-one Printer
HP Officejet 4215 All-in-one Printer
HP Officejet 4215v All-in-one Printer
HP Officejet 4215xi All-in-one Printer
HP Officejet 4219 All-in-one Printer
HP Officejet 4251 All-in-one Printer
HP Officejet 4252 All-in-one Printer
HP Officejet 4255 All-in-one Printer
HP Officejet 4256 All-in-one Printer
HP Officejet 4259 All-in-one Printer
HP Officejet 4308 All-in-one Printer
HP Officejet 4311 All-in-one Printer
HP Officejet 4312 All-in-one Printer
HP Officejet 4314 All-in-one Printer
HP Officejet 4315 All-in-one Printer
HP Officejet 4315xi All-in-one Printer
HP Officejet 4315v All-in-one Printer
HP Officejet 4317 All-in-one Printer
HP Officejet 4319 All-in-one Printer
HP Officejet 4338 All-in-one Printer
HP Officejet 4352 All-in-one Printer
HP Officejet 4353 All-in-one Printer
HP Officejet 4355 All-in-one Printer
HP Officejet 4357 All-in-one Printer
HP Officejet 4359 All-in-one Printer
HP Officejet 4400 k410 All-in-one Printer
HP Officejet 4500 All-in-one Printer - g510g
HP Officejet 4500 All-in-one Printer - k710
HP Officejet 4500 All-in-one Printer - g510h
HP Officejet 4500 Desktop All-in-one Printer - g510a
HP Officejet 4500 All-in-one Desktop Printer - g510b
HP Officejet j4524 All-in-one Printer

HP Officejet j4525 All-in-one Printer
HP Officejet j4535 All-in-one Printer
HP Officejet j4540 All-in-one Printer
HP Officejet j4550 All-in-one Printer
HP Officejet j4560 All-in-one Printer
HP Officejet j4580c All-in-one Printer
HP Officejet j4580 All-in-one Printer
HP Officejet j4585 All-in-one Printer
HP Officejet 4610 All-in-one Printer Series
HP Officejet 4620 E-all-in-one Printer
HP Officejet 4622 E-all-in-one Printer
HP Officejet 4630 E-all-in-one Printer
HP Officejet 4631 E-all-in-one Printer
HP Officejet 4632 E-all-in-one Printer
HP Officejet 4634 E-all-in-one Printer
HP Officejet 4635 E-all-in-one Printer
HP Officejet 4636 E-all-in-one Printer
HP Officejet j4660 All-in-one Printer
HP Officejet j4680 All-in-one Printer
HP Officejet j4680c All-in-one Printer
HP Officejet Pro k5300 Printer
HP Officejet Pro k5400dtn Printer
HP Officejet Pro k5400n Printer
HP Officejet Pro k5400dn Printer
HP Officejet Pro k5400 Printer
HP Officejet Pro k5400z Printer
HP Officejet 5505 All-in-one Printer
HP Officejet 5508 All-in-one Printer
HP Officejet 5510v All-in-one Printer
HP Officejet 5510xi All-in-one Printer
HP Officejet 5510 All-in-one Printer
HP Officejet 5515 All-in-one Printer
HP Officejet 5600 Series All-in-one Printer
HP Officejet 5605 All-in-one Printer
HP Officejet 5607 All-in-one Printer
HP Officejet 5608 All-in-one Printer
HP Officejet 5609 All-in-one Printer
HP Officejet 5610v All-in-one Printer
HP Officejet 5610xi All-in-one Printer
HP Officejet 5610 All-in-one Printer
HP Officejet 5615 All-in-one Printer

HP Officejet 5679 All-in-one Printer
HP Officejet 5680 All-in-one Printer
HP Officejet j5725 All-in-one Printer
HP Officejet j5730 All-in-one Printer
HP Officejet j5735 All-in-one Printer
HP Officejet j5738 All-in-one Printer
HP Officejet j5740 All-in-one Printer
HP Officejet j5750 All-in-one Printer
HP Officejet j5780 All-in-one Printer
HP Officejet j5783 All-in-one Printer
HP Officejet j5785 All-in-one Printer
HP Officejet j5788 All-in-one Printer
HP Officejet j5790 All-in-one Printer
HP Officejet 6000 Wireless Printer - e609n
HP Officejet 6000 Printer - e609a
HP Officejet 6100 Eprinter h611a
HP Officejet 6105 All-in-one Printer
HP Officejet 6110v All-in-one Printer
HP Officejet 6110 All-in-one Printer
HP Officejet 6110xi All-in-one Printer
HP Officejet 6200 All-in-one Printer
HP Officejet 6203 All-in-one Printer
HP Officejet 6205 All-in-one Printer
HP Officejet 6208 All-in-one Printer
HP Officejet 6210xi All-in-one Printer
HP Officejet 6210v All-in-one Printer
HP Officejet 6210 All-in-one Printer
HP Officejet 6213 All-in-one Printer
HP Officejet 6215 All-in-one Printer
HP Officejet 6301 All-in-one Printer
HP Officejet 6304 All-in-one Printer
HP Officejet 6305 All-in-one Printer
HP Officejet 6307 All-in-one Printer
HP Officejet 6308 All-in-one Printer
HP Officejet 6310 All-in-one Printer
HP Officejet 6310xi All-in-one Printer
HP Officejet 6310v All-in-one Printer
HP Officejet 6313 All-in-one Printer
HP Officejet 6315 All-in-one Printer
HP Officejet 6318 All-in-one Printer
HP Officejet j6405 All-in-one Printer

HP Officejet j6410 All-in-one Printer
HP Officejet j6413 All-in-one Printer
HP Officejet j6415 All-in-one Printer
HP Officejet j6424 All-in-one Printer
HP Officejet j6450 All-in-one Printer
HP Officejet j6480 All-in-one Printer
HP Officejet j6488 All-in-one Printer
HP Officejet 6500 e710
HP Officejet 6500 Wireless All-in-one Printer - e709q
HP Officejet 6500 Wireless All-in-one Printer - e709n
HP Officejet 6500 e710n-z
HP Officejet 6500 All-in-one Printer - e709c
HP Officejet 6500 All-in-one Printer - e709a
HP Officejet 6600 E-all-in-one Printer - h711a
HP Officejet 6700 Premium E-all-in-one printer-h711n
HP Officejet 7000 Wide Format Printer -- e809a
HP Officejet k7100 Printer
HP Officejet k7103 Printer
HP Officejet k7108 Printer
HP Officejet 7110 Wide Format Eprinter
HP Officejet 7205 All-in-one Printer
HP Officejet 7208 All-in-one Printer
HP Officejet 7210 All-in-one Printer
HP Officejet 7210v All-in-one Printer
HP Officejet 7210xi All-in-one Printer
HP Officejet 7213 All-in-one Printer
HP Officejet 7215 All-in-one Printer
HP Officejet 7310xi All-in-one Printer
HP Officejet 7310 All-in-one Printer
HP Officejet 7313 All-in-one Printer
HP Officejet 7408 All-in-one Printer
HP Officejet 7410xi All-in-one Printer
HP Officejet 7410 All-in-one Printer
HP Officejet 7413 All-in-one Printer
HP Officejet Pro l7480 All-in-one Printer
HP Officejet Pro l7500 Series All-in-one Printer
HP Officejet Pro l7550 All-in-one Printer
HP Officejet Pro l7555 All-in-one Printer
HP Officejet Pro l7580 All-in-one Printer
HP Officejet Pro l7590 All-in-one Printer
HP Officejet Pro l7600 Series All-in-one Printer

HP Officejet 7610 Wide Format E-all-in-one Printer
HP Officejet Pro 17650 All-in-one Printer
HP Officejet Pro 17680 All-in-one Printer
HP Officejet Pro 17681 All-in-one Printer
HP Officejet Pro 17700 Series All-in-one Printer
HP Officejet Pro 17710 All-in-one Printer
HP Officejet Pro 17750 All-in-one Printer
HP Officejet Pro 17780 All-in-one Printer
HP Officejet Pro 8000 Wireless Printer - a809n
HP Officejet Pro 8000 Enterprise a811a
HP Officejet Pro 8000 Printer - a809a
HP Officejet Pro 8100 eprinter-n811a
HP Officejet Pro 8500 Wireless All-in-one Printer - a909g
HP Officejet Pro 8500 All-in-one Printer - a909a
HP Officejet Pro 8500a E-aio Printer - a910a
HP Officejet Pro 8500 Premier All-in-one Printer - a909n
HP Officejet Pro 8500a Premium E-aio Printer - a910n
HP Officejet Pro 8500a Plus E-aio Printer - a910g
HP Officejet Pro 8600 Premium E-aio n911n
HP Officejet Pro k8600dn Color Printer
HP Officejet Pro 8600 Plus E-aio n911g
HP Officejet Pro k8600 Color Printer
HP Officejet Pro 8600 E-aio n911a
HP Officejet Pro 8610 E-all-in-one Printer
HP Officejet Pro 8615 E-all-in-one Printer
HP Officejet Pro 8620 E-all-in-one Printer
HP Officejet Pro 8625 E-all-in-one Printer
HP Officejet Pro 8630 E-all-in-one Printer
HP Officejet Pro 8640 E-all-in-one Printer
HP Officejet Pro 8660 E-all-in-one Printer
HP PSC 920 All-in-one Printer
HP PSC 1110v All-in-one Printer
HP PSC 1110 All-in-one Printer
HP PSC 1118 All-in-one Printer
HP PSC 1200 All-in-one Printer
HP PSC 1205 All-in-one Printer
HP PSC 1209 All-in-one Printer
HP PSC 1210xi All-in-one Printer
HP PSC 1210v All-in-one Printer
HP PSC 1210 All-in-one Printer
HP PSC 1213 All-in-one Printer

HP PSC 1215 All-in-one Printer
HP PSC 1216 All-in-one Printer
HP PSC 1217 All-in-one Printer
HP PSC 1218 All-in-one Printer
HP PSC 1219 All-in-one Printer
HP PSC 1300 All-in-one Printer
HP PSC 1310 All-in-one Printer
HP PSC 1311 All-in-one Printer
HP PSC 1312 All-in-one Printer
HP PSC 1315v All-in-one Printer
HP PSC 1315s All-in-one Printer
HP PSC 1315xi All-in-one Printer
HP PSC 1315 All-in-one Printer
HP PSC 1317 All-in-one Printer
HP PSC 1318 All-in-one Printer
HP PSC 1340 All-in-one Printer
HP PSC 1345 All-in-one Printer
HP PSC 1350xi All-in-one Printer
HP PSC 1350v All-in-one Printer
HP PSC 1350 All-in-one Printer
HP PSC 1355 All-in-one Printer
HP PSC 1401 All-in-one Printer
HP PSC 1402 All-in-one Printer
HP PSC 1403 All-in-one Printer
HP PSC 1406 All-in-one Printer
HP PSC 1408 All-in-one Printer
HP PSC 1410 All-in-one Printer
HP PSC 1410v All-in-one Printer
HP PSC 1410xi All-in-one Printer
HP PSC 1415 All-in-one Printer
HP PSC 1417 All-in-one Printer
HP PSC 1503 All-in-one Printer
HP PSC 1504 All-in-one Printer
HP PSC 1507 All-in-one Printer
HP PSC 1508 All-in-one Printer
HP PSC 1510s All-in-one Printer
HP PSC 1510xi All-in-one Printer
HP PSC 1510 All-in-one Printer
HP PSC 1510v All-in-one Printer
HP PSC 1513s All-in-one Printer
HP PSC 1513 All-in-one Printer

HP PSC 1514 All-in-one Printer
HP PSC 1600 All-in-one Printer
HP PSC 1603 All-in-one Printer
HP PSC 1605 All-in-one Printer
HP PSC 1608 All-in-one Printer
HP PSC 1610 All-in-one Printer
HP PSC 1610xi All-in-one Printer
HP PSC 1610v All-in-one Printer
HP PSC 1613 All-in-one Printer
HP PSC 1615 All-in-one Printer
HP PSC 2170 All-in-one Printer
HP PSC 2171 All-in-one Printer
HP PSC 2175 All-in-one Printer
HP PSC 2175v All-in-one Printer
HP PSC 2175xi All-in-one Printer
HP PSC 2179 All-in-one Printer
HP PSC 2300 Series All-in-one Printer
HP PSC 2310 All-in-one Printer
HP PSC 2350 All-in-one Printer
HP PSC 2352 All-in-one Printer
HP PSC 2353 All-in-one Printer
HP PSC 2353p All-in-one Printer
HP PSC 2355 All-in-one Printer
HP PSC 2355p All-in-one Printer
HP PSC 2355xi All-in-one Printer
HP PSC 2355v All-in-one Printer
HP PSC 2357 All-in-one Printer
HP PSC 2358 All-in-one Printer
HP PSC 2405 Photosmart All-in-one Printer
HP PSC 2410v Photosmart All-in-one Printer
HP PSC 2410xi Photosmart All-in-one Printer
HP PSC 2410 Photosmart All-in-one Printer
HP PSC 2420 Photosmart All-in-one Printer
HP PSC 2450 Photosmart All-in-one Printer
HP PSC 2500 Photosmart All-in-one Printer
HP PSC 2510 Photosmart All-in-one Printer
HP PSC 2510xi Photosmart All-in-one Printer
HP PSC 2550 Photosmart All-in-one Printer
HP LaserJet Pro MFP m125nw
HP LaserJet Pro MFP m125rnw
HP LaserJet Pro MFP m125a

HP LaserJet Pro MFP m126nw
HP LaserJet Pro MFP m126a
HP LaserJet Pro MFP m127fn
HP LaserJet Pro MFP m127fp
HP LaserJet Pro MFP m127fw
HP LaserJet Pro MFP m128fp
HP LaserJet Pro MFP m128fw
HP LaserJet Pro MFP m128fn
HP LaserJet 400 m401d
HP LaserJet 400 m401a
HP LaserJet 400 m401n
HP LaserJet 400 m401dne
HP LaserJet 400 MFP m425dw
HP LaserJet 400 MFP m425dn
HP LaserJet 400 m401dw
HP LaserJet 400 m401dn
HP LaserJet 410dtn Printer
HP LaserJet Pro MFP m435nw
HP LaserJet Enterprise 500 MFP m525f
HP LaserJet Enterprise 500 MFP m525dn
HP LaserJet Enterprise 500 MFP m525 Series
HP LaserJet Pro m521dw Multifunction Printer
HP LaserJet Pro m521dn Multifunction Printer
HP LaserJet Enterprise Flow MFP m525
HP LaserJet Enterprise 600 m601dn
HP LaserJet Enterprise 600 m602dn
HP LaserJet Enterprise 600 m603dn
HP LaserJet Enterprise 600 m602x
HP LaserJet Enterprise 600 m603xh
HP LaserJet Enterprise 600 m603n
HP LaserJet Enterprise 600 m602n
HP LaserJet Enterprise 600 m601n
HP LaserJet Enterprise 700 m712xh
HP LaserJet Enterprise 700 m712n
HP LaserJet Enterprise 700 m712dn
HP LaserJet Pro m701n Printer
HP LaserJet Pro m701a Printer
HP LaserJet Pro m706n Printer
HP LaserJet Enterprise MFP m725dn
HP LaserJet Enterprise MFP m725 Series
HP LaserJet Enterprise MFP m725fw

HP LaserJet Enterprise MFP m725z+
HP LaserJet Enterprise MFP m725z
HP LaserJet Enterprise m806x+ Printer
HP LaserJet Enterprise m806 Printer Series
HP LaserJet Enterprise m806dn Printer
HP LaserJet Enterprise Flow m830z Multifunction Printer
HP LaserJet Enterprise Flow m830 Multifunction Printer Series
HP LaserJet m1005 Multifunction Printer
HP LaserJet p1005 Printer
HP LaserJet p1006 Printer
HP LaserJet p1007 Printer
HP LaserJet p1008 Printer
HP LaserJet p1009 Printer
HP LaserJet 1018s Printer
HP LaserJet 1018 Printer
HP LaserJet 1020 Plus Printer
HP LaserJet 1020 Printer
HP LaserJet Pro Cp 1025nw Color Printer Series
HP LaserJet Pro Cp 1025 Color Printer Series
HP LaserJet Pro cp1025 Color Printer Series
HP LaserJet Pro cp1025nw Color Printer Series
HP LaserJet Professional p1102 Printer
HP LaserJet Professional p1102s Printer
HP LaserJet Professional p1102w Printer
HP LaserJet Professional P 1102w Printer
HP LaserJet Professional p1106w Printer
HP LaserJet Professional p1106 Printer
HP LaserJet Professional p1107 Printer
HP LaserJet Professional p1107w Printer
HP LaserJet Professional p1108w Printer
HP LaserJet Professional p1108 Printer
HP LaserJet Professional p1109w Printer
HP LaserJet Professional p1109 Printer
HP LaserJet m1120 Multifunction Printer
HP LaserJet m1120n Multifunction Printer
HP LaserJet Professional m1132s Multifunction Printer
HP LaserJet Professional m1132 Multifunction Printer
HP LaserJet Professional m1136 Multifunction Printer
HP LaserJet Professional m1137 Multifunction Printer
HP LaserJet Professional m1138 Multifunction Printer
HP LaserJet Professional m1139 Multifunction Printer

HP LaserJet 1160 Series Printer
HP LaserJet 1160 Printer
HP LaserJet 1160le Printer
HP LaserJet m1210 MFP Series
HP LaserJet Professional m1212nf Multifunction Printer
HP LaserJet Professional m1213nf Multifunction Printer
HP LaserJet Professional m1214nfh Multifunction Printer
HP LaserJet Professional m1216nfh MFP
HP LaserJet Professional m1217nfw Multifunction Printer
HP Hotspot LaserJet Pro m1218nfs MFP
HP LaserJet Professional m1219nfs MFP
HP LaserJet Professional m1219nf MFP
HP LaserJet Professional m1219nfg MFP
HP LaserJet 1300n Printer
HP LaserJet m1319f Multifunction Printer
HP LaserJet 1320n Printer
HP LaserJet Professional cm1411fn
HP LaserJet Professional cm1412fn
HP LaserJet Professional cm1413fn
HP LaserJet Professional cm1415fnw
HP LaserJet Professional cm1415fn
HP LaserJet Professional cm1416fnw
HP LaserJet Professional cm1417fnw
HP LaserJet Professional cm1418fnw
HP LaserJet p1505n Printer
HP LaserJet p1505 Printer
HP LaserJet Professional cp1521n
HP LaserJet m1522n Multifunction Printer
HP LaserJet m1522nf Multifunction Printer
HP LaserJet Professional cp1522n
HP LaserJet Professional cp1523n
HP LaserJet Professional cp1525nw
HP LaserJet Professional cp1525n
HP LaserJet Professional cp1526nw
HP LaserJet Professional cp1527nw
HP LaserJet Professional cp1528nw
HP LaserJet Professional p1566
HP LaserJet Professional p1567
HP LaserJet Professional p1568
HP LaserJet Professional p1569
HP LaserJet Professional p1606dn Printer

HP LaserJet Professional p1607dn Printer
HP LaserJet Professional p1608dn Printer
HP LaserJet Professional p1609dn Printer
HP LaserJet p2035 Printer
HP LaserJet p2035n Printer
HP LaserJet p2055dn Printer
HP LaserJet p2055d Printer
HP LaserJet p2055 Printer
HP LaserJet p2055x Printer
HP LaserJet m2727nf Multifunction Printer
HP LaserJet m2727 Multifunction Printer
HP LaserJet m2727nfs Multifunction Printer
HP LaserJet p3005 Printer
HP LaserJet p3005d Printer
HP LaserJet p3005dn Printer
HP LaserJet p3005dtn Printer
HP LaserJet p3005n Printer
HP LaserJet p3005x Printer
HP LaserJet p3011 Printer
HP LaserJet 3015 All-in-one Printer
HP LaserJet p3015 Printer
HP LaserJet m3027 Multifunction Printer
HP LaserJet m3027x Multifunction Printer
HP LaserJet 3055 All-in-one Printer
HP LaserJet 3390 All-in-one Printer
HP LaserJet p4014 Printer
HP LaserJet p4014dn Printer
HP LaserJet p4014n Printer
HP LaserJet p4015tn Printer
HP LaserJet p4015n Printer
HP LaserJet p4015 Printer
HP LaserJet p4015dn Printer
HP LaserJet p4015x Printer
HP LaserJet 4100n Printer
HP LaserJet 4100 Printer
HP LaserJet 4100tn Printer
HP LaserJet 4250n Printer
HP LaserJet 4250 Printer
HP LaserJet 4250dtn Printer
HP LaserJet 4250dtnsl Printer
HP LaserJet 4250tn Printer

HP LaserJet p4515x Printer
HP LaserJet p4515xm Printer
HP LaserJet p4515n Printer
HP LaserJet p4515tn Printer
HP LaserJet 5000le Printer
HP LaserJet 5000n Printer
HP LaserJet 5000gn Printer
HP LaserJet 5000 Series Printer
HP LaserJet 5000dn Printer
HP LaserJet 5000 Printer
HP LaserJet m5025 Multifunction Printer
HP LaserJet 5200 Printer
HP LaserJet 5200tn Printer
HP LaserJet 5200dtn Printer
HP LaserJet 5200n Printer
HP LaserJet 9000dn Printer
HP LaserJet 9000n Printer
HP LaserJet 9000hnf Printer
HP LaserJet 9000hns Printer
HP LaserJet 9000 Printer
HP LaserJet m9040 Multifunction Printer
HP LaserJet 9040 Printer
HP LaserJet 9040n Printer
HP LaserJet 9040dn Printer
HP LaserJet 9050 Printer
HP LaserJet 9050dn Printer
HP LaserJet m9050 Multifunction Printer
HP LaserJet 9050n Printer
HP LaserJet m9059 MFP
HP LaserJet m9059 Multifunction Printer
HP LaserJet 100 Color MFP m175
HP Color LaserJet Pro Mpf m176n
HP Color LaserJet Pro Mpf m177fw
HP LaserJet 200 Color m251u
HP LaserJet 200 Color m251r
HP LaserJet 200 Color m251q
HP LaserJet 200 Color m251e
HP LaserJet 200 Color m251j
HP LaserJet Pro 200 Color MFP m276n
HP LaserJet 200 Color m251p
HP LaserJet 200 Color MFP m275nw

HP LaserJet 200 Color MFP m275s
HP LaserJet 200 Color MFP m275t
HP LaserJet 200 Color MFP m275u
HP LaserJet Pro 200 Color MFP m276nw
HP LaserJet 200 Color m251g
HP LaserJet 200 Color m251b
HP LaserJet 200 Color m251k
HP LaserJet 200 Colormfp m276j
HP LaserJet 200 Color m251v
HP LaserJet 200 Colormfp m276b
HP LaserJet 200 Colormfp m276e
HP LaserJet 200 Colormfp m276g
HP LaserJet 200 Colormfp m276k
HP LaserJet 200 Colormfp m276p
HP LaserJet 200 Colormfp m276q
HP LaserJet 200 Colormfp m276r
HP LaserJet 200 Colormfp m276u
HP LaserJet 200 Colormfp m276v
HP LaserJet Pro m251n Color Printer
HP LaserJet Pro m251nw Color Printer
HP LaserJet 300 Color m351a
HP LaserJet 300 Color MFP m375nw
HP LaserJet 400 Color m451nw
HP LaserJet 400 Color m451dw
HP LaserJet 400 Color m451dn
HP LaserJet 400 Color MFP m475dw
HP LaserJet 400 Color MFP m475dn
HP Color LaserJet Pro MFP m476nw
HP Color LaserJet Pro MFP m476dn
HP Color LaserJet Pro MFP m476dw
HP LaserJet Enterprise 500 Color MFP m575dn
HP LaserJet Enterprise 500 Color m551
HP LaserJet Pro 500 Color MFP m570dw
HP LaserJet Pro 500 Color MFP m570dn
HP LaserJet Enterprise 500 Color MFP m575
HP LaserJet Enterprise 500 Color MFP m575f
HP LaserJet Enterprise Color Flow MFP m575
HP Color LaserJet Enterprise m651dn Printer
HP Color LaserJet Enterprise m651xh Printer
HP Color LaserJet Enterprise m651n Printer
HP Color LaserJet Enterprise Flow Multifunction m680z Printer

HP Color LaserJet Enterprise Multifunction m680f Printer
HP Color LaserJet Enterprise Multifunction m680dn Printer
HP LaserJet Enterprise 700 Color MFP m775f
HP LaserJet Enterprise 700 Color MFP m775z
HP LaserJet Enterprise 700 Color MFP m775z+
HP LaserJet Enterprise 700 Color MFP m775dn
HP Color LaserJet Enterprise m750n
HP Color LaserJet Enterprise m750dn
HP Color LaserJet Enterprise m750 Printer Series
HP Color LaserJet Enterprise m750xh
HP Color LaserJet Enterprise m855x+ Printer
HP Color LaserJet Enterprise m855dn Printer
HP Color LaserJet Enterprise m855 Printer Series
HP Color LaserJet Enterprise m855xh Printer
HP Color LaserJet Enterprise Flow m880 Multifunction Printer Series
HP Color LaserJet Enterprise Flow m880z+ Multifunction Printer
HP Color LaserJet Enterprise Flow m880z Multifunction Printer
HP Color LaserJet cp1215 Printer
HP Color LaserJet cp1217 Printer
HP Color LaserJet cm1312nfi Multifunction Printer
HP Color LaserJet cm1312 Multifunction Printer
HP Color LaserJet cp1514n Printer
HP Color LaserJet cp1515n Printer
HP Color LaserJet cp1518ni Printer
HP Color LaserJet cp2025x Printer
HP Color LaserJet cp2025n Printer
HP Color LaserJet cp2025 Printer
HP Color LaserJet cp2025dn Printer
HP Color LaserJet cm2320nf Multifunction Printer
HP Color LaserJet cm2320n Multifunction Printer
HP Color LaserJet cm2320fxi Multifunction Printer
HP Color LaserJet 3500dtn Printer
HP Color LaserJet 3500dn Printer
HP Color LaserJet 3500 Printer
HP Color LaserJet cp3505 Printer
HP Color LaserJet cp3505x Printer
HP Color LaserJet cp3505dn Printer
HP Color LaserJet cp3505n Printer
HP Color LaserJet cp3525n Printer
HP Color LaserJet cp3525x Printer

HP Color LaserJet cp3525dn Printer
HP Color LaserJet cp3525 Printer
HP Color LaserJet cm3530 Multifunction Printer
HP Color LaserJet cm3530fs Multifunction Printer
HP Color LaserJet 3550 Printer
HP Color LaserJet 3600 Printer
HP Color LaserJet 3600n Printer
HP Color LaserJet 3600dn Printer
HP Color LaserJet cp4005 Series Printer
HP Color LaserJet cp4005dn Printer
HP Color LaserJet cp4005n Printer
HP Color LaserJet cp4020 Series Printer
HP Color LaserJet cp4520 Series Printer
HP Color LaserJet 4700ph+ Printer
HP Color LaserJet 4700dn Printer
HP Color LaserJet 4700dtn Printer
HP Color LaserJet 4700 Printer
HP Color LaserJet 4700n Printer
HP Color LaserJet cp5225n
HP Color LaserJet cp5225
HP Color LaserJet cp5225dn
HP Color LaserJet cp5520 Series Printer
HP Color LaserJet 5550hdn Printer
HP Color LaserJet 5550dtn Printer
HP Color LaserJet 5550dn Printer
HP Color LaserJet 5550n Printer
HP Color LaserJet 5550 Printer
HP Color LaserJet cp6015n Printer
HP Color LaserJet cp6015x Printer
HP Color LaserJet cp6015de Printer
HP Color LaserJet cp6015dn Printer
HP Color LaserJet cp6015xh Printer
HP Color LaserJet cm6030 Multifunction Printer
HP Color LaserJet cm6030f Multifunction Printer
HP Color LaserJet cm6040 Multifunction Printer
HP Color LaserJet cm6040f Multifunction Printer
HP Color LaserJet cm6049f Multifunction Printer
HP Color LaserJet 8550mfp-dlvry/unpkging
HP Color LaserJet 8550 Multifunction Printer
HP Color LaserJet 8550 Printer
HP Color LaserJet 8550mn Printer

HP Color LaserJet 8550gn Printer
HP Color LaserJet 8550dn Printer
HP Color LaserJet 9500n Printer
HP Color LaserJet 9500 Printer
HP Color LaserJet 9500gp Printer
HP Color LaserJet 9500hdn Printer
HP Business Inkjet 2800dtn Printer
HP Business Inkjet 2800dt Printer
HP Business Inkjet 2800 Printer
HP Designjet t770 24-in Postscript Printer
HP Designjet t770 Postscript
HP Designjet t790ps 24in
HP Designjet t790ps 44in
HP Designjet t795 44-in Eprinter
HP Designjet t920 Postscript
HP Designjet t1100 24-in Postscript Printer
HP Designjet t1100 44-in Postscript Printer
HP Designjet t1120 44-in Postscript Printer
HP Designjet t1120 24-in Postscript Printer
HP Designjet t1200 Postscript
HP Designjet t1300 Postscript
HP Designjet t1500 Postscript
HP Designjet t2300 Postscript
HP Designjet t2500 36-in Postscript Emultifunction Printer
HP Designjet t3500 36-in Production Emfp
HP Designjet 4000ps
HP Designjet 4020ps
HP Designjet 4500ps
HP Designjet 4520ps
HP Designjet z5200 44-in Postscript Printer
HP Designjet z5400 44-in Postscript Eprinter
HP Designjet d5800 60-in Production Printer
HP Designjet z6100ps 42in Photo
HP Designjet z6100ps 60in Photo
HP Designjet z6200ps 42in Photo
HP Designjet z6200ps 60in Photo
HP Designjet z6600 Postscript
HP Designjet z6800ps Photo
HP Designjet t7100 Monochrome
HP Designjet t7100ps
HP Designjet t7200 42-in Production Printer

HP Envy 100 d410 Series
HP Envy 110 E-all-in-one
HP Envy 111 E-all-in-one
HP Envy 114 E-all-in-one
HP Envy 120 E-all-in-one
HP Envy 121 E-all-in-one
HP 910 Printer
HP 915 Inkjet All-in-one Printer
HP Envy 4500 E-all-in-one
HP Envy 4502 E-all-in-one
HP Envy 4504 E-all-in-one
HP Envy 5530 E-all-in-one Printer
HP Envy 5531 E-all-in-one Printer
HP Envy 5532 E-all-in-one Printer
HP Envy 5535 E-all-in-one Printer

Printer Model	Notes
Kyocera CS-1815	
Kyocera F-1010	
Kyocera FS-600 - KPDL-2	
Kyocera FS-600	
Kyocera FS-680	
Kyocera FS-800	
Kyocera FS-920	
Kyocera FS-1000	
Kyocera FS-1000+	
Kyocera FS-1010	
Kyocera FS-1018MFP	
Kyocera FS-1020D	
Kyocera FS-1030D	
Kyocera FS-1050	
Kyocera FS-1118MFP	
Kyocera FS-1200	
Kyocera FS-1600	
Kyocera FS-1600+	
Kyocera FS-1700	
Kyocera FS-1700+	
Kyocera FS-1714M	
Kyocera FS-1750	
Kyocera FS-1800	
Kyocera FS-1800+	
Kyocera FS-1900	
Kyocera FS-1920	
Kyocera FS-2000D	
Kyocera FS-3500	
Kyocera FS-3600	
Kyocera FS-3600+	
Kyocera FS-3700	
Kyocera FS-3700+	
Kyocera FS-3718M	
Kyocera FS-3750	
Kyocera FS-3800	
Kyocera FS-3820N	
Kyocera FS-3830N	
Kyocera FS-3900DN	
Kyocera FS-4000DN	
Kyocera FS-5800C	
Kyocera FS-5900C	
Kyocera FS-6020	
Kyocera FS-6026	
Kyocera FS-6300	
Kyocera FS-6500	
Kyocera FS-6500+	

Kyocera FS-6700	
Kyocera FS-6750	
Kyocera FS-6900	
Kyocera FS-6950DN	
Kyocera FS-7000	
Kyocera FS-7000+	
Kyocera FS-7028M	
Kyocera FS-8000C	
Kyocera FS-9000	
Kyocera FS-9100DN	
Kyocera FS-9130DN	
Kyocera FS-9500DN	
Kyocera FS-9530DN	
Kyocera KM-1510	
Kyocera KM-1530	
Kyocera KM-1810	
Kyocera KM-1815	
Kyocera KM-1820	
Kyocera KM-2030	
Kyocera KM-2530	
Kyocera KM-3050	
Kyocera KM-3530	
Kyocera KM-4050	
Kyocera KM-4230	
Kyocera KM-4230/5230	
Kyocera KM-4530	
Kyocera KM-5050	
Kyocera KM-5230	
Kyocera KM-5530	
Kyocera KM-6030	
Kyocera KM-6230	
Kyocera KM-8030	

Printer Model	Notes
Ricoh Aficio 1022	
Ricoh Aficio 1027	
Ricoh Aficio 1032	
Ricoh Aficio 1035	
Ricoh Aficio 1045	
Ricoh Aficio 1060	
Ricoh Aficio 1075	
Ricoh Aficio 1515	
Ricoh Aficio 2015	
Ricoh Aficio 2016	
Ricoh Aficio 2018	
Ricoh Aficio 2018D	
Ricoh Aficio 2020	
Ricoh Aficio 2020D	
Ricoh Aficio 2022	
Ricoh Aficio 2027	
Ricoh Aficio 2032	
Ricoh Aficio 2035	
Ricoh Aficio 2035e	
Ricoh Aficio 2045	
Ricoh Aficio 2045e	
Ricoh Aficio 2051	
Ricoh Aficio 2060	
Ricoh Aficio 2075	
Ricoh Aficio 2090	
Ricoh Aficio 2105	
Ricoh Aficio 220	
Ricoh Aficio 3025	
Ricoh Aficio 3030	
Ricoh Aficio 3035	
Ricoh Aficio 3045	
Ricoh Aficio 401	
Ricoh Aficio 700	
Ricoh Aficio MP 1100	
Ricoh Aficio MP 1350	
Ricoh Aficio MP 1600	
Ricoh Aficio MP 161	
Ricoh Aficio MP 2000	
Ricoh Aficio MP 2500	
Ricoh Aficio MP 2510	
Ricoh Aficio MP 2550	
Ricoh Aficio MP 2550B	
Ricoh Aficio MP 3010	
Ricoh Aficio MP 3350	
Ricoh Aficio MP 3350B	
Ricoh Aficio MP 3500	

Ricoh Aficio MP 4000	
Ricoh Aficio MP 4000B	
Ricoh Aficio MP 4500	
Ricoh Aficio MP 5000	
Ricoh Aficio MP 5000B	
Ricoh Aficio MP 5500	
Ricoh Aficio MP 6500	
Ricoh Aficio MP 7500	
Ricoh Aficio MP 9000	

Printer Model	Notes
Xerox Able 1406	
Xerox DocuPrint 4508	
Xerox DocuPrint C20	
Xerox DocuPrint N4512	
Xerox DocuPrint N4512PS	
Xerox DocuPrint P12	
Xerox DocuPrint P1202	
Xerox DocuPrint P8e	
Xerox Document Centre 400	
Xerox Phaser 2135	
Xerox Phaser 4400B	
Xerox Phaser 4400DT	
Xerox Phaser 4400DX	
Xerox Phaser 4400N	
Xerox Phaser 4500B	
Xerox Phaser 4500DT	
Xerox Phaser 4500DX	
Xerox Phaser 4500N	
Xerox Phaser 4510B	
Xerox Phaser 4510DT	
Xerox Phaser 4510DX	
Xerox Phaser 4510N	
Xerox Phaser 5500B	
Xerox Phaser 5500DN	
Xerox Phaser 5500DT	
Xerox Phaser 5500DX	
Xerox Phaser 5500N	
Xerox Phaser 6130N	
Xerox Phaser 6180DN	
Xerox Phaser 6180MFP-D	
Xerox Phaser 6200B	
Xerox Phaser 6200DP	
Xerox Phaser 6200DX	
Xerox Phaser 6200N	
Xerox Phaser 6250B	
Xerox Phaser 6250DP	
Xerox Phaser 6250DT	
Xerox Phaser 6250DX	
Xerox Phaser 6250N	
Xerox Phaser 6300DN	
Xerox Phaser 6300N	
Xerox Phaser 6350DP	
Xerox Phaser 6350DT	
Xerox Phaser 6350DX	
Xerox Phaser 6360DN	
Xerox Phaser 6360DX	

Xerox Phaser 7300B	
Xerox Phaser 7300DN	
Xerox Phaser 7300DT	
Xerox Phaser 7300DX	
Xerox Phaser 7300N	
Xerox Phaser 7400DN	
Xerox Phaser 7400DT	
Xerox Phaser 7400DX	
Xerox Phaser 7400DXF	
Xerox Phaser 7400N	
Xerox Phaser 7700DN	
Xerox Phaser 7700DX	
Xerox Phaser 7700GX	
Xerox Phaser 7750B	
Xerox Phaser 7750DN	
Xerox Phaser 7750DXF	
Xerox Phaser 7750GX	
Xerox Phaser 7760DN	
Xerox Phaser 7760DX	
Xerox Phaser 7760GX	
Xerox Phaser 8400B	
Xerox Phaser 8400BD	
Xerox Phaser 8400DP	
Xerox Phaser 8400DX	
Xerox Phaser 8400N	
Xerox Phaser 8500DN	
Xerox Phaser 8500N	
Xerox Phaser 8550DP	
Xerox Phaser 8550DT	
Xerox Phaser 8550DX	
Xerox Phaser 8560DN	
Xerox WorkCentre 7345	
Xerox WorkCentre M118	

Printer Model	Notes
Apollo P-2100	
Apollo P-2150	
Apollo P-2200	
Apollo P-2250	
Apollo P-2500	
Apollo P-2550	
Apollo P-2600	
Apollo P-2650	
Apple Color StyleWriter 4100	
Apple Color StyleWriter 4500	
Apple Color StyleWriter 6500	
Apple LaserWriter Select 360	
Citizen ProJet II	
DEC 1800	
DEC LN17	
Fujitsu PrintPartner 10V	
Fujitsu PrintPartner 16DV	
Fujitsu PrintPartner 20W	
Fujitsu PrintPartner 8000	
Generic PCL 4 Printer	
Generic PCL 4 LF Printer	
Generic PCL 5 Printer	
Generic PCL 5 LF Printer	
Generic PCL 5c Printer	
Generic PCL 5c LF Printer	
Generic PCL 5e Printer	
Generic PCL 5e LF Printer	
Generic PCL 6/PCL XL Printer	
Generic PCL 6/PCL XL LF	
Gestetner 10512	
Gestetner 2212	
Gestetner 2712	
Gestetner 3212	
Gestetner 3502	
Gestetner 3532/4235g	
Gestetner 4502	
Gestetner 4532/4245g	
Gestetner 6002	
Gestetner 7502	
Gestetner 9002	
Gestetner DSm415	
Gestetner DSm615	
Gestetner DSm616	
Gestetner DSm618	
Gestetner DSm618d	
Gestetner DSm620	
Gestetner DSm620d	
Gestetner DSm622	
Gestetner DSm627	
Gestetner DSm635/635G	

Gestetner DSm645/645G	
Gestetner DSm651	
Gestetner DSm660	
Gestetner DSm675	
Gestetner DSm725	
Gestetner DSm730	
Gestetner DSm735/735G	
Gestetner DSm745/745G	
Gestetner MP1100/DSm7110	
Gestetner MP1350/DSm7135	
Gestetner MP1600/DSm716	
Gestetner MP2000/DSm721d	
Gestetner MP2500/DSm625	
Gestetner MP3500/DSm735e	
Gestetner MP4500/DSm745e	
Gestetner MP5500/DSm755	
Gestetner MP6500/DSm765	
Gestetner MP7500/DSm775	
Gestetner MP9000/DSm790	
Gestetner MP 161/DSm416	
Gestetner MP 2510/DSm725e	
Gestetner MP 2550	
Gestetner MP 2550B	
Gestetner MP 3010/DSm730e	
Gestetner MP 3350	
Gestetner MP 3350B	
Gestetner MP 4000	
Gestetner MP 4000B	
Gestetner MP 5000	
Gestetner MP 5000B	
IBM 4019	
IBM 4029 030 LaserPrinter 10	
IBM 4312	
IBM Infoprint 12	
IBM Page Printer 3112	
Infotec 4353 MF	
Infotec 4452 MF	
Infotec 4651 MF	
Infotec IS2022	
Infotec IS2027	
Infotec IS2032	
Infotec IS2035	
Infotec IS2045	
Infotec IS2090	
Infotec IS2105	
Infotec IS 2015	
Infotec IS 2018	
Infotec IS 2018D	
Infotec IS 2060	
Infotec IS 2075	
Infotec IS 2122	

Infotec IS 2127	
Infotec IS 2132	
Infotec IS 2135	
Infotec IS 2145	
Infotec IS 2151	
Infotec IS 2160	
Infotec IS 2175	
Infotec IS 2215	
Infotec IS 2216	
Infotec IS 2220	
Infotec IS 2220D	
Infotec IS 2225	
Infotec IS 2230	
Infotec IS 2235	
Infotec IS 2245	
Infotec IS 2255	
Infotec IS 2265	
Infotec IS 2275	
Infotec IS 2316	
Infotec IS 2320	
Infotec IS 2325	
Infotec IS 2416	
Infotec IS 2425	
Infotec IS 2430	
Infotec IS 2435	
Infotec IS 2445	
Infotec IS 3090	
Infotec IS 3110	
Infotec IS 3135	
Infotec MP 2550	
Infotec MP 2550B	
Infotec MP 3350	
Infotec MP 3350B	
Infotec MP 4000	
Infotec MP 4000B	
Infotec MP 5000	
Infotec MP 5000B	
Lanier 5622	
Lanier 5627	
Lanier 5632	
Lanier 5635	
Lanier 5645	
Lanier LD0105	
Lanier LD015	
Lanier LD035	
Lanier LD045	
Lanier LD060	
Lanier LD075	
Lanier LD090	
Lanier LD115	
Lanier LD116	

Lanier LD118	
Lanier LD118d	
Lanier LD120	
Lanier LD120d	
Lanier LD122	
Lanier LD127	
Lanier LD132	
Lanier LD135	
Lanier LD145	
Lanier LD151	
Lanier LD160	
Lanier LD175	
Lanier LD225	
Lanier LD230	
Lanier LD235	
Lanier LD245	
Lanier MP2500/LD125	
Lanier MP 1100/LD1100	
Lanier MP 1350/LD1135	
Lanier MP 1600/LD316	
Lanier MP 161/LD016	
Lanier MP 2000/LD320d	
Lanier MP 2510/LD325	
Lanier MP 2550B/LD425B	
Lanier MP 2550/LD425	
Lanier MP 3010/LD330	
Lanier MP 3350B/LD433B	
Lanier MP 3350/LD433	
Lanier MP 3500/LD335	
Lanier MP 4000B/LD040B	
Lanier MP 4000/LD040	
Lanier MP 4500/LD345	
Lanier MP 5000B/LD050B	
Lanier MP 5000/LD050	
Lanier MP 5500/LD255	
Lanier MP 6500/LD265	
Lanier MP 7500/LD275	
Lanier MP 9000/LD190	
Lexmark 4076	
Lexmark Optra E	
Lexmark Optra E+	
Lexmark Optra E220	
Lexmark Optra E321	
Lexmark Optra E323	
Lexmark Valuedriver 300	
Minolta PagePro 6	
Minolta PagePro 6e	
Minolta PagePro 6ex	
Minolta PagePro 8	
Minolta PagePro 8L	
Minolta PagePro 1100	

NEC SuperScript 660i	
NEC SuperScript 860	
NEC SuperScript 870	
NEC SuperScript 1260	
NEC SuperScript 1400	
NEC SuperScript 1800	
NRG 10515/10518/10512	
NRG 2205/2238/2212	
NRG 2705/2738/2712	
NRG 3205/3238/3212	
NRG 3525/3508/3502	
NRG 3545/3518/3532	
NRG 4525/4508/4502	
NRG 4545/4518/4532	
NRG 6002/6005/6008	
NRG 7502/7505/7508	
NRG 9005/9008/9002	
NRG DSm415	
NRG DSm615	
NRG DSm616	
NRG DSm618	
NRG DSm618d	
NRG DSm620	
NRG DSm620d	
NRG DSm622	
NRG DSm627	
NRG DSm632	
NRG DSm635	
NRG DSm645	
NRG DSm651	
NRG DSm660	
NRG DSm675	
NRG DSm725	
NRG DSm730	
NRG DSm735	
NRG DSm745	
NRG MP 1100	
NRG MP 1350	
NRG MP 1600	
NRG MP 161	
NRG MP 2000	
NRG MP 2500	
NRG MP 2510	
NRG MP 2550	
NRG MP 2550B	
NRG MP 3010	
NRG MP 3350	
NRG MP 3350B	
NRG MP 3500	
NRG MP 4000	
NRG MP 4000B	

NRG MP 4500	
NRG MP 5000	
NRG MP 5000B	
NRG MP 5500	
NRG MP 6500	
NRG MP 7500	
NRG MP 9000	
Oki B401d	
Oki B4350	
Oki OL400	
Oki OL400e	
Oki OL400ex	
Oki OL410e	
Oki OL600e	
Oki OL610e/S	
Oki OL800	
Oki OL810ex	
Oki Okipage 6e	
Oki Okipage 6ex	
Oki Okipage 8p	
Oki Okipage 10e	
Oki Okipage 10ex	
Oki Okipage 14ex	
Oki Super 6e	
Olivetti JP350S	
Olivetti PG 306	
PCPI 1030	
Panasonic KX-P4410	
Panasonic KX-P4450	
Panasonic KX-P6150	
Panasonic KX-P6500	
Raven LP-410	
Samsung ML-85	
Samsung ML-1250	
Samsung ML-1450	
Samsung ML-1450PS	
Samsung ML-1650	
Samsung ML-1651N	
Samsung ML-1750	
Samsung ML-2150	
Samsung ML-2150PS	
Samsung ML-2151N	
Samsung ML-2151NPS	
Samsung ML-2152W	
Samsung ML-2152WPS	
Samsung ML-2250	
Samsung ML-2550	
Samsung ML-2551N	
Samsung ML-2552W	
Samsung ML-4600	
Samsung ML-5000a	

Samsung ML-6000	
Samsung ML-6100	
Samsung ML-7000	
Samsung ML-7000N	
Samsung ML-7000P	
Samsung ML-7050	
Samsung ML-7300	
Samsung ML-7300N	
Samsung QL-5100A	
Samsung QL-6050	
Savin 2522	
Savin 2527	
Savin 2532	
Savin 2535/2235	
Savin 2545/2245	
Savin 2560	
Savin 2575	
Savin 3515	
Savin 40105	
Savin 4015	
Savin 4018	
Savin 4018d	
Savin 4022	
Savin 4027	
Savin 4035/4135g	
Savin 4035e/4135eG	
Savin 4045/4145g	
Savin 4045e/4145eG	
Savin 4051	
Savin 4060	
Savin 4075	
Savin 4090	
Savin 7025	
Savin 8016	
Savin 8020	
Savin 8020d	
Savin 8025	
Savin 8025e	
Savin 8030	
Savin 8030e	
Savin 8035/8035g	
Savin 8035e	
Savin 8045/8045g	
Savin 8045e	
Savin 8055	
Savin 8065	
Savin 8075	
Savin 8090	
Savin 8110	
Savin 8135	
Savin 816	

Savin 9016	
Savin 9021d	
Savin 9025	
Savin 9025b	
Savin 9033	
Savin 9033b	
Savin 9040	
Savin 9040b	
Savin 9050	
Savin 9050b	
Seiko SpeedJET 200	
Sharp AR-161	
Sharp AR-M257	
Sony IJP-V100	
Star LS-04	
Star LaserPrinter 8	
Tally MT908	
Tektronix Phaser 750DP	
Tektronix Phaser 750DX	
Tektronix Phaser 750N	
Tektronix Phaser 750P	
Compaq IJ1200	
Lexmark X73	
Lexmark Z42	
Lexmark Z43	
Lexmark Z52	
Lexmark Z53	
Olympus P-10	
Olympus P-11	
Olympus P-200	
Olympus P-300	
Olympus P-300E	
Olympus P-300U	
Olympus P-330E	
Olympus P-330NE	
Olympus P-400	
Olympus P-440	
Olympus P-S100	
Sony UP-DP10	
Sony UP-DR150	
Sony DPP-EX5	
Sony DPP-EX7	
Sony UP-DR100	
Sony UP-DR200	
Fujifilm Printpix-CX-400	
Fujifilm Printpix-CX-550	
Fujifilm FinePix-NX-500	
Kodak Easyshare-Printer-Dock	
Kodak EasyShare-G600-Printer-	
Kodak PD-4000	
Kodak PD-6000	

Kodak Photo-Printer	
Kodak Photo-Printer-500	
Kodak Printer-Dock-Plus	
Kodak Printer-Dock-Plus-S3	
Kodak 6800	
Kodak 6850	
Kodak 605	
Kodak 1400	
Kodak 805	
Kodak 8500	EXPERIMENTAL
Kodak 9810	EXPERIMENTAL
Mitsubishi CP-3020D	EXPERIMENTAL
Mitsubishi CP-3020DU	EXPERIMENTAL
Mitsubishi CP-3020DE	EXPERIMENTAL
Mitsubishi CP-3020DA	EXPERIMENTAL
Mitsubishi CP-3020DAE	EXPERIMENTAL
Mitsubishi CP-9550D	EXPERIMENTAL
Mitsubishi CP-9550DW	EXPERIMENTAL
Mitsubishi CP-9810D	
Mitsubishi CP-9810DW	
Mitsubishi CP-D70DW	EXPERIMENTAL
Mitsubishi CP-D707DW	EXPERIMENTAL
Mitsubishi CP-K60DW	EXPERIMENTAL
Shinko CHC-S9045	
Shinko CHC-S2145	
Sinfonia CHC-S2145	
Dai Nippon Printing DS40	
Dai Nippon Printing DS80	
Dai Nippon Printing DSRX1	
Citizen CX	
Citizen CX-W	
Citizen CY	
Citizen CW-01	EXPERIMENTAL
Citizen OP900	EXPERIMENTAL
Citizen CW-02	EXPERIMENTAL
Citizen OP900II	EXPERIMENTAL
Mitsubishi CP-3800DW	