

Sony® Wireless Network Speakers

Easy to set up. Easy to use.

PC or Mac, play music anywhere
your Wi-Fi® goes—even outside.



STEP 1: Introduce your speaker to your router.

Before you begin, make sure your router and computer are on and connected.

OPTION 1: Automatic Wired Set-up (easy 2-step method)

1. Turn speaker on:

 


SA-NS300, SA-NS400
On back near base.



SA-NS500 (2 buttons)
On bottom.
Both buttons need to be in the up position
for **sync only**.

2. Connect speaker and computer to router.

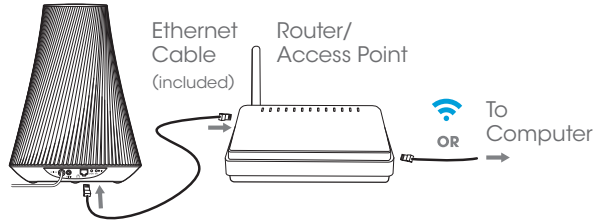


When "LINK" light on speaker turns orange, **unplug the cable**. System will reboot/sync to Wi-Fi® (green light).

OPTION 2: "WPS" Push-button Set-up (Wi-Fi® Protected 3-step method)

1. Turn speaker on:




 SA-NS300, SA-NS400
On back near base.




SA-NS500 (2 buttons)
On bottom.
Both buttons need to be in the up position
for **sync only**.

 2. Press "WPS" button on router:

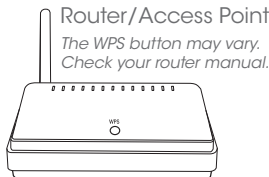

 3. Press/hold "WPS" button (for 3 sec.) on back of speaker

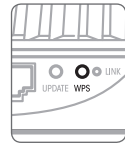

When "LINK" light on speaker turns orange, system will reboot/sync to Wi-Fi® (green light).

IMPORTANT NS500 ONLY: After connection is made, switch bottom button down to **NETWORK STANDBY MODE** to play.



Additional set-up methods for any router, computer and most operating systems are detailed in the operating instructions manual in the box. Also enclosed is a Quick-Start Guide for PC and Mac.

STEP 2: Introduce your speaker to your streaming system.

OPTION 1: DLNA® (DLNA allows you to use Party Streaming™)

For PC

The enclosed CD and/or Quick-Start Guide walks you through steps to:

- Select home network
- Turn media streaming on
- "Allow" access to your speakers

For Mac

Free online software practically installs itself:

- Go to elgato.com
- Download/install EyeConnect® software*
- EyeConnect enables your speaker

*The trial version remains free for audio services.

OPTION 2: Apple® AirPlay® (For the SA-NS500 only) No set-up required.

Compatibility

Play audio from these devices with iTunes®:

- iPhone® 3GS
- iPad®
- Mac
- iPhone® 4
- iPad® 2
- PC with iTunes (10.1 or later)
- iPod touch®

Or play music with a variety of mobile apps on your portable devices. Click the AirPlay® icon and select your speaker.



As seen on a Mac and iPhone music app.

REMINDER: The SA-NS500 must be in NETWORK STANDBY MODE to play.

STEP 3: Introduce your speaker to your music.

For PC

- Start Windows Media Player.
(add iTunes library to WMP if desired)
- Select your song.
- Select Play to and select SA-NS300, SA-NS400 or SA-NS500.
- Enjoy amazing 360° sound on your speaker.

For Mac

- Click the Apple® AirPlay® icon on your device.
- Select SA-NS300, SA-NS400 or SA-NS500.
- Enjoy amazing 360° sound on your speaker.

Now that you're set up, feel free to add more devices to your system so you can enjoy Party Streaming™ throughout your house.

Scan the code to view the full line of HomeShare™ products.



For additional help and to view tutorial videos, please visit: esupport.sony.com. Type SA-NS300, SA-NS400 or SA-NS500 in the search bar.

For priority support, call 1-800-222-SONY (7669).