
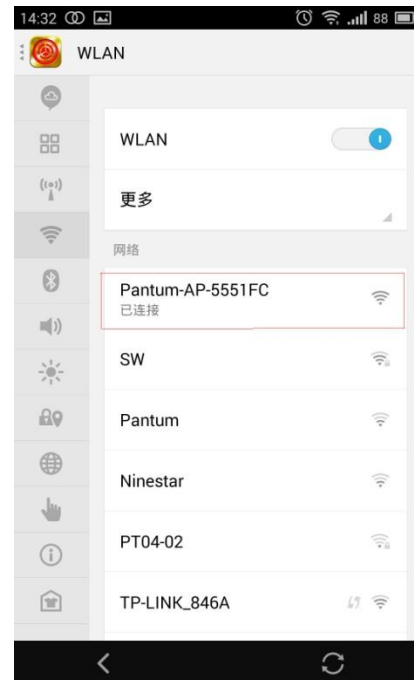


P2502W Wi-Fi Connecting Passwords Setting


Step1: Make sure the printer is power on.

Step2: Connect to Printer AP by mobile phone or PC.


- The SSID starts with “Pantum-AP”, and followed by number and character string.

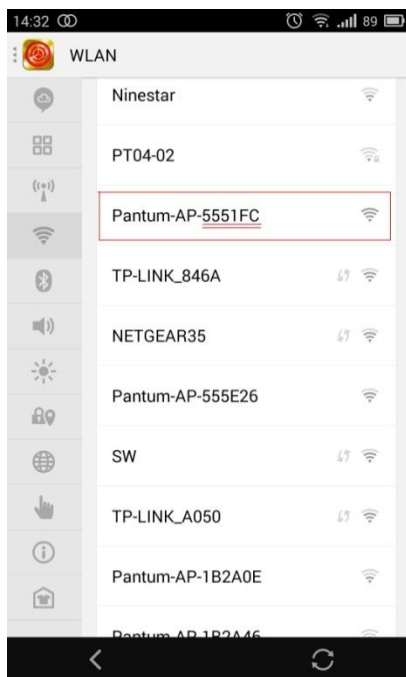

Step3: Visit the Printer Webpage via browser, Printer default address is 192.168.223.1.

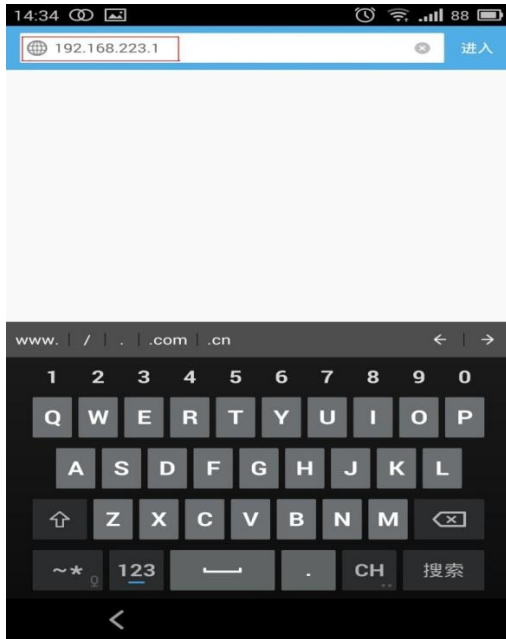

Step4 : Enter the printer webpage , choose "Log in" Tab.

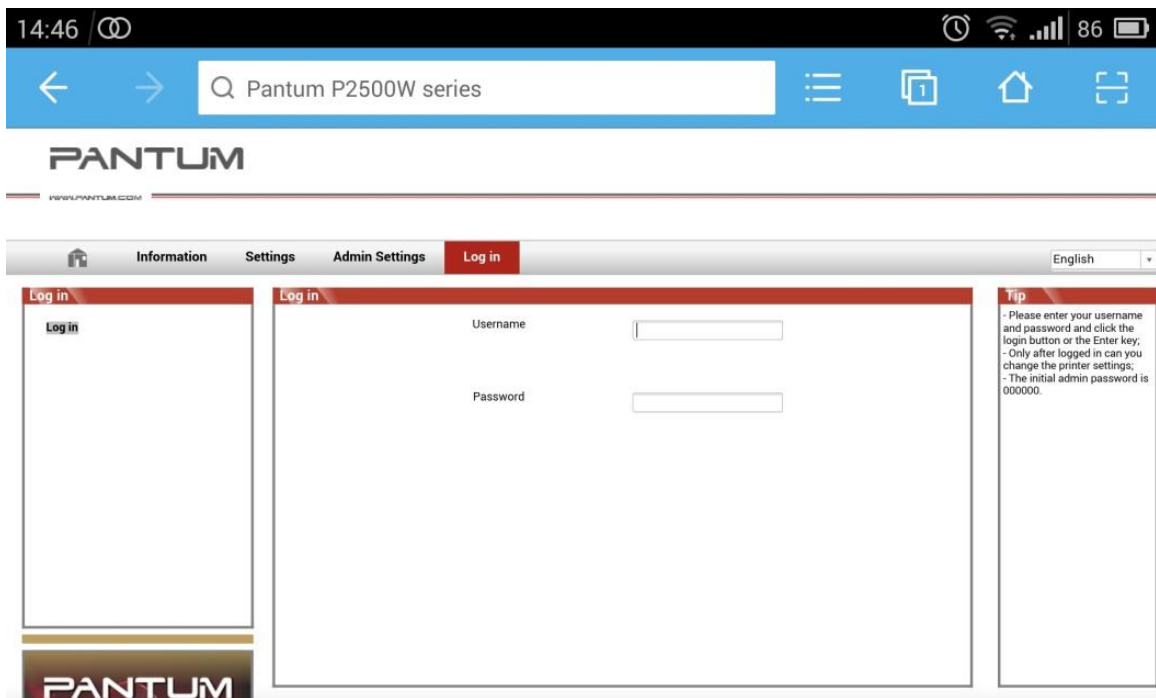


Step5: Input default user name: *admin*, Default password : *000000*.

And Log in.



Step6 : Select “settings” Tap → wireless settings → wireless Hotspot.

Then set wireless Parameter → Authentication → either WPA or WPA2.

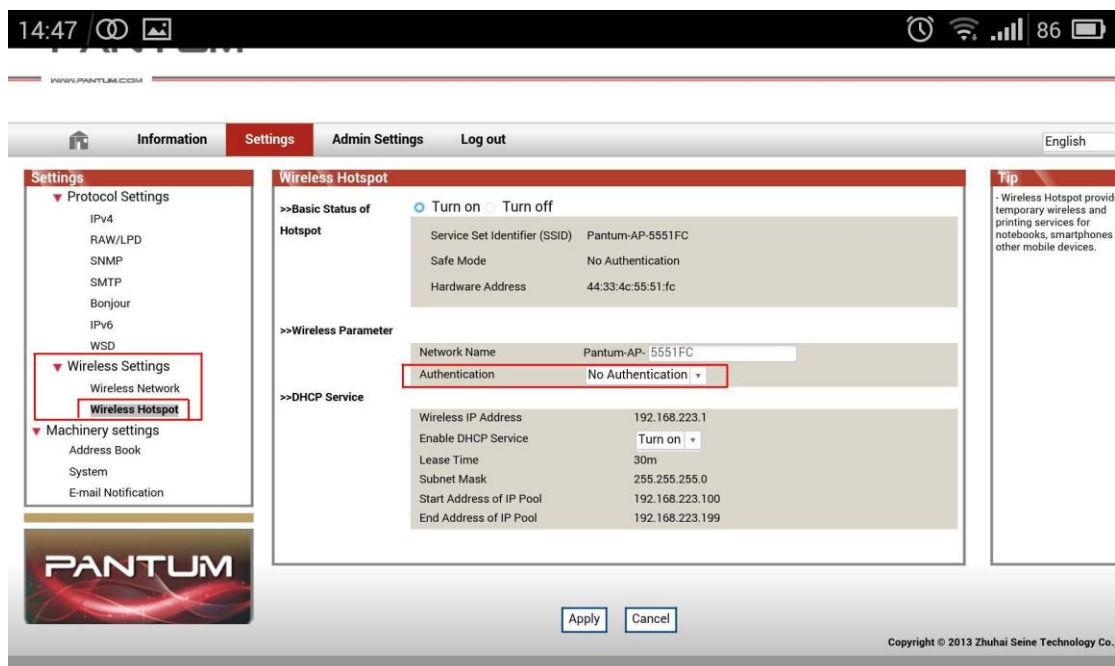

step7 : Set the password in that tab and then click “apply “.

14:47 [Icons] 86 [Battery]

WWW.PANTUM.COM

Information **Settings** Admin Settings Log out English

settings

- Protocol Settings
 - IPV4
 - RAW/LPD
 - SNMP
 - SMTP
 - Bonjour
 - IPv6
 - WSD
- Wireless Settings**
 - Wireless Network
 - Wireless Hotspot**
- Machinery settings
 - Address Book
 - System
 - E-mail Notification

Wireless Hotspot

>>Basic Status of Turn on Turn off

Hotspot

Service Set Identifier (SSID)	Pantum-AP-5551FC
Safe Mode	No Authentication
Hardware Address	44:33:4c:55:51:fc

>>Wireless Parameter

Network Name	Pantum-AP- 5551FC
Authentication	WPA2
Password	

>>DHCP Service

Wireless IP Address	192.168.223.1
Enable DHCP Service	Turn on
Lease Time	30m
Subnet Mask	255.255.255.0
Start Address of IP Pool	192.168.223.100
End Address of IP Pool	192.168.223.199

Apply Cancel

Copyright © 2013 Zhuhai Seine Technology Co., Ltd.

14:47 [Icons] 86 [Battery]

Information **Settings** Admin Settings Log out English

Wireless Hotspot

>>Basic Status of Turn on Turn off

Hotspot

Service Set Identifier (SSID)	Pantum-AP-5551FC
Safe Mode	No Authentication
Hardware Address	44:33:4c:55:51:fc

>>Wireless Parameter

Network Name	Pantum-AP- 5551FC
Authentication	WPA2
Password	12345678

>>DHCP Service

Wireless IP Address	192.168.223.1
Enable DHCP Service	Turn on
Lease Time	30m
Subnet Mask	255.255.255.0
Start Address of IP Pool	192.168.223.100
End Address of IP Pool	192.168.223.199

Apply Cancel

Copyright © 2013 Zhuhai Seine Technology Co., Ltd.

step8 : Disconnect printer and the printer webpage and then connect again, it will show the password you set in step7. It means the password is successfully changed. Use the same steps to modify also.



Remark:

Here is the way to recover factory default setting in case customer forgets the password:

- Turn off the printer power switch.
- Press the “cancel / continue” button until the printer turns on and enter standby mode. (It will take 5 seconds with pressing the button)

